

**PARTS AND
MAINTENANCE MANUAL
HAULSTER® POLICE VEHICLE
MODEL 898487**

Part No. 2702455 Rev. A



1 GENERAL INFORMATION

1.1 GENERAL INFORMATION



IMPORTANT!

THIS MANUAL WILL AID YOU IN THE SAFE OPERATION AND PROPER MAINTENANCE OF YOUR EQUIPMENT. READ MANUAL THOROUGHLY BEFORE ATTEMPTING OPERATION. IF ANY PORTION IS NOT CLEARLY UNDERSTOOD, CONTACT AN AUTHORIZED DEALER FOR CLARIFICATION.

To make sure you are fully aware of safety and service information, the following two symbols are used throughout this manual.



This symbol is used throughout the manual to alert you to information about unsafe actions or situations, and will be followed by the word DANGER, WARNING, or CAUTION. DANGER indicates immediate hazards that may result in severe injury or death. WARNING indicates unsafe actions or situations that may cause severe injury, death and/or major equipment or property damage. CAUTION indicates unsafe actions or situations that may cause injury, and/or minor equipment or property damage.

NOTE: This appears next to information or instructions which will help you operate and maintain your equipment the right way.



WARNING

The information and instructions included in this manual alert you to certain things you should do very carefully. If you do not, you could:

- hurt yourself or others
- hurt the next person who operates the equipment
- damage the equipment.

This manual contains essential operation and safety information and must remain with the unit at all times, within easy access of any operator.

Additional manuals are available through your dealer.

IMPORTANT!

THIS EQUIPMENT SHOULD NOT BE MODIFIED OR ADDED TO WITHOUT THE MANUFACTURER'S AUTHORIZATION.



WARNING

Altering this equipment in any manner which adversely affects the equipments operation, performance, durability or use, may cause hazardous conditions.

Direct any inquiries to:

Textron Turf Care and Specialty Products
Attn: Director of Engineering Services
P.O. Box 82409
Lincoln, NE 68501-2409 USA

SPECIFICATION INFORMATION

All information contained in this manual is the latest available at the time of printing. Textron Turf Care and Specialty Products reserves the right to make changes at any time without notice.

Whenever a name brand product is specified, an equivalent product may be used unless stated otherwise.

CHANGE OF OWNERSHIP OR ADDRESS

Textron Turf Care and Specialty Products makes every effort to keep owners informed of all safety related information. Therefore, changes in ownership and/or address should be reported to the manufacturer.

Your dealer has REGISTRATION CHANGE FORMS which will be filled out and filed by the dealer for his records, and a copy will be sent to the manufacturer.

DEALER INFORMATION

For your nearest dealer location write to:

Textron Turf Care and Specialty Products
Attn: Sales Coordinator
P.O. Box 82409
Lincoln, NE 68501-2409 USA

In the USA and Canada call 1-888-922-8873 (dealer information only).

TABLE OF CONTENTS

SECTION PAGE

1	General Information	Inside Front Cover
2	Identification	
2.1	Vehicle Identification	3
2.2	Serial & Model Number	3
2.3	Engine Serial Number	3
3	Specifications	
3.1	Vehicle	4
3.2	Dimensions	4
3.3	Capacities	4
3.4	Battery	4
3.5	Fuel	4
3.6	Brake Fluid	4
3.7	Engine Oil	4
3.8	Lubrication	4
3.9	Gear Ratios	5
3.10	Engine	5
4	Maintenance	
4.1	Maintenance	6
4.2	Maintenance Guide	6
4.3	Lubrication Chart	7
4.4	Bulbs and Flasher	8
4.5	Fuses	8
4.6	Engine Maintenance	8
4.7	Engine Access	9
4.8	Engine Oil Level	9
4.9	Battery	10
4.10	Jump Starting With Booster Battery	10
4.11	Engine Cooling System	10
4.12	Draining The Cooling System	11
4.13	Filling the Cooling System	11
4.14	Air Cleaner	12
4.15	Servicing Air Cleaner Element	12
4.16	Checking Air Cleaner Element	12
4.17	Installing Air Cleaner Element	12
4.18	Lubricating Brake Pedal Bushings	13
4.19	Automatic Transmission	13
4.20	Differential	13
4.21	Master Cylinder Access	14
4.22	Jacks, Jacking Locations And Using A Hoist	14
4.23	Changing The Rear Wheel	14
4.24	Changing The Front Wheel	14
4.25	Tire Replacement	15
4.26	Extended Storage	15
5	Torque Chart	16
6	Parts	
6.1	Engine Gaskets	18–19
6.2	Cylinder Head	20–21
6.3	Cylinder Block	22–23
6.4	Crankshaft, Pistons	24–25
6.5	Camshaft	26–27
6.6	Timing Belt & Cover	28–29
6.7	Intake Manifold/Throttle Body	30–31
6.8	PVC Valve	32
6.9	Exhaust Manifold	33
6.10	Oil Pump	34–35
6.11	Water Pump & Outlet, Thermostat	36–37
6.12	Starter	38–39
6.13	Drive Shaft, Torque Converter	40–41
6.14	Automatic Transmission	42–43

TABLE OF CONTENTS

SECTION PAGE

6.15	Automatic Transmission Pan, Dipstick & Gaskets	44–45
6.16	Transmission Tubes, Oil Pump, Solenoids & Shift Switch	46–47
6.17	Transmission Input Shaft & Clutch	48–49
6.18	Transmission Planetary Gears & Output Shaft	50–51
6.19	Brake Band & Shift Shaft	52–53
6.20	Transmission Valve	54–55
6.21	Main Frame	56–57
6.22	Platform Frame	58–59
6.23	Front Body	60–61
6.24	Engine Cover	62–63
6.25	Floormat, Insulation, Weatherstrip & Moldings	64–65
6.26	Rear Box & Sides (Side Opening)	66–67
6.27	Rear Spring	68–69
6.28	Front Fork	70–71
6.29	Steering Gear, Wheel & Horn	72–73
6.30	Throttle Pedal	74–75
6.31	Alternator & Governor	76–77
6.32	Hoses & Air Filter	78–79
6.33	Oil Fill & Filter	80–81
6.34	Shifter & Shift Cable	82–83
6.35	Front Brakes, Axle & Hub	84–85
6.36	Rear Brakes, Hub & Wheel Cylinder	86–87
6.37	Hydraulic Brake System	88–89
6.38	Master Cylinder & Brake Rod	90–91
6.39	Parking Brake	92–93
6.40	Seat Belt	94–95
6.41	Seat & Backrest	96–97
6.42	Fuel System	98–99
6.43	Exhaust System	100–101
6.44	Differential	102–105
6.45	Cooling System	106–107
6.46	Heater/Defroster	108–109
6.47	Electrical Components (Front)	110–111
6.48	Electrical Components (Main)	112–113
6.49	Decals	114–115
6.50	Headlights, Taillights & Turn Signals	116–117
6.51	Rotating Light	118–119
6.52	Turn Signal Switch	120–121
6.53	Front Shock Absorber	122
6.54	Wheel Measurement	123
6.55	Tires	124
6.56	Front Bumper	125
6.57	Cab	126–129
6.58	Steel Doors	130–133

2.1———VEHICLE IDENTIFICATION


NOTE: The following identification numbers MUST appear on all correspondence concerning this vehicle.

The Vehicle Identification Number (VIN), model number, and serial number are all printed on the Nameplate/Identification decal attached to the upper left portion of the kick panel.



Nameplate/Identification Decal


2.2———SERIAL & MODEL NUMBER

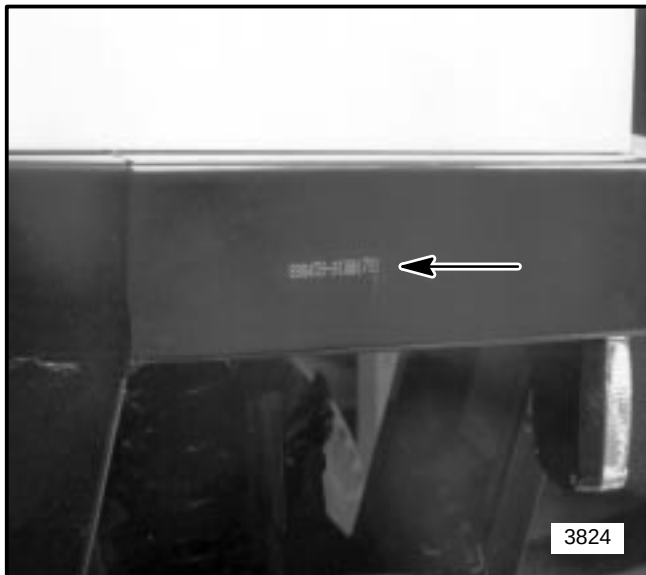

Serial Number And Model Number


2.3———ENGINE SERIAL NUMBER

The engine serial number is stamped into the right hand skirt of the cylinder block located directly below the air intake manifold.

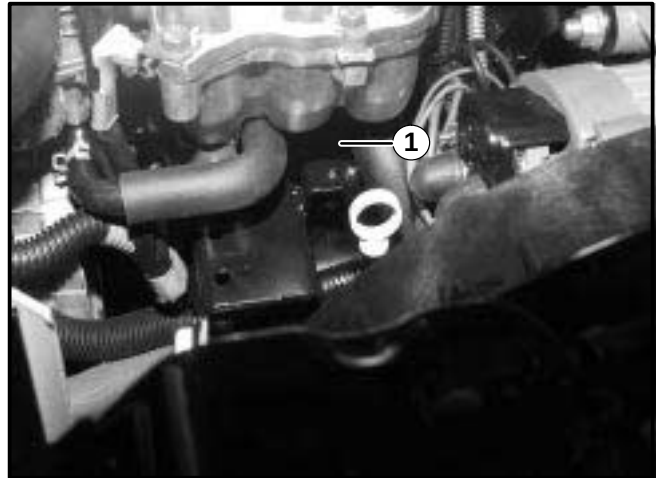

1. Stamped Engine Serial Number

A hand lettered engine serial number has been placed on the left side of the engine below the oil fill.

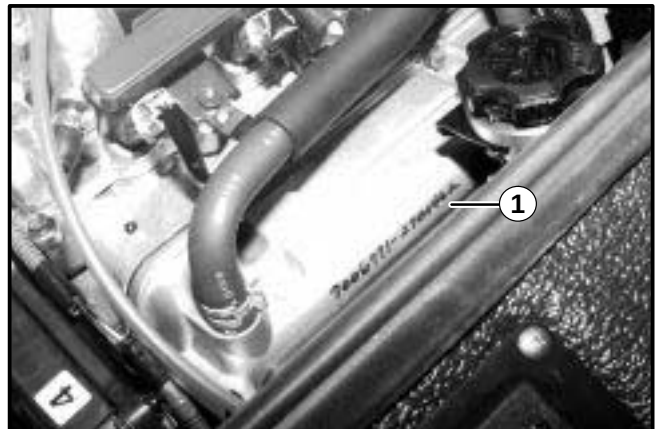

1. Hand Lettered Engine Serial Number

3 SPECIFICATIONS

3.1 ————— VEHICLE

All specifications subject to change without prior notification.

Your Haulster is powered by a 3-cylinder, gasoline powered, liquid cooled, four cycle engine, with a single overhead camshaft, 12 valve, electronic ignition, automatic choke. The block is cast iron and the cylinder head is aluminum.

Power is transmitted to the rear wheels by a electronically controlled three speed automatic transmission, driveshaft with two universal joints and a worm gear differential.

3.2 ————— DIMENSIONS

Rated Weight Capacity 1000 lbs. (455 kg)
Overall Height (w/cab) 70" (1.8 m)
Overall Length 111" (2.8 m)
Overall Width 48" (1.2 m)
Outside Clearance Circle 17' (5.2 m)
Inside Clearance Circle 36" (91 cm)
Weight (w/fuel and battery) 1490 lbs. (676 kg)
Wheelbase 78" (2.0 m)
Rear Wheel Tread 42" (1.1 m)
Tires 145R12 Radial, Load Range C

3.3 ————— CAPACITIES

Fuel Tank 7.5 gal. (28.5 L)
Transmission, automatic 3.7 qt. (4.2 L)
Differential (8.2:1 or 10.25:1) 12 oz. (0.4 L)
Cooling System 3.3 qts. (3.1 L)
Crankcase (including filter): 3.3 qts. (3.1 L)

3.4 ————— BATTERY

Volts 12
BCI Group Size 24
Cold Cranking Amps Minimum 420
Reserve Capacity Minutes Minimum 70
Ground Terminal Polarity NEGATIVE

3.5 ————— FUEL

Unleaded Gasoline 87 Octane or higher

NOTE: We DO NOT recommend the use of ALCOHOL bearing fuels in any of our products. The use of these fuels may create a potential safety hazard.



WARNING

Gasoline containing ALCOHOL can cause deterioration of some non-metallic materials in the fuel system.

Gasoline containing ALCOHOL will attract and hold moisture inside fuel tanks. Moisture may cause corrosion of metallic parts within the fuel system.

All fuel hoses **MUST** be inspected frequently and replaced if excessive stiffness, deterioration or fuel leakage is found.

Fuel leakage from a fuel system can occur while the system is in use, in transit or in storage. Such leakage can contribute to an explosion or fire, causing serious bodily injury or death.

NOTE: The use of alcohol bearing fuels can cause engine malfunction, particularly "vapor lock" at temperatures above 50° F (10° C).

3.6 ————— BRAKE FLUID

Use Type DOT (3)



WARNING

CLEAN MASTER CYLINDER FILLER CAP BEFORE REMOVING. CONTAMINATES MAY CAUSE BRAKE FAILURE. USE ONLY D.O.T. 3 FLUID FROM A SEALED CONTAINER. 825622

3.7 ————— ENGINE OIL

Recommended Viscosity SAE 10W40
(for all temperature ranges)

Use only oils recommended for service class SF, SG or SH.

NOTE: Using oil other than the service classes listed, or oil change intervals longer than recommended can reduce engine life. Damage to engines due to improper maintenance or use of incorrect oil quality and/or viscosity is not covered by the engine manufacturers warranty.

3.8 ————— LUBRICATION

Automatic Transmission Fluid Mercon/Dexron II
Differential Oil SAE EP 80-90 Gear Lube
Pressure Gun Lubricant Lithium Based

4 MAINTENANCE

4.1 MAINTENANCE



WARNING

When replacement parts are required, use only genuine Cushman parts or parts with equivalent characteristics including type, strength and material. Failure to do so may result in product malfunction and possible injury to the operator and/or bystanders.

NEVER attempt to perform service or maintenance functions on this vehicle if you are **UNTRAINED** or **UNAUTHORIZED**. Improper maintenance can cause hazardous conditions. See your authorized Cushman dealer for necessary maintenance and service.

When it is necessary to raise the vehicle for any repair or service, use jackstands to provide adequate support. **DO NOT** rely on hydraulic or mechanical jacks for support.

To avoid unexpected vehicle movement, **ALWAYS** set the parking brake and make sure the transmission is in **PARK** (out of gear) before working on a running engine.

ALWAYS replace immediately any warning decals that become damaged or hard to read.

To reduce risk of fire, always keep the engine free of excessive grease. If fuel system leakage is detected, repair leak immediately. Fuel is flammable and explosive under certain conditions. **ALWAYS** stop engine and do not allow open flames or sparks when performing any maintenance function involving fuel.

4.2 MAINTENANCE GUIDE

The following maintenance charts have been compiled as a general guideline for service intervals, based on hours of operation.

AS REQUIRED

Service air cleaner element
(Severe conditions may require more frequent service – refer to Air Cleaner section.)

DAILY

Check engine oil level
Check cooling system levels
Clean radiator intake screen, fins, & oil cooler fins
Check fuel level
Check engine for loose parts, damage or leaks
Check for engine noise or vibration

FIRST 50 HOURS OR 500 MILES

Perform previous services
Change Engine Oil*
Change Engine Oil Filter*

EVERY 100 HOURS OR 1000 MILES

Perform previous services
Check automatic transmission fluid level
Lubricate chassis (see lube chart)
Check tire pressure
Check differential oil level**
Check hydraulic brake fluid
Check brake adjustment
Check valve clearance first 100 hours then yearly

EVERY 200 HOURS OR 2000 MILES

Perform previous services
Check spark plugs for fouling
(regap or replace spark plugs as necessary)

EVERY 600 HOURS, 6000 MILES OR YEARLY

Perform previous services

Clean battery and terminals
 Replace fuel filter
 Repack front wheel bearings
 Repack rear wheel bushings
 Check starter motor brushes
 Check brake linings
 Change differential oil
 Change transmission oil
 Check alternator
 Check fuel hoses and clamps
 Drain and replace radiator coolant
 Check radiator hoses and clamps
 Check valve clearance

EVERY 1500 HOURS OF OPERATION

Replace timing belt after every 1500 hours of operation


See Specifications section for recommended lubricants and brake fluid.

✈ Depending on operating conditions, the engine oil and oil filter may need more frequent replacement to maintain engine performance and help avoid unnecessary repairs.

** The differential oil **MUST** be changed after the first 100 hours of operation.

4.3

LUBRICATION CHART

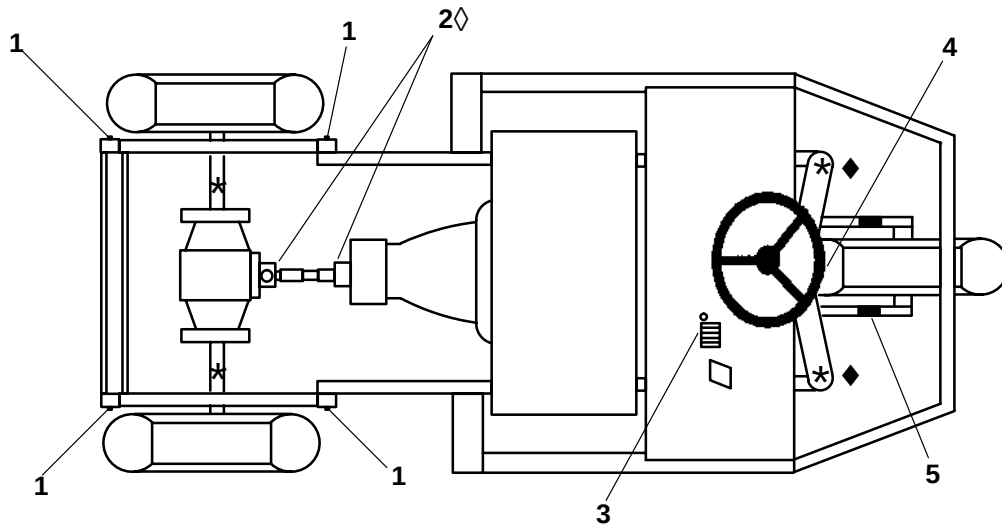

Lubricate all chassis fittings with lithium based lubricant every 100 hours or 1000 miles.

Ref. No.	Description	No. Req'd.	Ref. No.	Description	No. Req'd.
1	Rear Spring Shackles	6	4	Lower Fork Pivot Bearing	1
2	Drive Shaft	2	5	Leading Link Bushing	2
3	Brake Pedal Bellcrank Pivot Bushings	1			

◇ Too much lubricant can and will damage these seals.

✱ Indicates Jacking Locations

◆ Indicates Emergency Tow Line Attachment Locations


4 MAINTENANCE

4.4 BULBS, FUSES AND FLASHER


Description	Specification or Trade No.	Cushman Part No.
BULBS		
Ammeter light	1 CP No. 53	811953
Headlight	65-45 Watt No. H6545	837303
Taillight	32-4 CP No. 1157	822049
Turn Signal, front	21 CP No. 1156	837670
Oil pressure warning light	2 CP No. 1893	828473
EMS light	2 CP No. 1893	828473
Speedometer light	1 CP No. 53	811953
Water temperature gauge light	1 CP No. 53	811953
Fuel gauge light	1 CP No. 53	811953
FUSES	20 Amp	826000
	30 Amp	833038
FLASHER , turn signal		825501

4.5 FUSES

Fuses are located on the kick panel just below the instrument panel. They protect the lighting circuits and accessory circuits such as windshield wiper motor and heater/defroster blower. Remove fuses by pulling straight out.

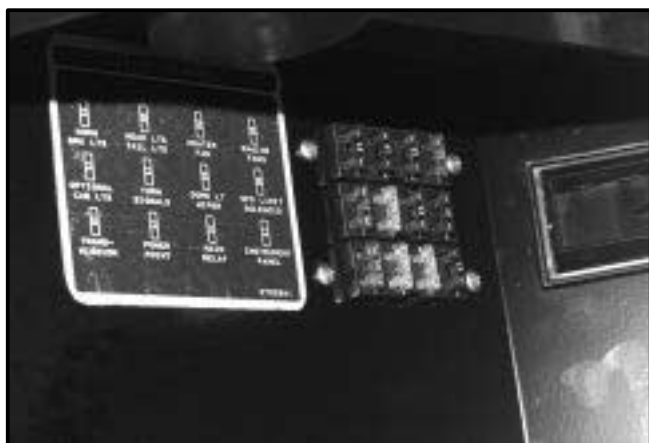

Fuse Block On Kick Panel

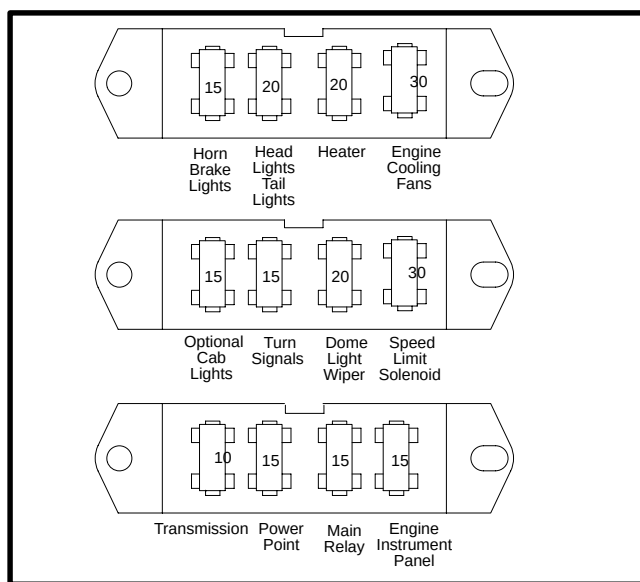

Fuse Box Panel

4.6 ENGINE MAINTENANCE

The following maintenance information covers basic engine service only. For more elaborate service and necessary repairs, we recommend you contact your authorized Cushman dealer.

Always keep your engine clean. If dirt has accumulated on the engine, it should be washed with a non-flammable solvent or a strong detergent. When washing becomes necessary, it can be carried out simultaneously with servicing and will maintain cool and efficient operation. In order to maintain reliable service from your engine, a regular check-up schedule should be carried out. Proper maintenance will prolong the engines life and avoid premature overhaul.

NOTICE

- DO NOT wash the engine while it is running. Water vapor may enter the engine through the air intake causing serious engine damage.

4.7 ENGINE ACCESS




WARNING

NEVER remove or install the engine cover while the engine is running. The engine cover is a machinery guard and its removal exposes you to moving parts. Keep hands, hair and loose clothing away from flywheel, radiator cooling fan, alternator fan, belts, pulleys, air intake, etc.

The seat cushion may be raised by pivoting forward to provide engine access for minor service work.


For major repair, the engine cover assembly may be removed. To remove engine cover, loosen the engine cover latch, pivot the engine cover forward and lift upward.

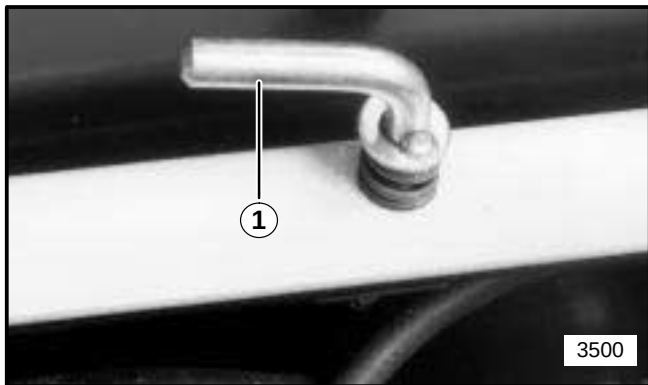

1. Engine Cover Latch

When replacing the cover, make sure the retaining tabs, located at the front corners of the engine cover are

inserted into the slots in the floorboard.

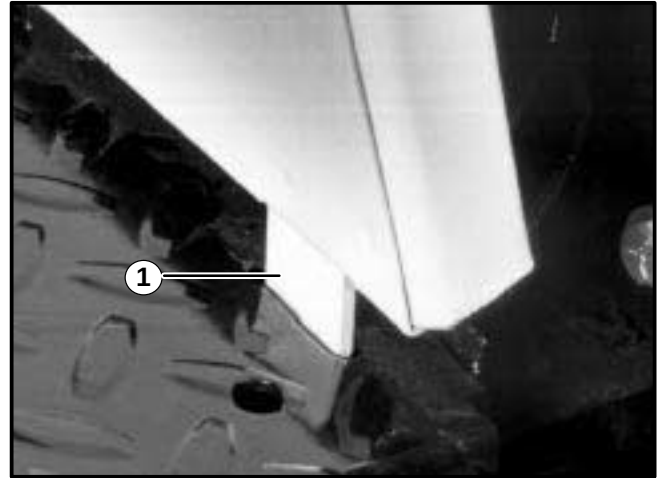


1. Engine Cover Retaining Tab

Resecure the engine cover latch.

Failure to follow instructions will allow the seat and engine cover assembly to move out of proper position.

4.8 ENGINE OIL LEVEL

NOTE: When checking engine oil level, BE SURE vehicle is resting on a level surface. A correct reading can not be made if the vehicle is not on a level surface.

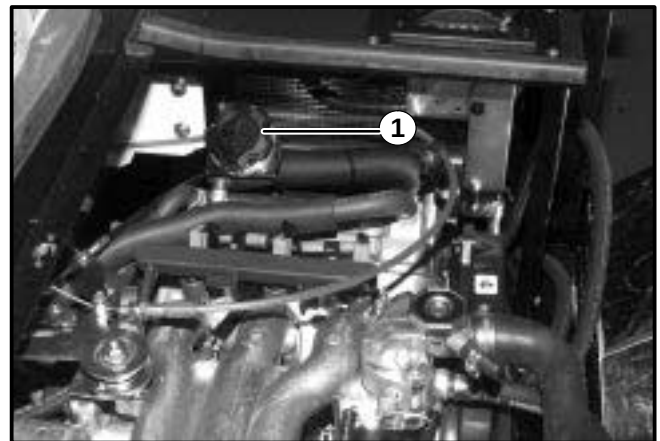

1. Engine Oil Fill

The engine oil level should be between the two marks (FULL and ADD) marks on the dipstick. Either too much OR too little oil can cause the engine to overheat. Engine overheating can cause severe engine damage.

4 MAINTENANCE

4.9 BATTERY



CAUTION

UNTRAINED or UNAUTHORIZED persons should **NEVER** attempt to service or recharge the battery in this vehicle.

Battery electrolyte is an acidic solution and should be handled with care. If electrolyte is spilled or splashed on any part of the body, immediately flush the exposed area with liberal amounts of water and obtain immediate medical aid.

ALWAYS wear adequate eye protection when working on or around a vehicle battery.

The battery is located in the side opening box located at the rear of the vehicle.

The battery in this vehicle is a “low maintenance”. Add distilled water whenever required.

NOTE: Keep the top of battery clean and free of corrosion by washing with a solution of baking soda and water or ammonia and water. Rinse with clean water. Terminals with heavy corrosion should be removed and cleaned with solution. Replace terminal and resecure.

To contact your nearest Trojan battery dealer for warranty or other information, call Trojan battery at 1-800-423-6569 and ask for customer service.

4.10 JUMP STARTING WITH BOOSTER BATTERY



WARNING

DO NOT allow open flames or sparks near a battery when connecting for jump starting or while recharging the battery with a charger

Hydrogen gas is produced during the charging process and can be very explosive. Provide adequate ventilation to prevent possible explosion.

Both booster battery and discharged battery should be treated carefully when using jumper cables.

Follow **exactly** the procedure outlined, being careful not to cause sparks.

1. Apply parking brake, put transmission in PARK and turn off all electrical loads.
2. Attach one end of one jumper cable to the positive terminal of the booster battery and the other end to the positive terminal of the discharged battery. **DO NOT permit vehicles to touch each other at any time.**
3. Attach one end of remaining cable to the negative terminal of the booster battery and the other end to a good ground on the vehicle or engine, away from the discharged battery. **DO NOT lean over the battery when making this connection.**
4. Reverse this sequence **exactly** when removing the jumper cables.

NOTE: This is a negative ground wiring system, reversing battery connection **WILL** damage the alternator rectifier.

Booster batteries used for starting **MUST** be connected with correct polarity.

Vehicle battery cables should be disconnected before using a “Fast Charger”.

4.11 ENGINE COOLING SYSTEM



WARNING

The cooling fan is thermostatically controlled and may start at any time. **DO NOT** attempt to service the fan without first disconnecting it.



WARNING

KEEP HANDS CLEAR, ELECTRIC FAN MAY ENGAGE WITHOUT WARNING, EVEN WITH IGNITION OFF!

833607

NEVER attempt to clean or service the cooling system with the engine running.

ALWAYS allow the engine to “cool” before servicing the cooling system.

The vehicle is equipped with a cooling radiator and electric fan located below the right side (from operators position) of the engine cover. To provide proper engine cooling:


- **DO NOT** obstruct or cover the air intake screen in front of the radiator.

- ALWAYS keep the screen, radiator and oil cooler fins clean.

NOTE: Clean the radiator and oil cooler fins with compressed air. If water is used to clean the radiator or oil cooler use compressed air to blow ALL the water from the radiator or oil cooler fins. Water left between the fins will collect dirt and clog the radiator.

Keep the proper amount of coolant in the cooling system.

Check coolant level in radiator and reservoir bottle. The coolant should be up to the filler port of the radiator, and between the FULL and LOW lines in the reservoir bottle. Level should not be higher than the FULL line.

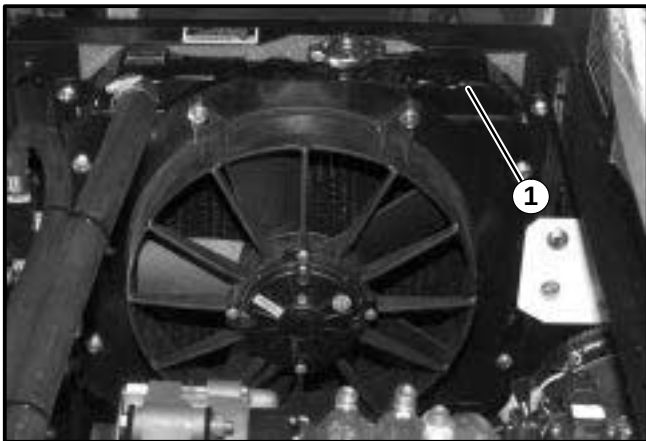

1. Radiator

NOTE: If the coolant level is low, check for leaks and repair as necessary. If additional coolant is required, a 50/50 mixture of a good grade of ethylene glycol antifreeze and clean water is recommended. This will provide protection to -34°F (-37°C).

It is extremely important that the antifreeze and water be mixed in a separate container before adding to radiator. NEVER add straight antifreeze to the radiator. The mixture must NEVER be more than 50% antifreeze.

4.12— DRAINING THE COOLING SYSTEM

NOTE: Drain the cooling system every 600 hours and refill with a 50/50 mixture of water and ethylene glycol antifreeze.

Drain the cooling system using the following procedure:



WARNING

DO NOT attempt to remove radiator cap until engine is allowed to “cool”. Radiator contents are under pressure which can cause spraying of scalding hot water. Hot water spray can cause serious injuries.

1. Remove radiator cap when engine is cool. Disconnect radiator cooling fan. Open drain cock on bottom of radiator.



WARNING

TO PREVENT POSSIBLE SEVERE BURNS TO YOU OR OTHERS. DO NOT REMOVE PRESSURE CAP WHEN HOT. CONTENTS UNDER PRESSURE. CHECK AND ADD FLUID AT RESERVOIR.

832130

2. Remove bottom radiator hose from radiator to completely drain engine block.
3. Disconnect hose from water overflow tank and drain tank. Close radiator drain cock tightly and reinstall overflow tank hose when both have finished draining.


NOTICE

- ALWAYS recycle or dispose of used antifreeze in a responsible manner. Used antifreeze can be harmful to the environment.

4.13— FILLING THE COOLING SYSTEM

1. Fill radiator to the base of the filler neck and the overflow tank to the “FULL” mark with a 50/50 water and antifreeze mixture. Reinstall reservoir tank cap.
2. Loosen the air bleeding bolt (shown below) until coolant comes out through the air bleeding hole of bolt. Resecure the bleeding bolt.

4 MAINTENANCE

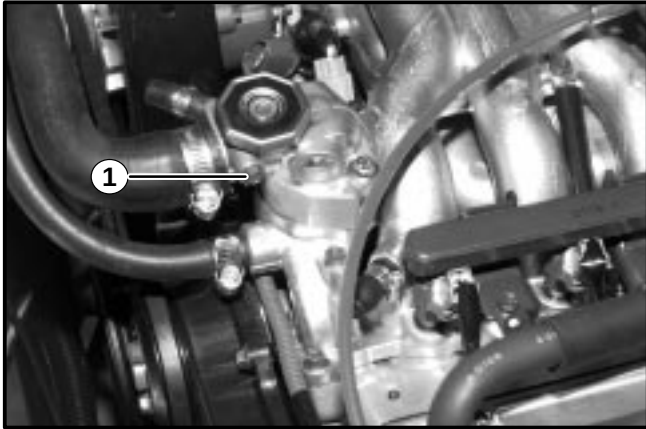


1. Air Bleeding Bolt

3. Run engine with radiator cap removed, until upper radiator hose is warm (thermostat has opened).
4. With engine idling, add coolant mixture to radiator until level reaches the bottom of the filler neck. Install radiator cap. Reconnect radiator cooling fan.

4.14 — AIR CLEANER

This is a large capacity dry type air cleaner with a replaceable paper element. The air cleaner assembly is located under the right side cover panel directly behind the cab.

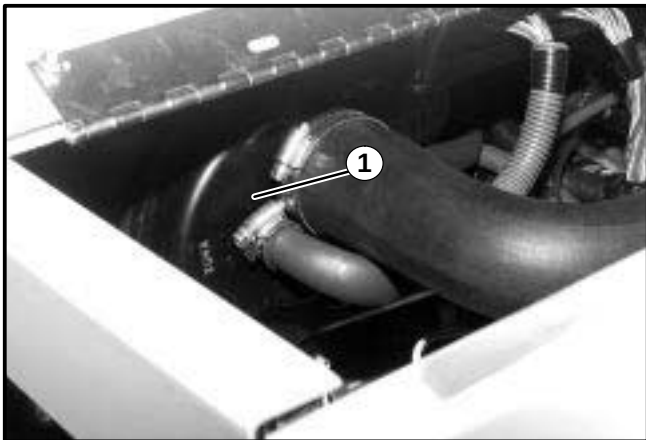

1. Air Cleaner Assembly

4.15 — SERVICING AIR CLEANER ELEMENT

NOTE: DO NOT use a damaged air cleaner assembly.

DO NOT use bent or damaged air cleaner elements.

Use **ONLY** Cushman approved air cleaner replacement elements.

We recommend the air cleaner element be replaced before engine performance is affected. This may occur at 250 hours of service in very dirty operating conditions or at 500 hours in normal operating conditions.


We **DO NOT** recommend cleaning the air cleaner element because of the possibility of damaging the element.

4.16 — CHECKING AIR CLEANER ELEMENT

Check the element for damage, pin holes, etc. by placing a light source such as a flashlight inside the element.

4.17 — INSTALLING AIR CLEANER ELEMENT


1. Loosen wing nut screw securing air cleaner halves and remove element.
2. Clean dust from inside of housing with damp cloth, making sure dust **DOES NOT** enter the air intake.
3. Check all gaskets to be sure they are **NOT** damaged.
4. Insert element in housing.
5. Apply a light grease film to the wing nut screw.
6. Resecure the housing halves with the wing nut screw.

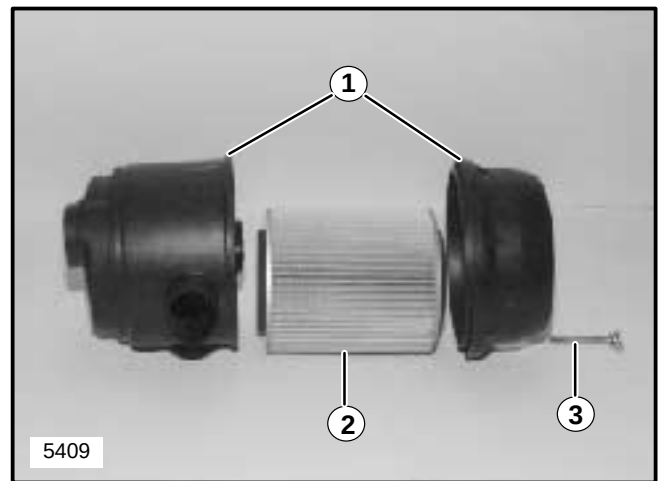

1. Air Cleaner Halves
2. Air Cleaner Element
3. Wing Nut Screw

4.18 — LUBRICATING BRAKE PEDAL BUSHINGS

The pedal pivot lubrication fitting is located just below the hole in the floorboard, near the pedal. Refer to following illustration.

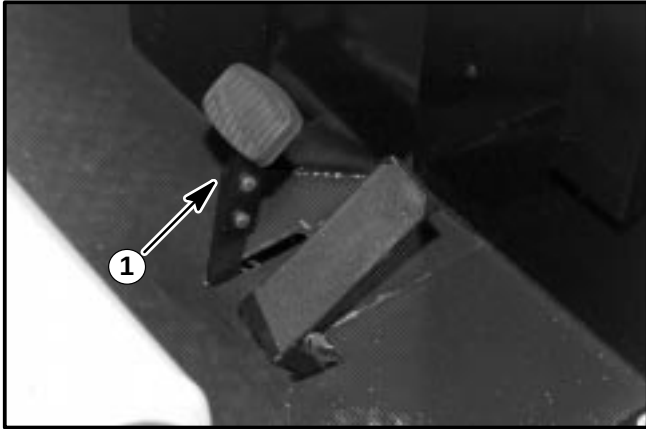


1. Lubrication Access Hole

4.19 ——— AUTOMATIC TRANSMISSION

The transmission filler tube and dipstick are located beneath the left access panel directly behind the cab.

TRANSMISSION FLUID LEVEL
CHECK UNDER THIS COVER
– REFER TO SERVICE MANUAL
FOR PROPER PROCEDURE

840395

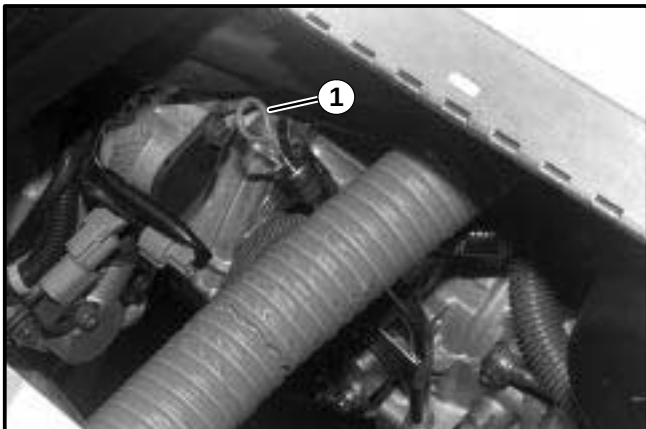


1. Transmission Dipstick

The engine must be running with the transmission in PARK (or neutral) when checking the transmission fluid

level. The level should be kept between the two marks on the dipstick. Capacity is 3.7 quarts (4.2L). DO NOT over-fill transmission.


The drain plug is on the bottom of the transmission case in the left rear corner of the pan.

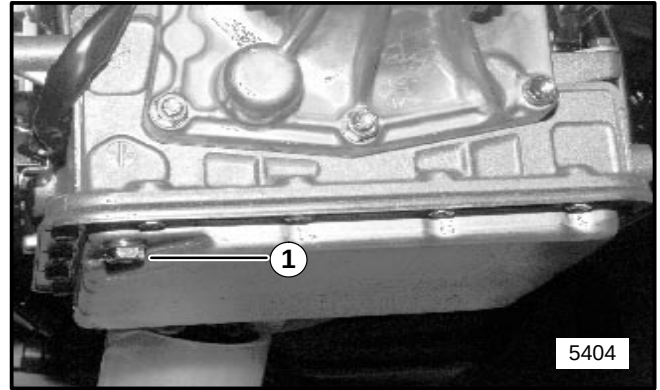

1. Transmission Drain Plug

4.20 ——— DIFFERENTIAL

The worm gear differential filler plug and drain plug are shown in the following photograph. Oil should always be up to the level of the filler hole.

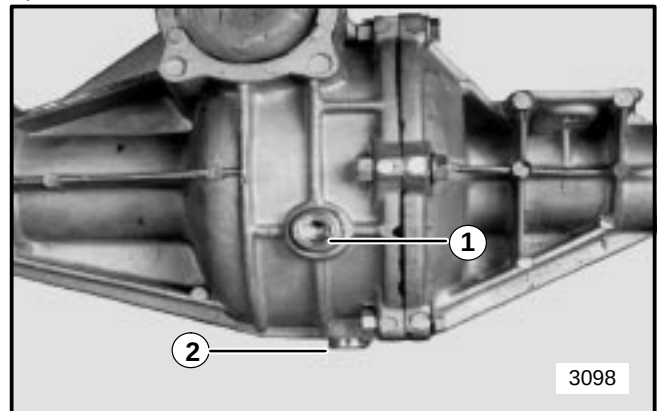

1. Filler Plug
2. Drain Plug


IMPORTANT!

DIFFERENTIAL LUBRICANT **MUST** BE CHANGED
ACCORDING TO THE MAINTENANCE GUIDE
SCHEDULE TO AVOID EXPENSIVE REPAIR.

4 MAINTENANCE

4.21—— MASTER CYLINDER ACCESS

The master cylinder reservoir is located under the floorboard with an access hole shown below. Fill the reservoir with DOT (3) brake fluid.

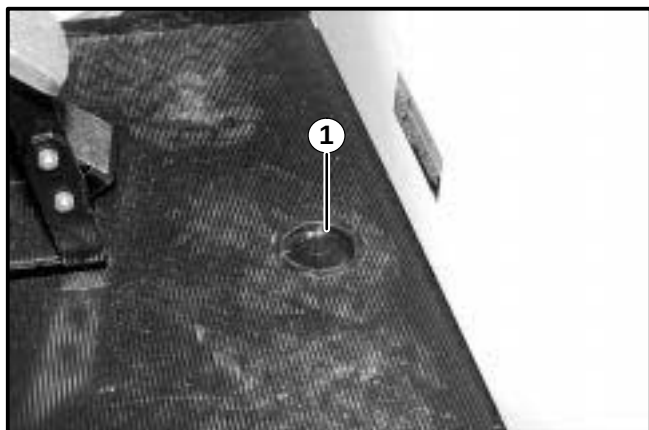

1. Master Cylinder Access

4.22—— JACKS, JACKING LOCATIONS AND USING A HOIST

A scissors or hydraulic type jack with a 1 1/2 ton (minimum) capacity that can be lowered to 3 3/8" (86 mm) is required to jack up the vehicle.

The jacking locations are shown on the Chassis Lubrication Chart. Raise the vehicle **ONLY** enough to place jackstands under vehicle when performing required maintenance.

NOTE: To prevent damage to the vehicle or attached accessory, NEVER use a hoist to raise one corner of the vehicle. ALWAYS raise BOTH front or rear corners equally.

4.23—— CHANGING THE REAR WHEEL

1. Raise rear of vehicle with a hydraulic jack and place on jackstands.
2. Remove and retain the wheel retaining nuts and remove wheel from the hub.
3. Reinstall the wheel with the valve stem on the outside of the wheel.
4. Torque the wheel retaining nuts to 70 to 100 ft. lbs. (95 to 140 N·m).

4.24—— CHANGING THE FRONT WHEEL

IMPORTANT!


BE SURE TO READ THIS ENTIRE SECTION BEFORE ATTEMPTING FRONT TIRE REMOVAL.

To remove the front wheel and hub:

1. Remove the cotter pins, washers and castle nuts attaching the brake anchor link to the front fork and brake arm.

NOTE: DO NOT disconnect the front brake hose.


2. Pull the link straight off the mounting studs. Retain the bushings located in the holes at each end of the brake anchor link.

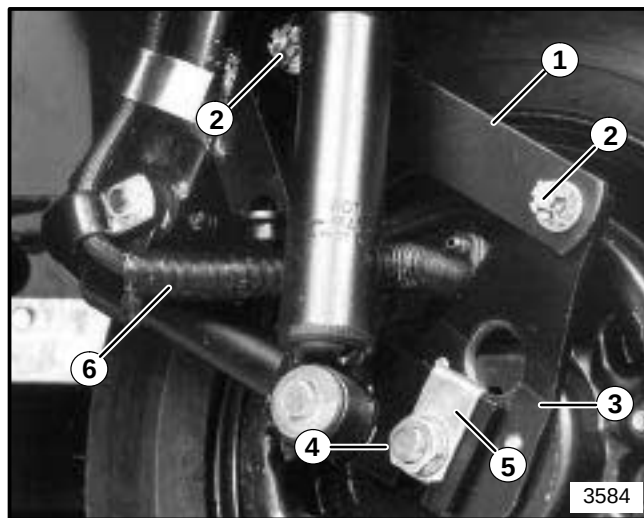

Front Fork (Right Side)

1. Brake Anchor Link
2. Cotter Pin, Washer And Castle Nut
3. Brake Arm
4. Axle Nut
5. Axle Lock
6. Brake Hose And Protector

3. Disconnect the bottom of the LEFT shock absorber. Retain and note the position of the attaching hardware.
4. Loosen the axle nuts on both sides of the axle until the axles locks (both sides) will clear the fork arms and lower the entire axle, brake and wheel assembly from the fork.

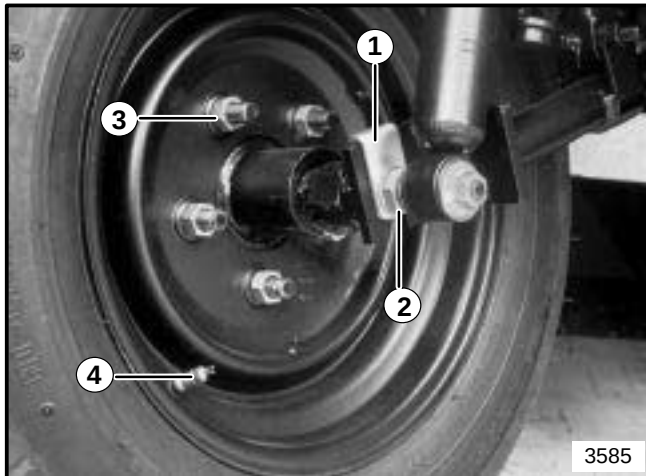

Front Fork (Left Side)

1. Axle Lock
2. Axle Nut
3. Wheel Retaining Nut
4. Valve Stem

5. Support the brake assembly so that the brake hose and protector will not be damaged.
6. Remove the wheel retaining nuts and remove the wheel from the hub.

To reinstall the front wheel and hub:

1. Reassemble the wheel to the hub (be sure valve stem is on side opposite the brake). Torque the wheel retaining nuts to 70 to 100 ft. lbs. (95 to 140 N·m).
2. Reinstall the hub assembly into the fork with the two (2) large washers at either end of the axle inside the fork arms, and the axle locks hooked over the top of the fork arms. Torque the axle nuts to 70 to 100 ft. lbs. (95 to 140 N·m).
3. Reconnect the left shock absorber.
4. Reinstall the brake anchor link using **NEW** cotter pins to secure the castle nuts. Make sure the bushings are in place in both ends of the brake anchor link



CAUTION

The brake link bushings **MUST** be in place in brake anchor link and the link reinstalled to prevent the brake stator and drum from turning when the brakes are applied. Turning could result in brake hose damage and sudden brake failure.

ALWAYS use **NEW** cotter pins when reinstalling brake anchor link castle nuts to make sure they are secure.

Your vehicle is equipped with 145 R 12 radial tires (load range C) mounted on 4.80 x 12 rims. Always keep tires inflated according to the following specifications.

Cold Inflation Pressure

Front	32 PSI (220 kPa)
Rear	32 PSI (220 kPa)

NOTE: NEVER exceed the maximum pressure indicated on the tire.

Improper inflation will considerably shorten the life of your tires. Fill tires with care. Use a pressure gauge before connecting an air hose to a partly inflated tire. Due to the low air volume needed, over-inflation may be reached in a matter of two or three seconds.

4.25 TIRE REPLACEMENT

Always use replacement tires equivalent to or exceeding original equipment specifications.

4.26 EXTENDED STORAGE

If the vehicle must be stored with fuel in the fuel system, **DO NOT** store the vehicle in an enclosure with open flame (Example: Furnace or water heater pilot light).



WARNING

Storing unit in an enclosed area with an open flame may result in an explosion or fire.

Perform the following steps when putting the vehicle back into operation after an extended storage period exceeding 30 days:

- Fill the vehicle fuel tank.
- Check engine oil level.
- Check engine for loose parts.
- Start the engine and check for fuel or oil leaks and check the operation of all controls.

TORQUE CHART 5

TORQUE SPECIFICATIONS HEX HEAD CAP SCREWS

The torque values shown should be used as a general guideline when specific torque values are not given.

U.S. Standard Hardware

Grade	Shank Size (Diameter in inches, fine or coarse thread)														
		1/4	5/16	3/8	7/16	1/2	9/16	5/8	3/4	7/8	1	1 1/8			
SAE grade 5 *	ft.-lbs.	9	18	31	50	75	110	150	250	378	583	782			
	N·m	12	24	42	68	102	150	203	339	513	790	1060			
SAE grade 8 **	ft.-lbs.	13	28	46	75	115	165	225	370	591	893	1410			
	N·m	18	38	62	108	156	224	305	502	801	1211	1912			
Flangelock Screw w/ Flangelock Nut	ft.-lbs.		24	40											
	N·m		33	54											

* Grade 5 marking –  Minimum commercial quality (Lower quality not recommended).

** Grade 8 marking – 

Metric Standard Hardware

Grade	Shank Size (Diameter in millimeters, fine or coarse thread)														
		M4	M5	M6	M7	M8	M10	M12	M14	M16	M18	M20	M22	M24	M27
Grade 8.8*	ft.-lbs.	1.5	3	5.2	8.2	13.5	24	43.5	70.5	108	142	195	276	353	530
	N·m	2	4	7	11	18	32	58	94	144	190	260	368	470	707
Grade 10.9**	ft.-lbs.	2.2	4.5	7.5	12	18.8	35.2	62.2	100	147	202	275	390	498	747
	N·m	3	6	10	16	25	47	83	133	196	269	366	520	664	996
Grade 12.9 ***	ft.-lbs.	2.7	5.2	8.2	15	21.8	43.5	75	119	176	242	330	471	596	904
	N·m	3.6	7	11	20	29	58	100	159	235	323	440	628	794	1205

* Grade 8.8 marking – 


** Grade 10.9 marking – 

*** Grade 12.9 marking – 

SERVICE AND MAINTENANCE RECORD

[illegible]


6.1 ENGINE GASKETS

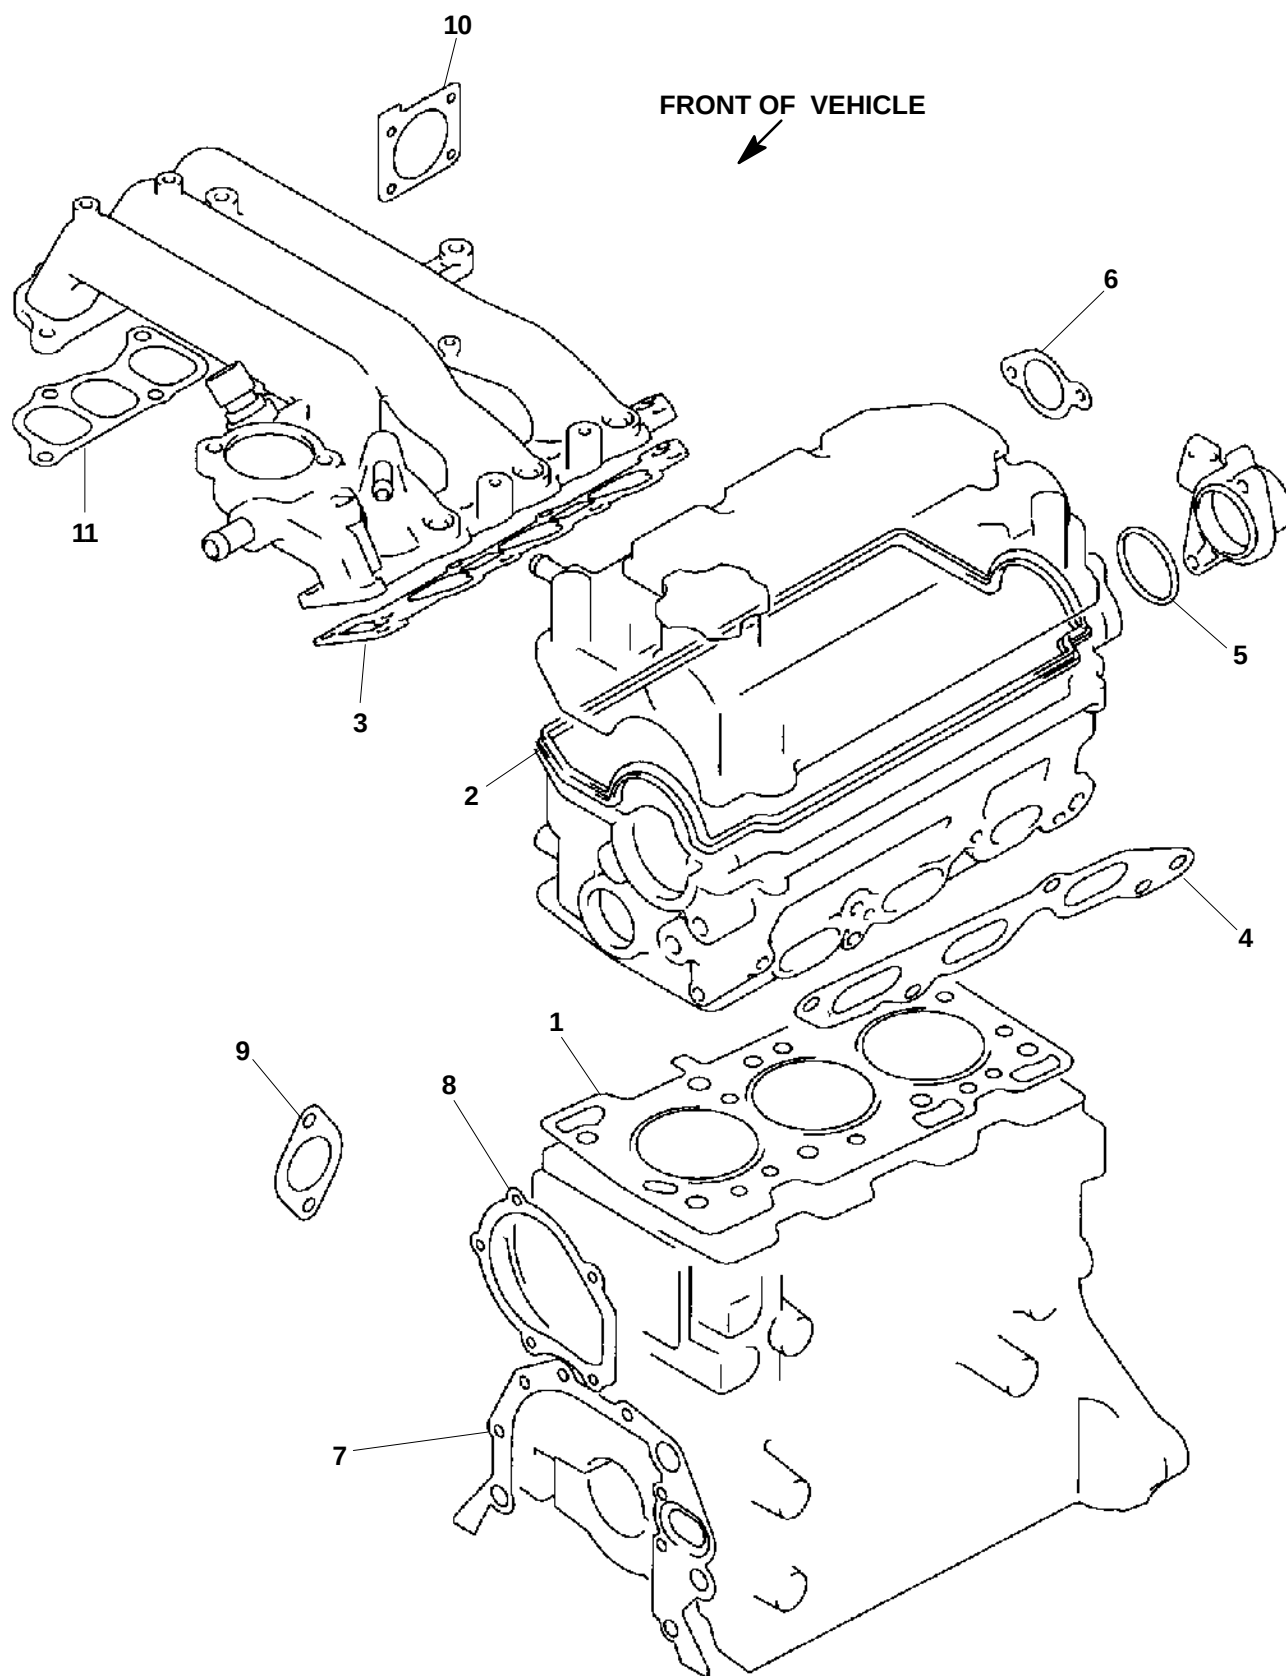

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701775	Gasket set	1	
2	2701776	•Gasket, cylinder head	1	
3	2701795	•Gasket, cylinder head cover	1	
4	2701796	•Gasket, intake manifold	1	
5	2701797	•Gasket, exhaust manifold	1	
6	2701798	•O' ring, cam position sensor	1	
7	2701799	•Gasket, cylinder plate	1	
8	2701800	•Gasket, oil pump case	1	
9	2701801	•Gasket, water pump	1	
10	2701802	•Gasket, water inlet	1	
11	2701803	•Gasket, throttle body	1	
	2701804	•Gasket, surge tank	1	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.


6.2 CYLINDER HEAD

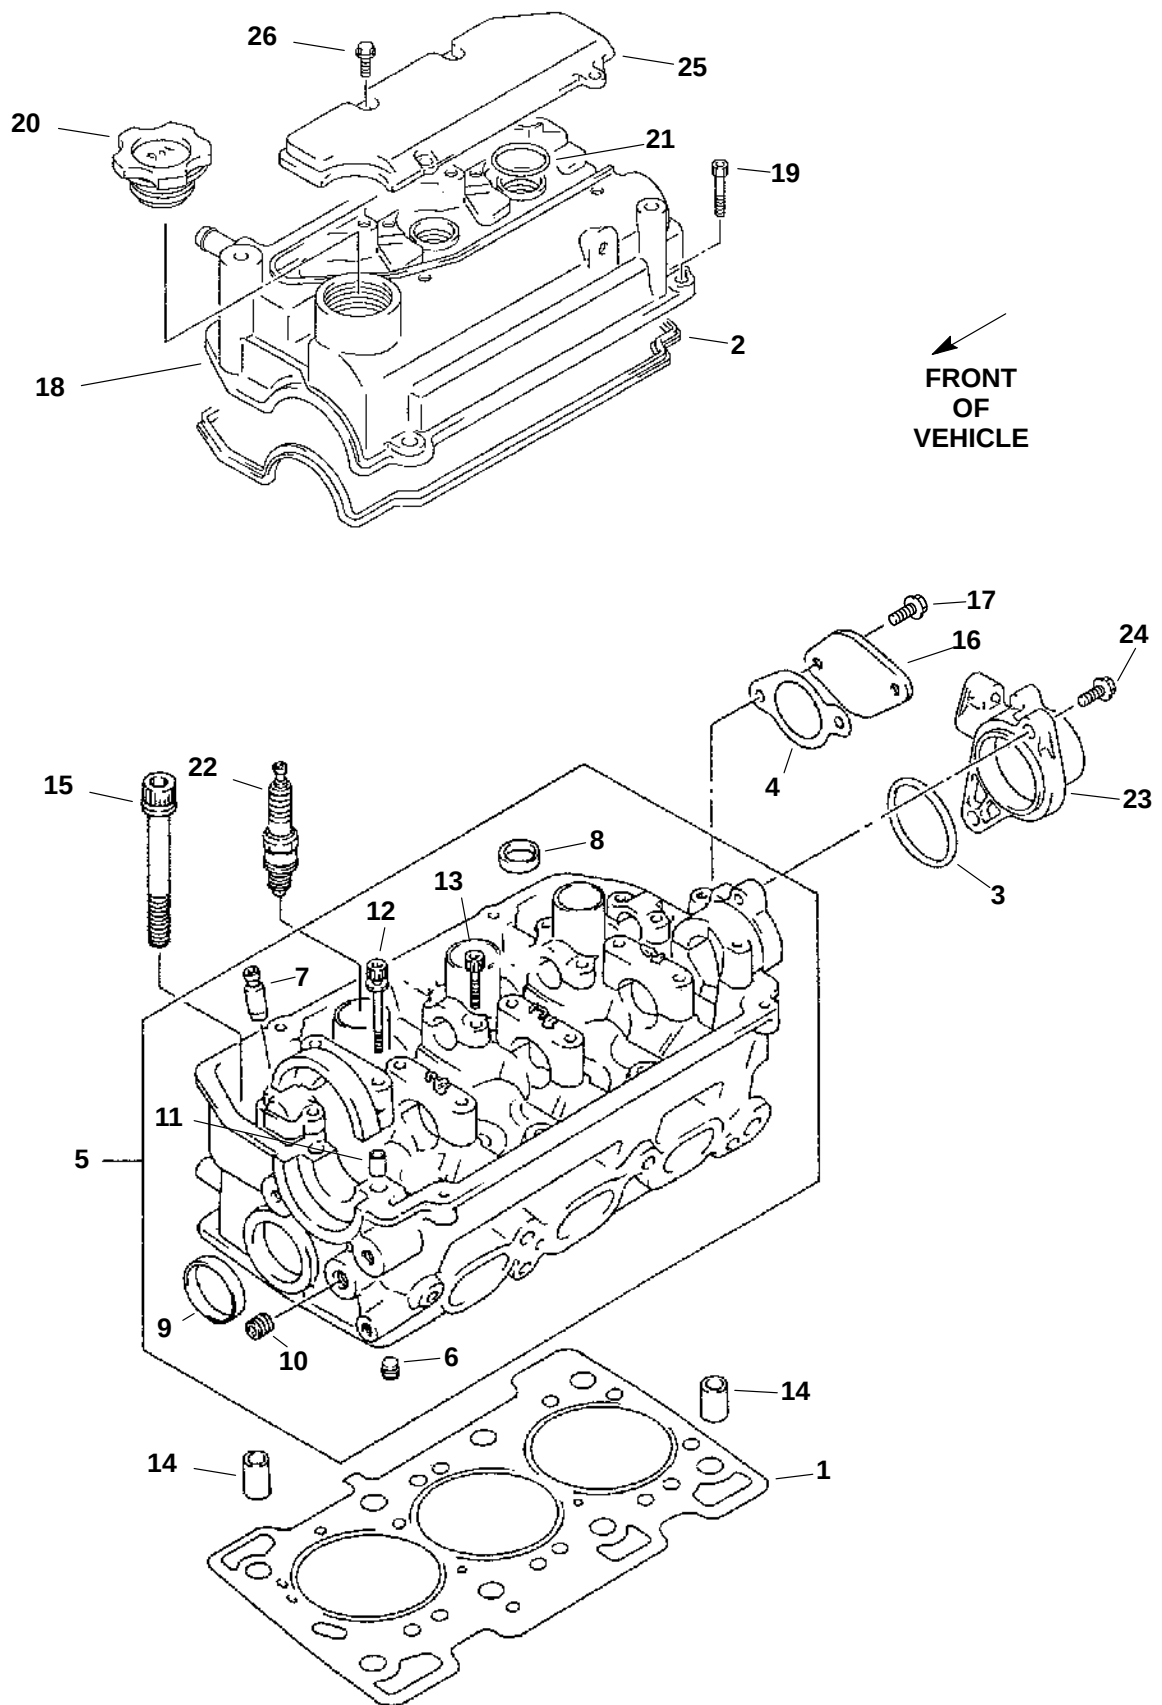

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701776	Gasket, head	1	
2	2701795	Gasket, valve cover	1	
3	2701798	O-ring, distributor drive	1	
4	2701799	Gasket	1	
5	2701813	Head, cylinder	1	
6	2701814	•Plug, oil venturi	1	
7	2701815	•Guide, valve	12	
8	2701816	•Seal	2	
9	2701819	•Seal	1	
10	2701820	•Plug	4	
11	2701821	•Pin	10	
12	2701822	•Bolt	11	
13	2701823	•Bolt	13	
14	2701824	Pin	2	
15	2701825	Bolt, cylinder head	8	
16	2701826	Plate, cylinder head	1	
17	2701827	Screw	2	
18	2701828	Cover, cylinder head	1	
19	2701829	Bolt	4	
20	2701830	Cap, oil filler	1	
21	2701831	O-ring, spark plug pipe	3	
22	2701832	Plug, spark Nippon Denso XU22EPR-U	3	
23	2701833	Case, distributor	1	
24	2701834	Bolt	2	
25	2701835	Cover, cylinder	1	
26	2701836	Bolt	4	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.


6.3 CYLINDER BLOCK

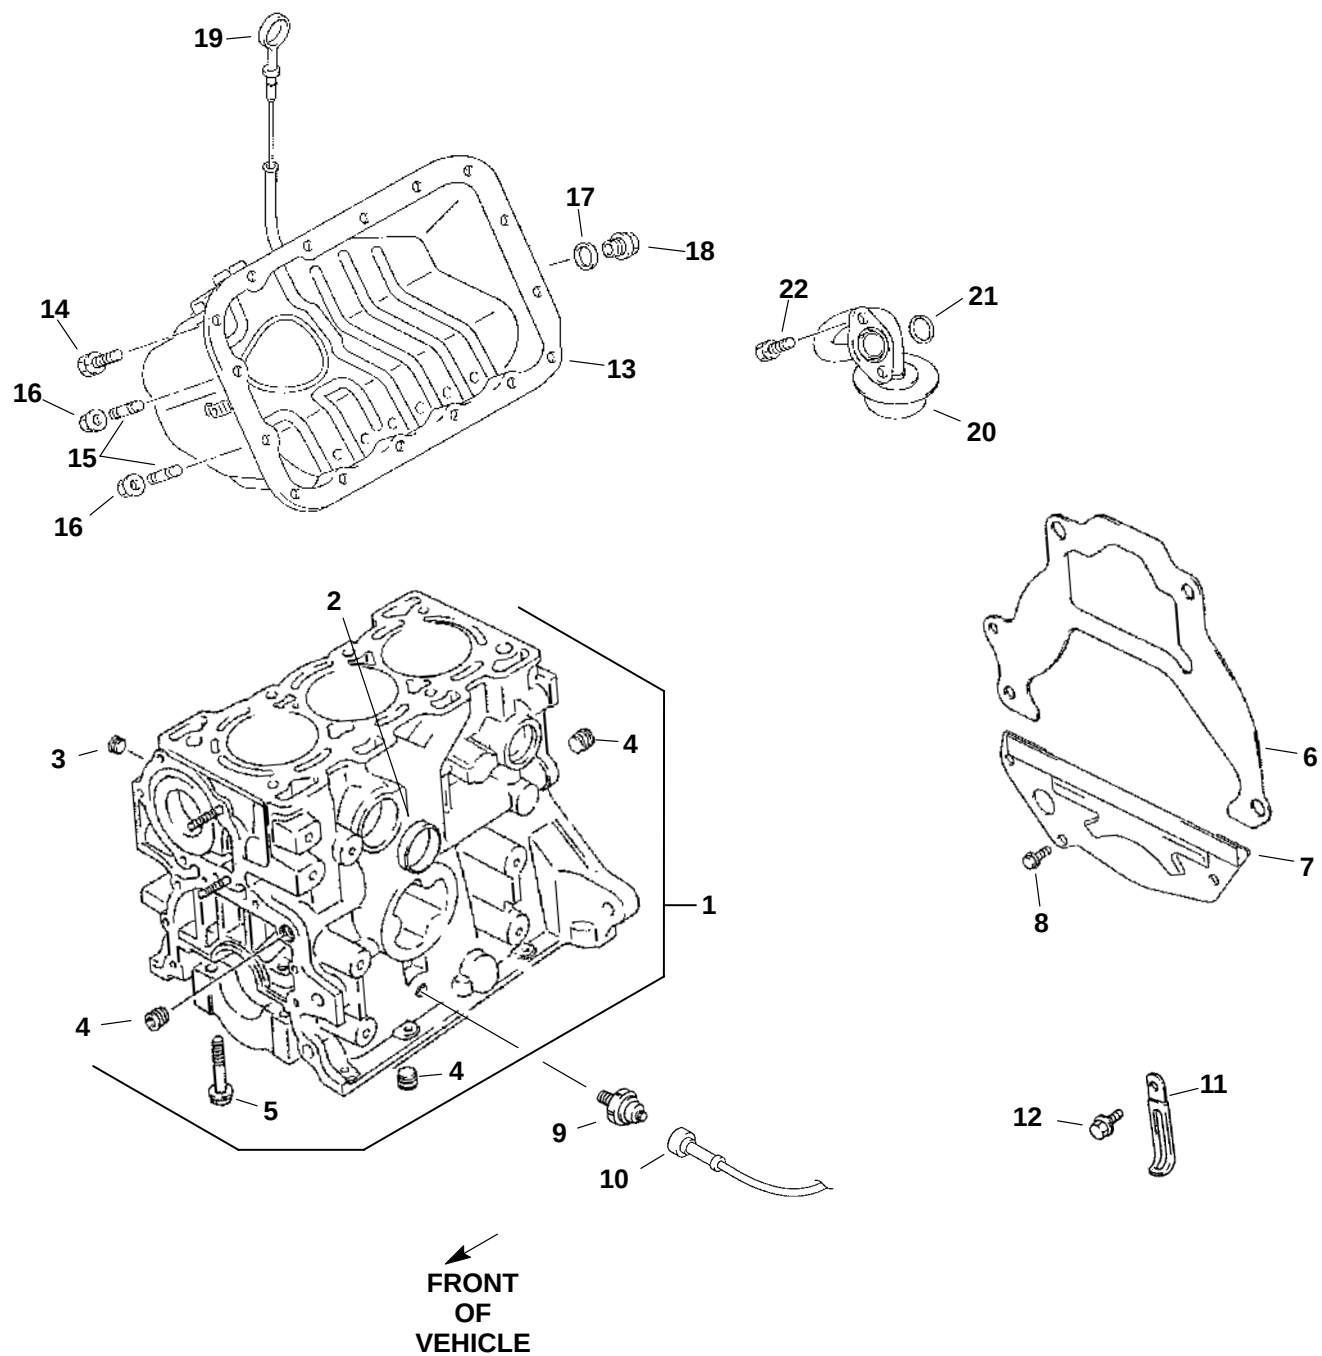

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701837	Block, cylinder	1	
2	2701819	•Seal	2	
3	2701820	•Plug	1	
4	2701838	•Plug	3	
5	2701839	•Bolt	8	
6	2701900	Plate, clutch hsng. upper	1	
7	2701902	Plate, clutch hsng. lower	1	
8	2701903	Bolt	1	
9	2701904	Sender, oil pressure	1	
10	2701905	Wire, oil pressure	1	
11	2701906	Clamp	1	
12	2701907	Bolt	1	
13	2701911	Pan, oil	1	
14	2701912	Bolt	14	
15	2701913	Stud	2	
16	2701914	Nut	2	
17	2701915	Plug, oil drain	1	
18	2701916	Gasket, oil drain plug	1	
19	2701918	Dipstick, oil level	1	
20	2701919	Strainer, oil pump	1	
21	2701920	O-ring	1	
22	2701921	Bolt	2	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.


6.4 CRANKSHAFT, PISTONS

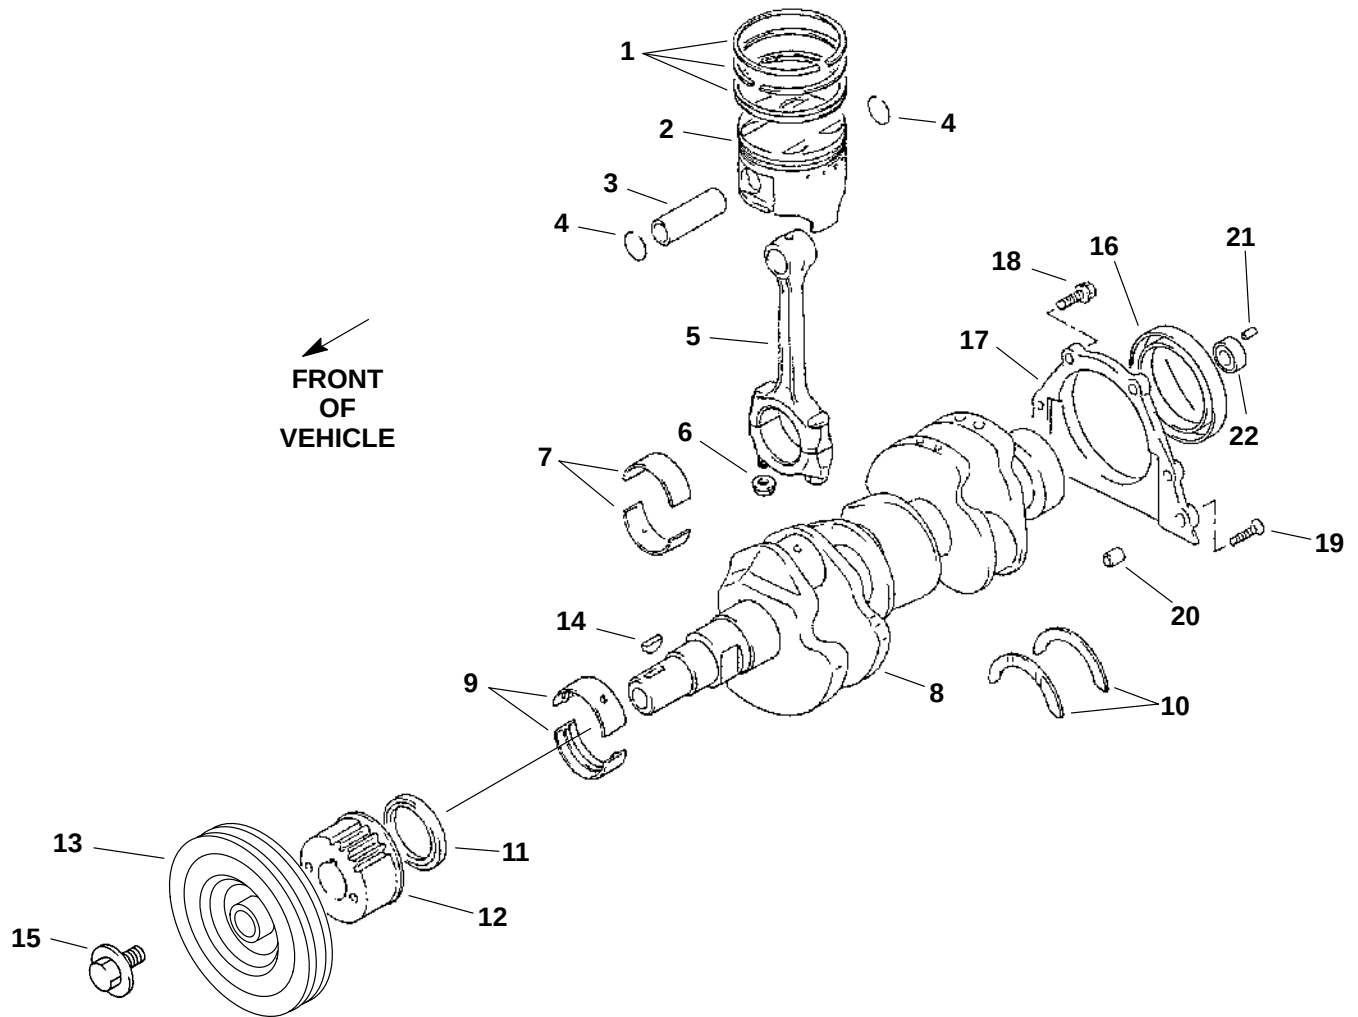

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701922	Ring, piston (standard)	3	
	2701923	Ring, piston (OS:0.25)	3	
	2701924	Ring, piston (OS:0.50)	3	
2	2701925	Piston (standard)	3	
	2701926	Piston (OS:0.25)	3	
	2701927	Piston (OS:0.50)	3	
3	2701928	Pin, piston	3	
4	2701929	Ring, snap	6	
5	2701930	Rod, connecting	3	
6	2701931	•Nut, connecting rod	2	
7	2701932	Bearing, connecting rod	6	
	2701933	Bearing, connecting rod (US:0.25)	6	
8	2701934	Crankshaft	1	
9	2701935	Bearing set, crankshaft	1	
	2701936	Bearing set, crankshaft (US:0.25)	1	
10	2701937	Bearing set, crank thrust	1	
	2701938	Bearing set, crank thrust (US:0.25)	1	
11	2701939	Seal, front	1	
12	2701940	Pulley, timing belt	1	
13	2701942	Pulley, crankshaft	1	
14	2701943	Key	1	
15	2701944	Bolt	1	
16	2701945	Seal, rear main	1	
17	2701946	Plate, rear	1	
18	2701834	Bolt	4	
19	2701948	Bolt	2	
20	2701949	Pin	2	
21	2701954	Pin	1	
22	2701952	Bearing, input shaft	1	


•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.5 CAMSHAFT

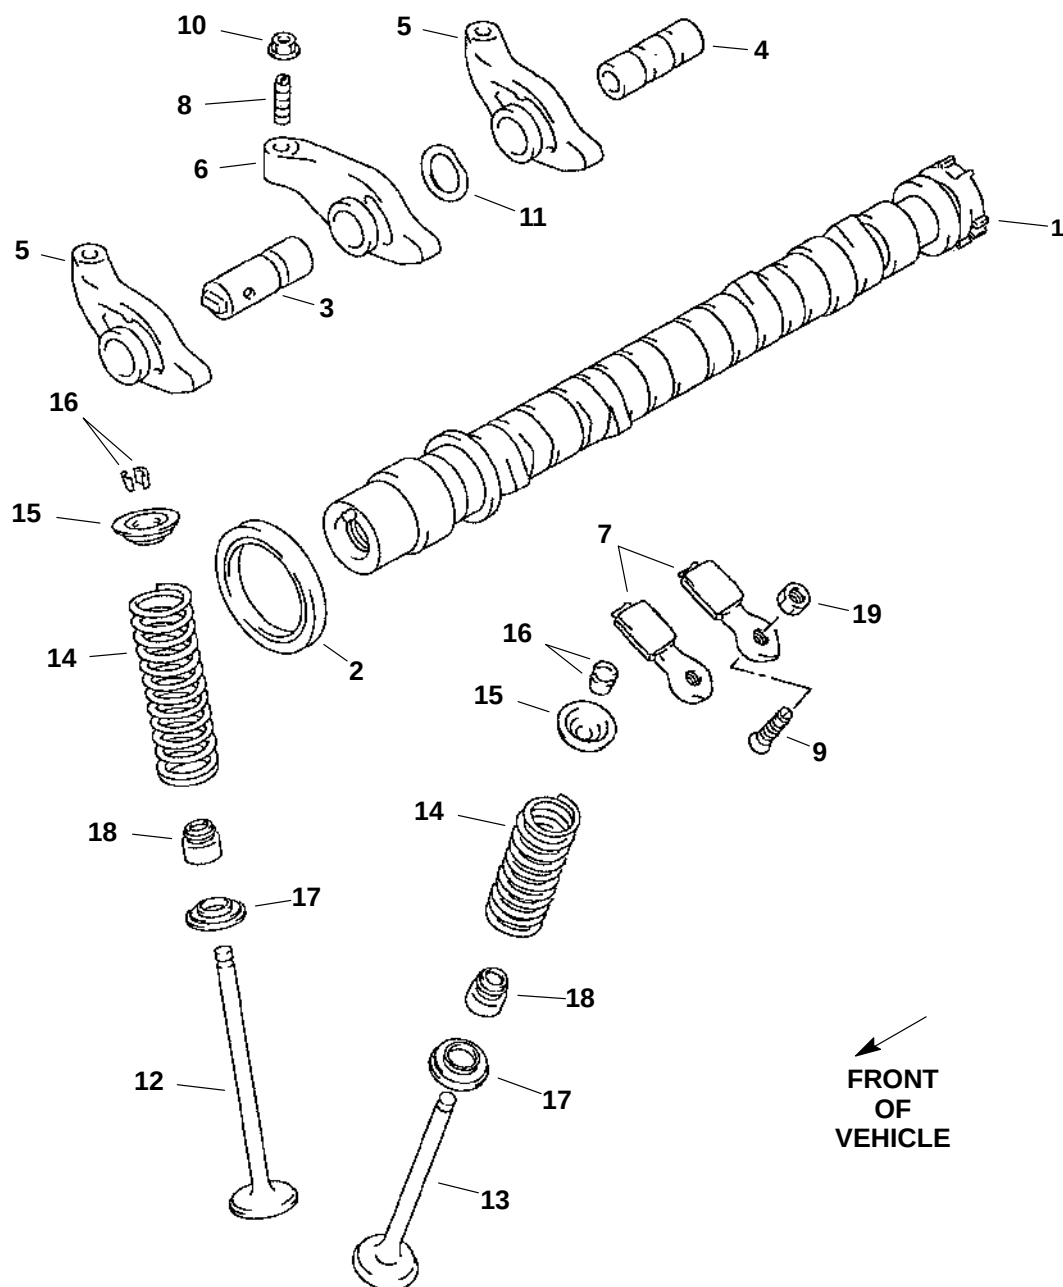


Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701947	Camshaft	1	
2	2701955	Seal, camshaft	1	
3	2701956	Shaft, rocker arm (No. 1)	2	
4	2701957	Shaft, rocker arm (No. 2)	2	
5	2701958	Arm, valve rocker intake No. 1	3	
6	2701959	Arm, valve rocker intake No. 2	3	
7	2701960	Arm, rocker exhaust	6	
8	2701961	Screw, adjusting	6	
9	2701962	Screw, valve adjusting	6	
10	2701963	Nut, adjusting (intake)	12	
11	2701965	Washer, wavy	4	
12	2701966	Valve, intake	6	
13	2701967	Valve, exhaust	6	
14	2701968	Spring, valve	12	
15	2701969	Retainer, valve spring	12	
16	2701970	Cotter, valve	24	
17	2701971	Seat, valve spring	12	
18	2701972	Seal, valve stem	12	
19	2701964	Nut, adjusting (exhaust)	6	

6.6 TIMING BELT & COVER

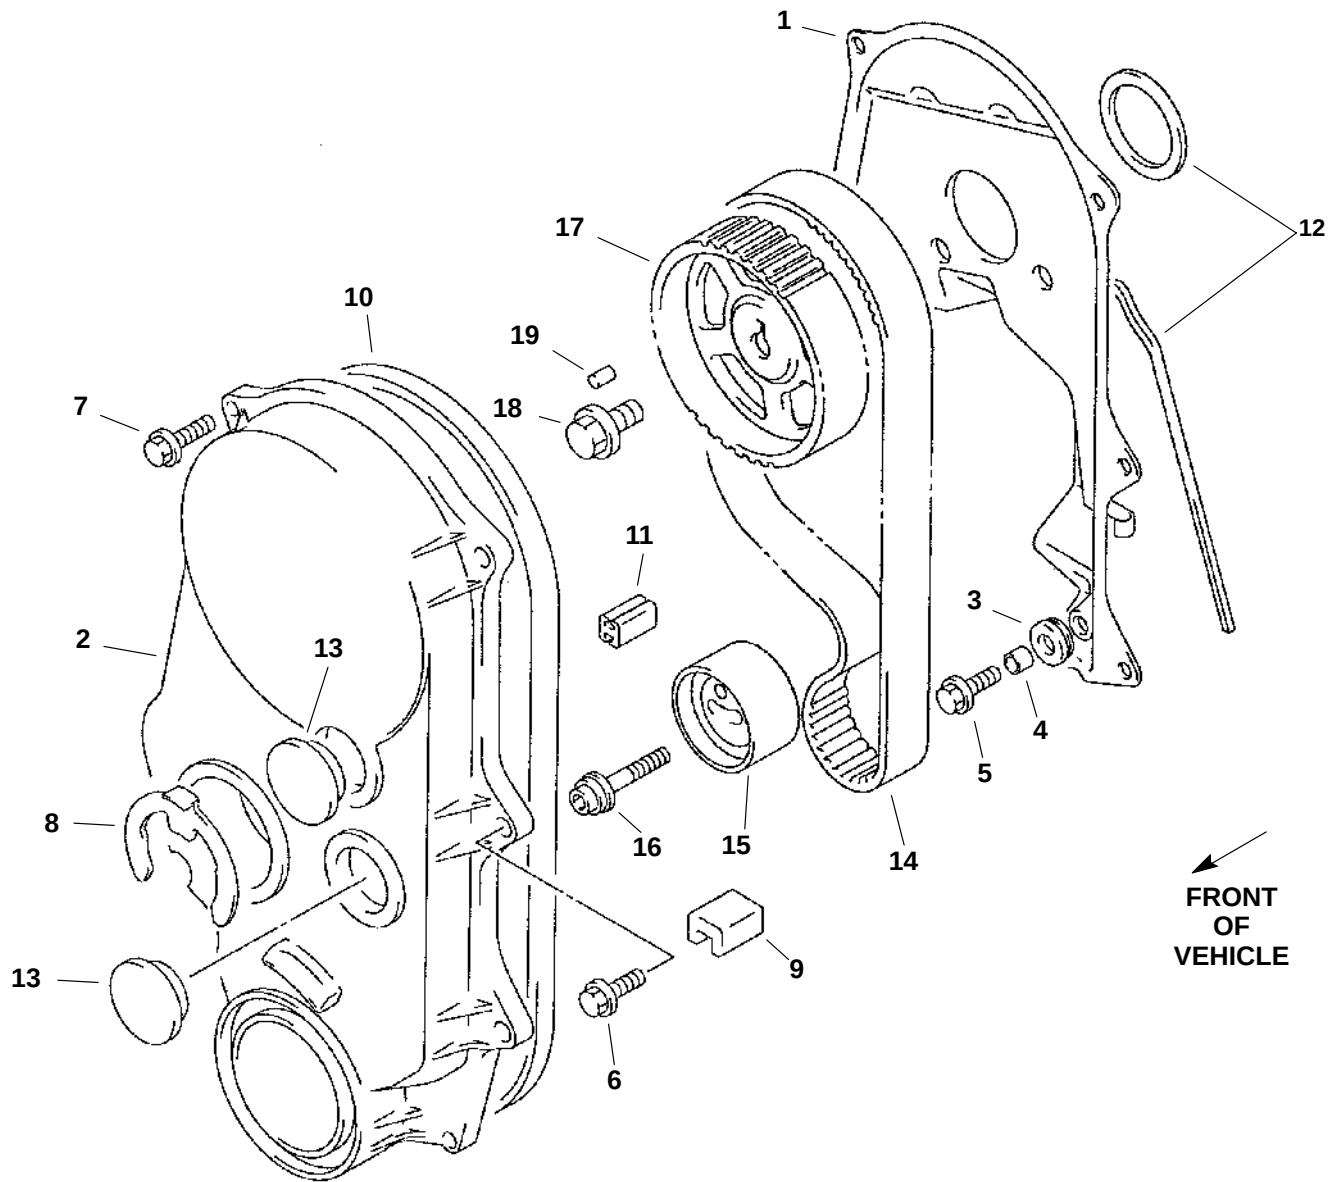

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701973	Cover, timing belt (inside)	1	
2	2701974	Cover, timing belt (outside)	1	
3	2701975	Grommet	4	
4	2701976	Spacer	4	
5	2701977	Bolt	4	
6	2701978	Bolt	5	
7	2701834	Bolt	3	
8	2701980	E-ring	1	
9	2701981	Seal	1	
10	2701979	Seal, cover outside	1	
11	2701982	Seal	1	
12	2701983	Seal set	1	
13	2701984	Cap	2	
14	2701985	Belt, timing	1	
15	2701986	Tensioner assembly	1	
16	2701987	Bolt	1	
17	2701988	Pulley, cam shaft timing	1	
18	2701989	Bolt	1	
19	2701990	Pin	1	

6.7 INTAKE MANIFOLD/THROTTLE BODY

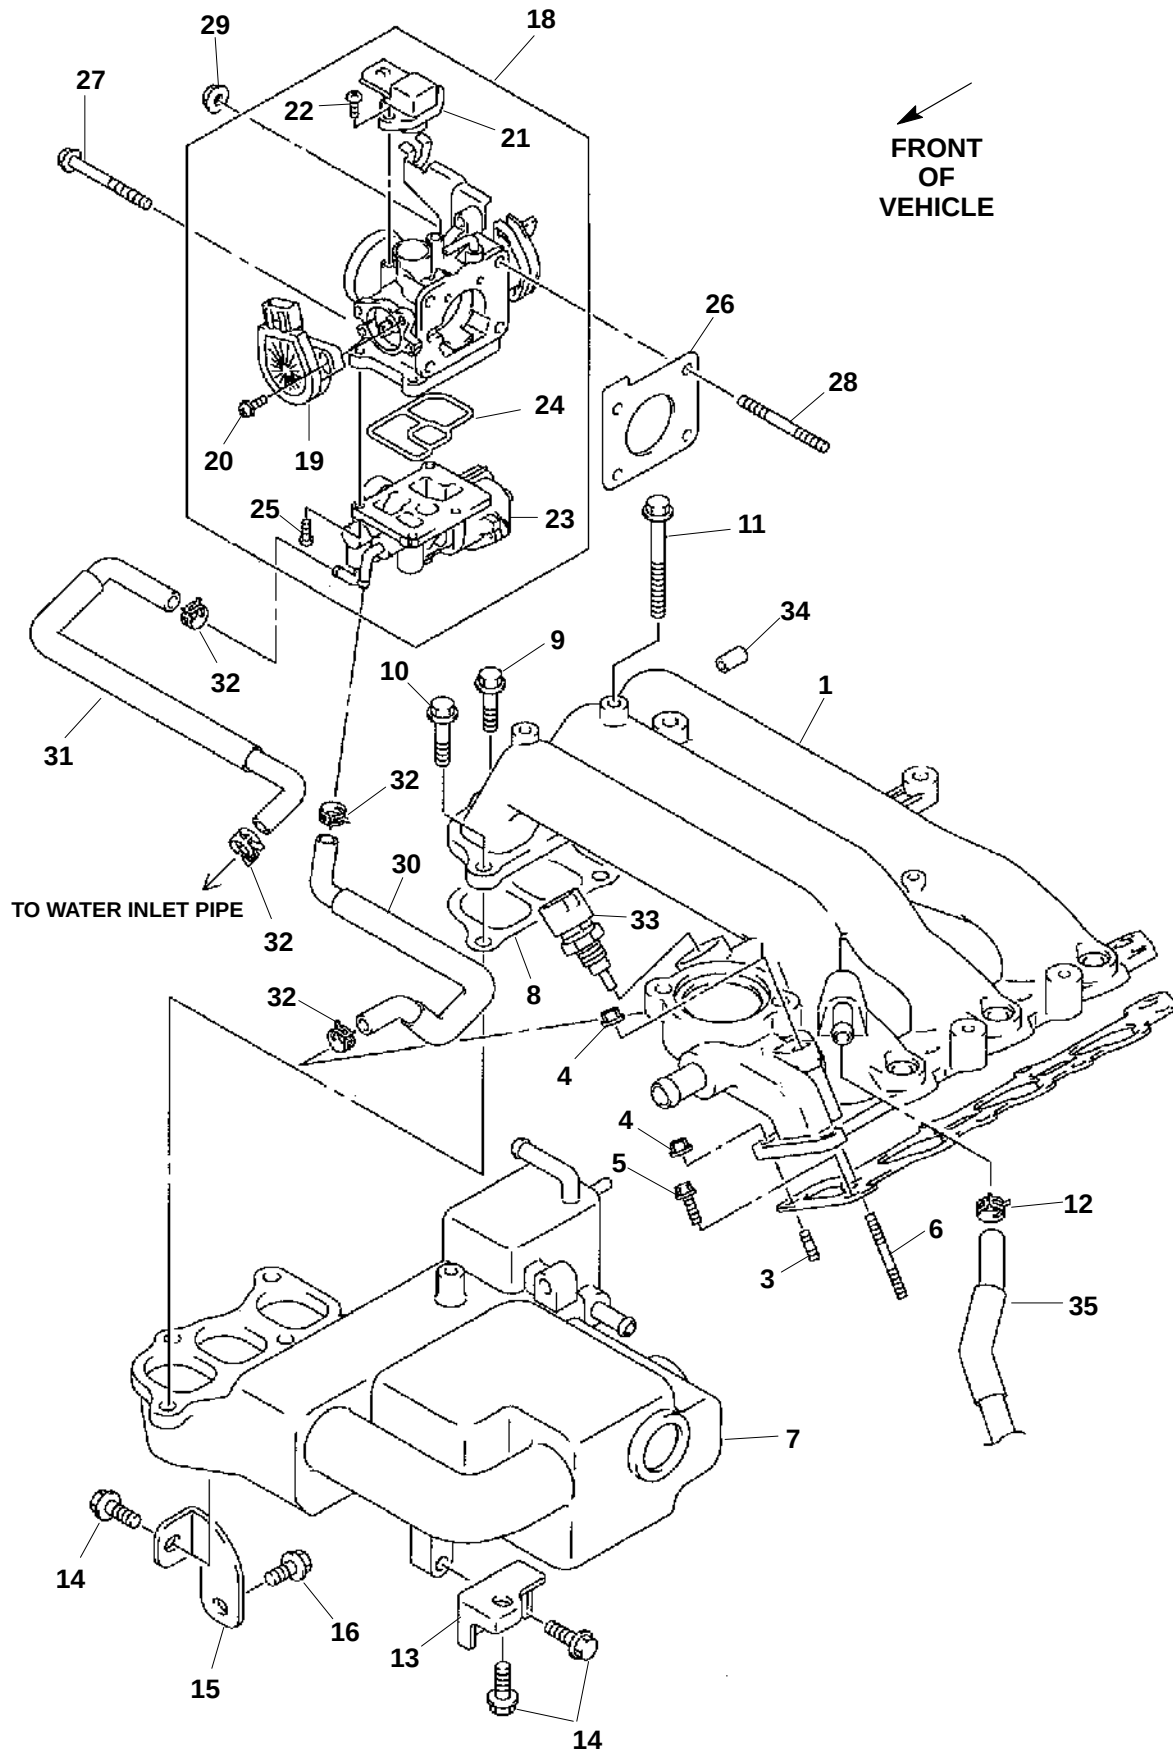


INTAKE MANIFOLD/THROTTLE BODY 6.7


Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702467	Manifold, intake	1	
2	2701796	Gasket	1	
3	2701992	Stud bolt	2	
4	2701914	Nut	3	
5	2701834	Bolt	6	
6	2701993	Stud bolt	1	
7	2702468	Tank, surge	1	
8	2701804	Gasket	1	
9	2702469	Bolt	1	
10	2702470	Bolt	2	
11	2702471	Bolt	1	
12	2702433	Clamp	2	
13	2702473	Bracket, intake manifold No. 2	1	
14	2701827	Bolt	2	
15	2702474	Bracket, surge tank	1	
16	2702475	Bolt	1	
17	2701827	Bolt	1	
18	2702476	Body, throttle	1	
19	2701995	•Sensor, throttle position	1	
20	2701996	•Screw	2	
21	2702477	•Sensor, pressure	1	
22	2701998	•Screw	2	
23	2702478	•Valve, isc	1	
24	2702000	•Gasket	1	
25	2701998	•Screw	4	
26	2701803	Gasket	1	
27	2702001	Bolt	2	
28	2702426	Stud bolt	2	
29	2701914	Nut	2	
30	2702479	Hose, water inlet	1	
31	2702480	Hose, water outlet	1	
32	2702429	Clip	4	
33	2702481	Sensor, water temperature	1	
34	2702431	Plug	1	
35	2702432	Hose, brake vacuum	1	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.8 PVC VALVE

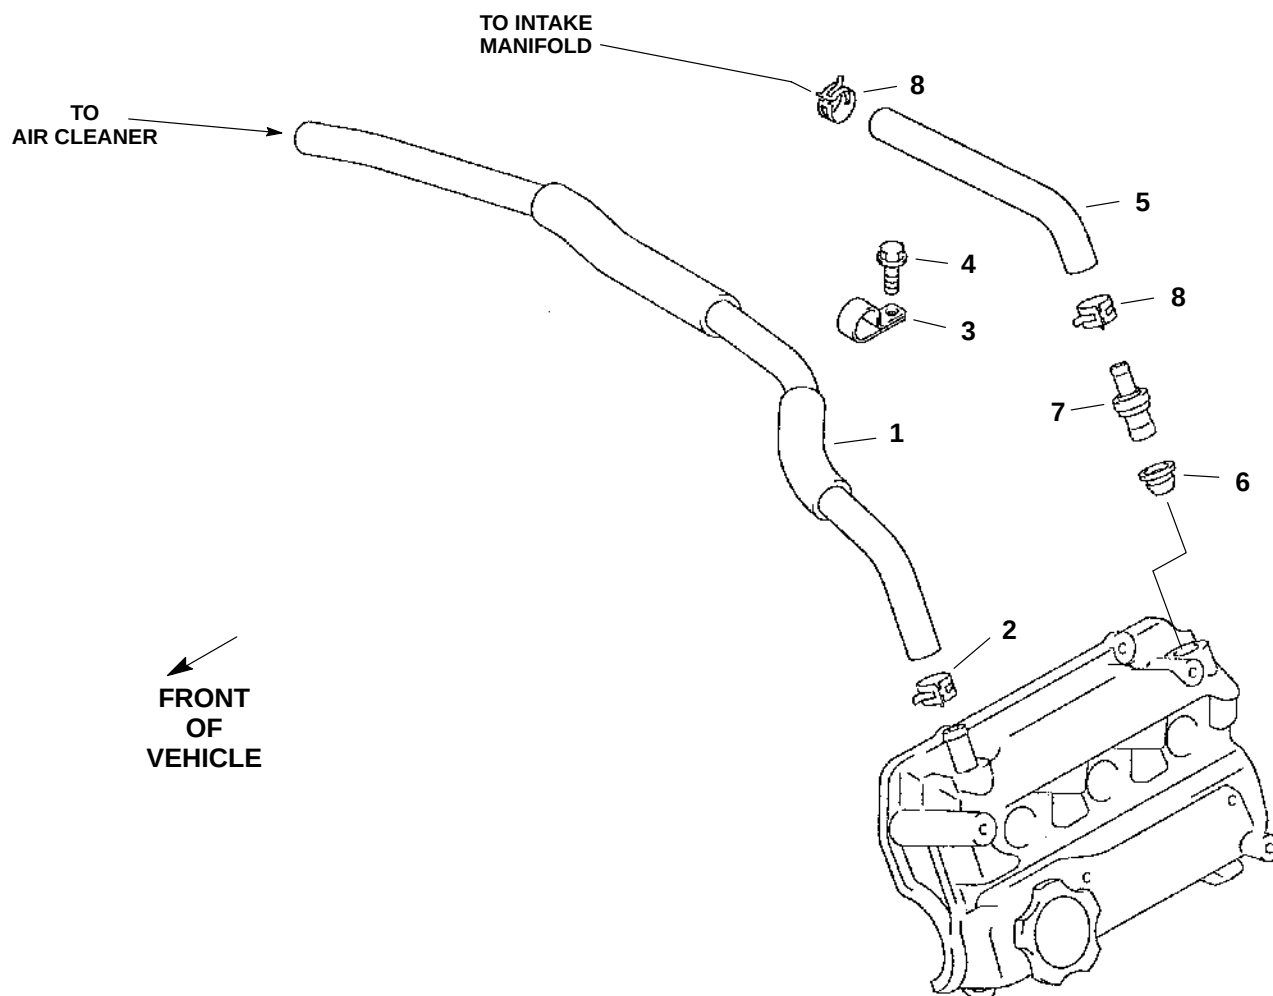


Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702488	Hose, breather	1	
2	2702484	Clip, hose	1	
3	2702485	Clamp	1	
4	2702486	Bolt	1	
5	2702488	Hose, PVC	1	
6	2702489	Seal	1	
7	2702490	Valve, PCV	1	
8	2702491	Clip	2	

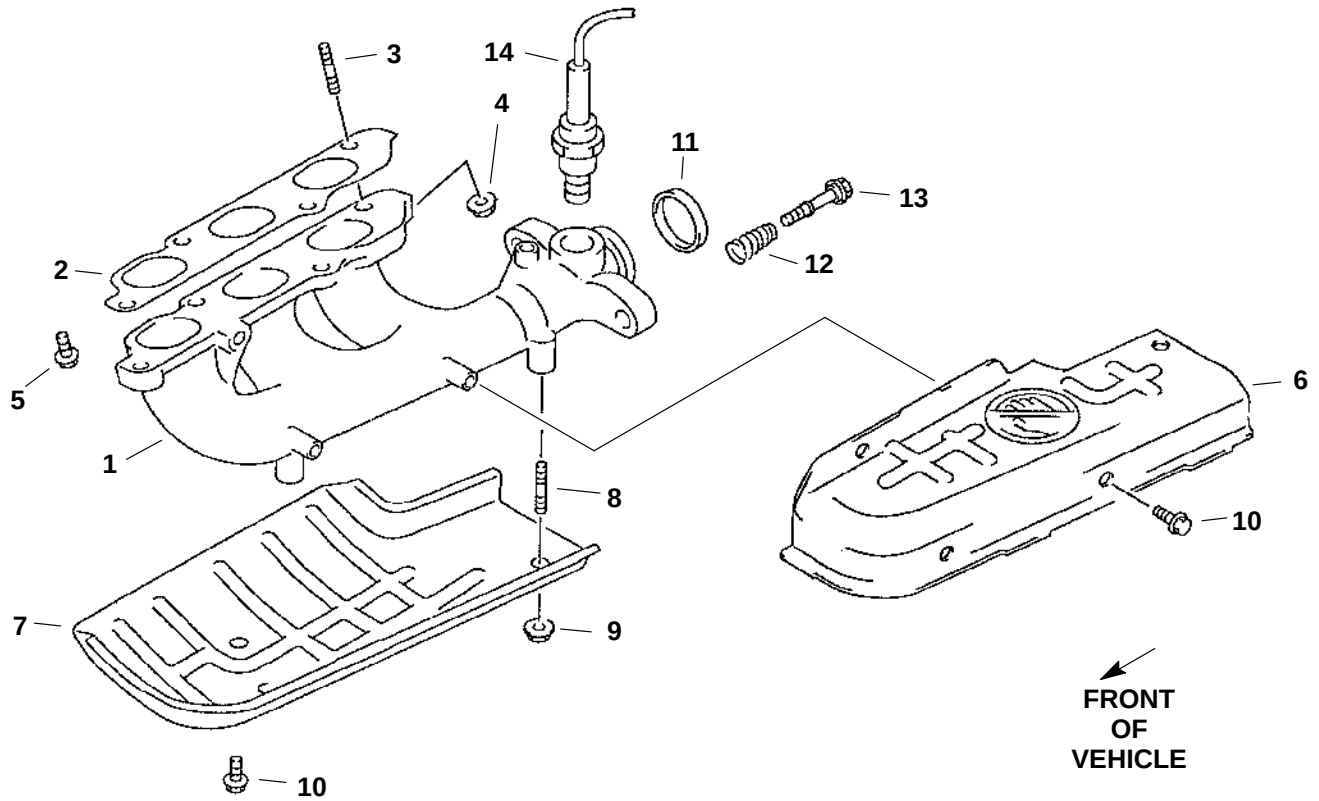

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702492	Maniflod, exhaust	1	
2	2701797	Gasket	1	
3	2702493	Stud bolt	3	
4	2702494	Nut	3	
5	2702495	Bolt	1	
6	2702496	Cover, manifold upper	1	
7	2702497	Cover, manifold lower	1	
8	2701913	Stud bolt	2	
9	2702498	Nut	2	
10	2702499	Bolt (6x10)	5	
11	2702500	Ring, seal	1	
12	2702501	Spring	2	
13	2702502	Bolt (10x65)	2	
14	2702503	Sensor, oxygen	1	


6.10 OIL PUMP

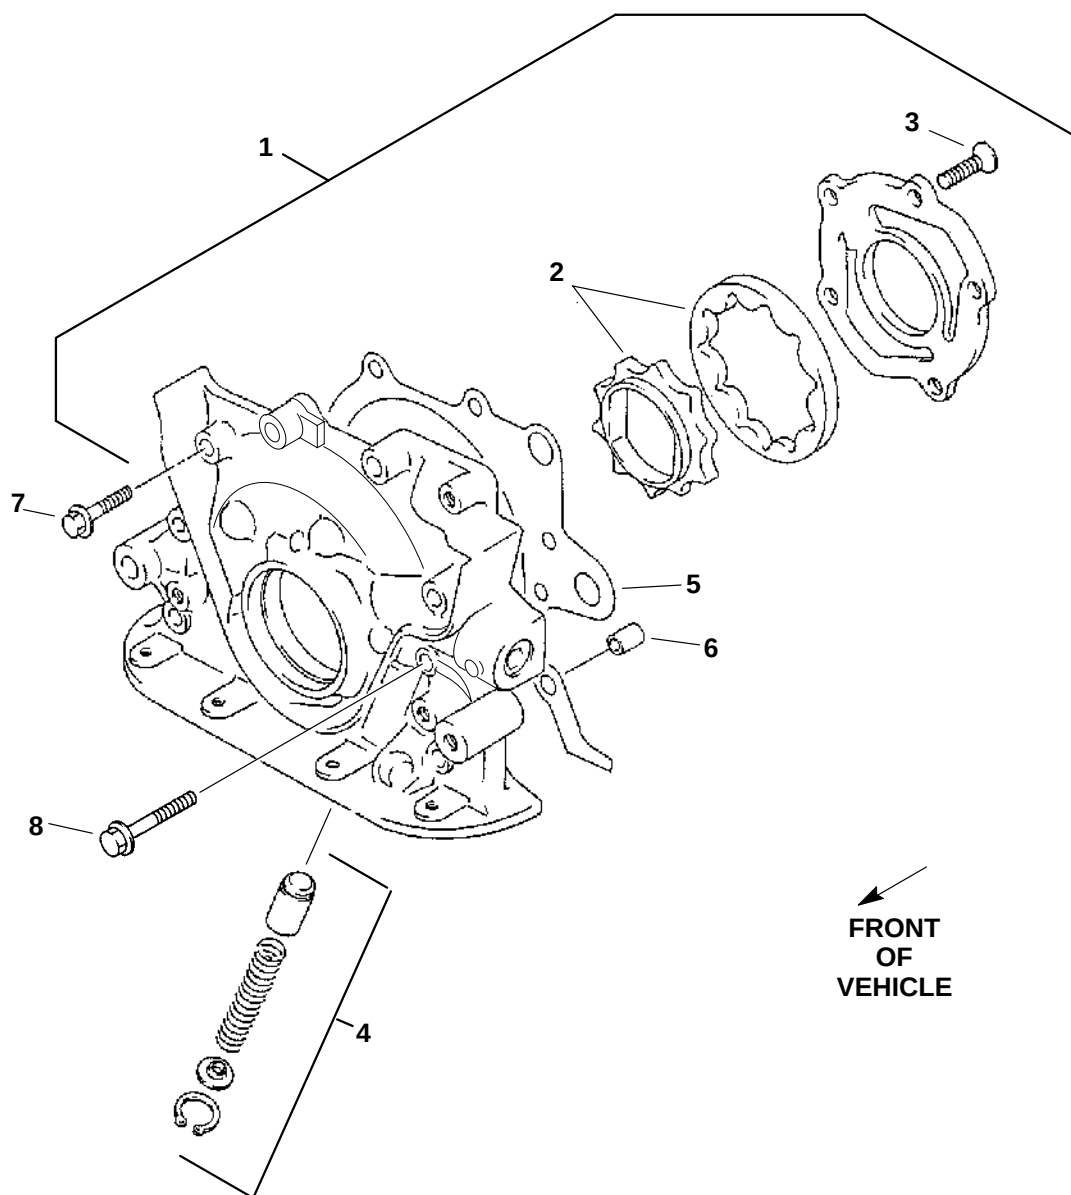


Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702515	Pump, oil	1	
2	2702516	•Rotor, oil pump	1	
3	2702517	•Screw	5	
4	2702518	•Valve, oil relief	1	
5	2701800	Gasket, oil pump cover	1	
6	2701949	Pin	2	
7	2702519	Bolt	4	
8	2702520	Bolt	4	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.11 WATER PUMP & OUTLET, THERMOSTAT

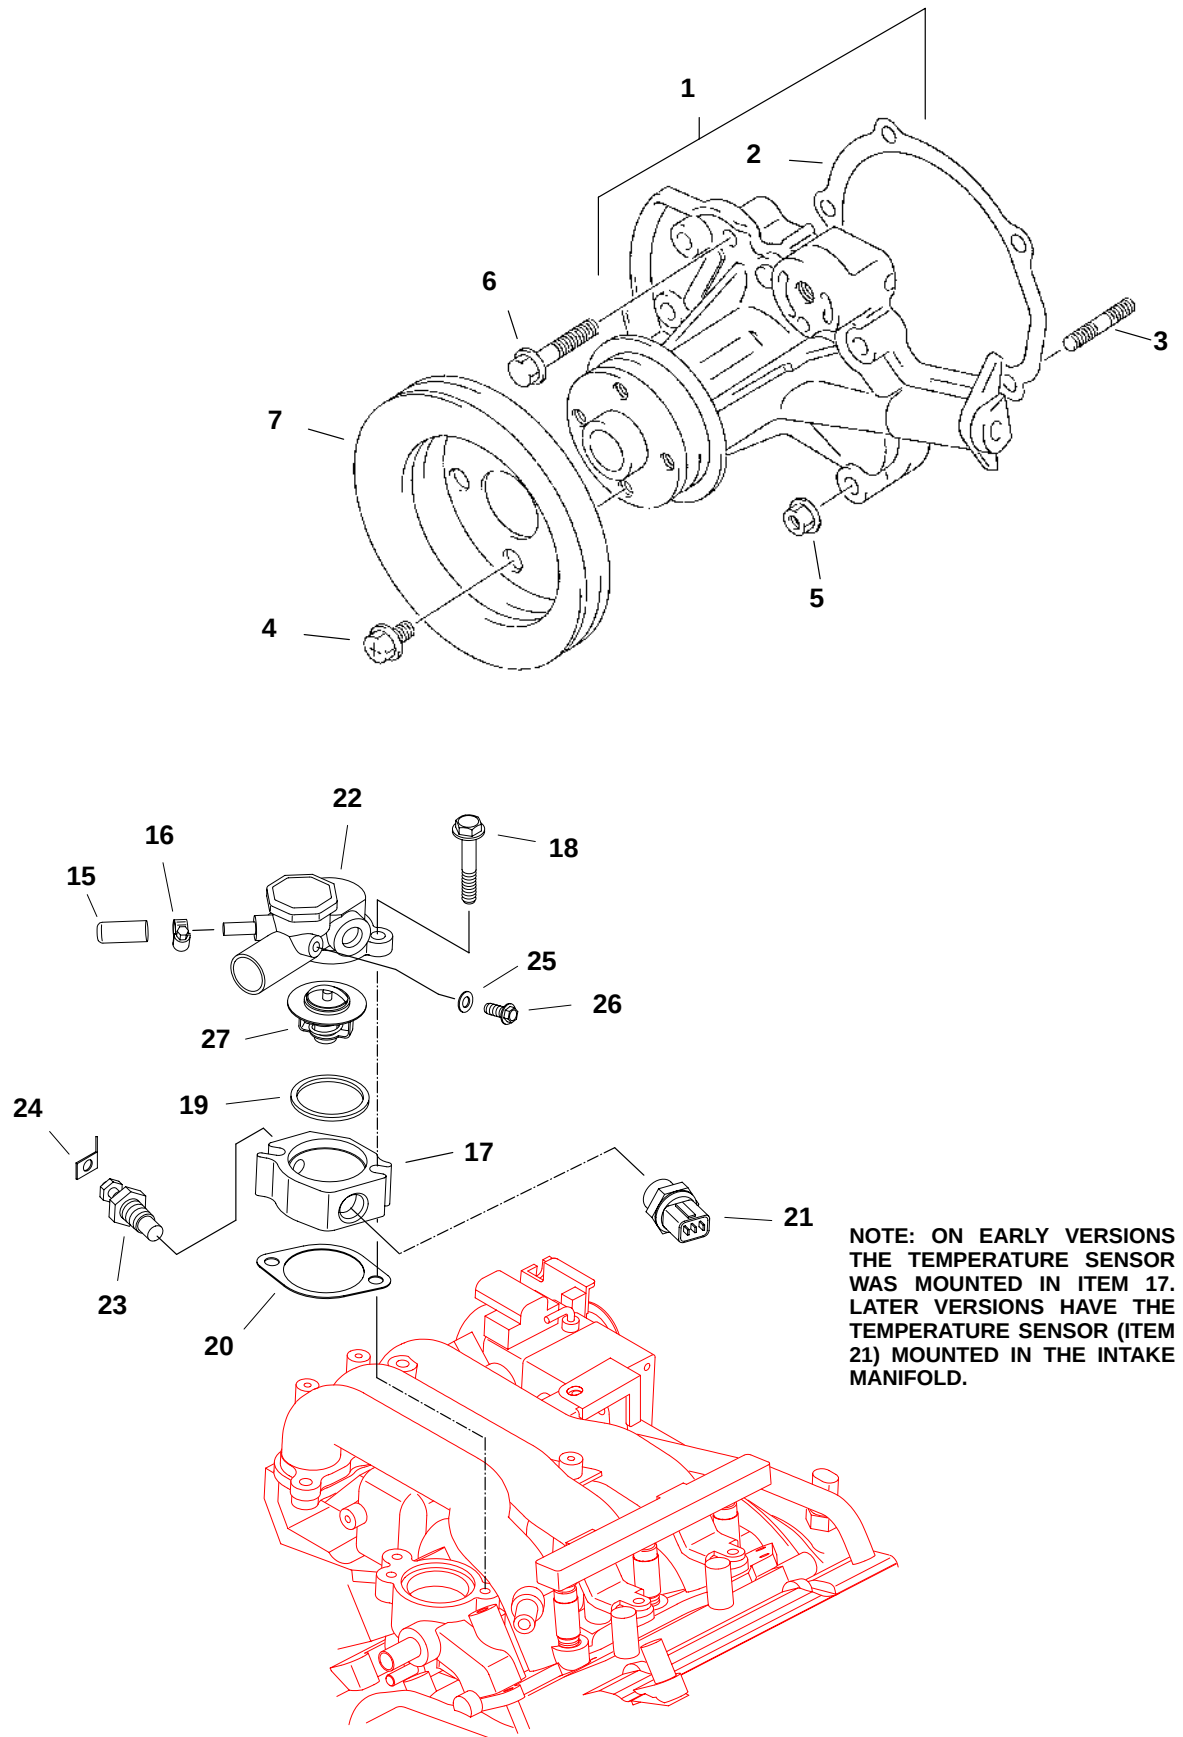


WATER PUMP & OUTLET, THERMOSTAT 6.11

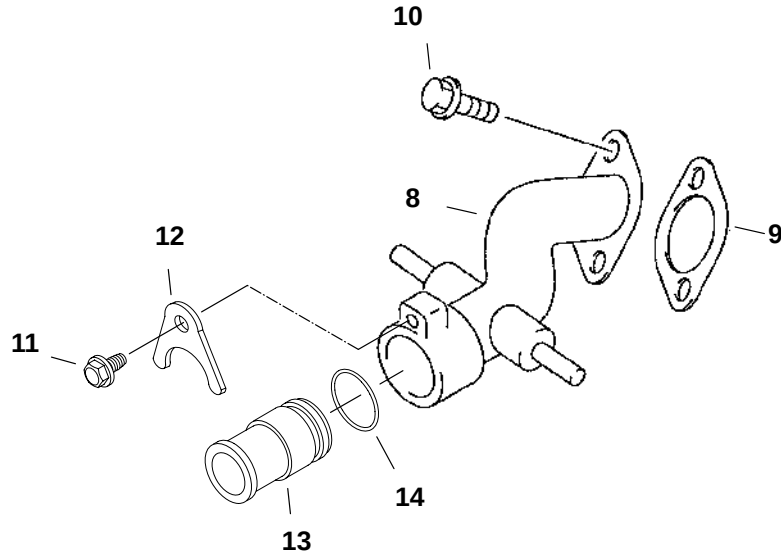

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702522	Pump, water	1	
2	2701801	•Gasket, water pump	1	
3	2702523	Stud	2	
4	2702537	Bolt	3	
5	2701914	Nut	2	
6	2702519	Bolt	3	
7	2702525	Pulley, water pump	1	
8	2702543	Case, water inlet	1	
9	2701802	Gasket	1	
10	2701834	Bolt	2	
11	452378	Screw, M6-1.00 x 20	1	
12	845409	Bracket, u-water inlet	1	
13	845365	Tube, water inlet	1	
14	2700031	O-ring	1	
15	845224	Cap, .313 x 1	1	
16	825624	Clamp, hose	1	
17	2701637	Housing, thermostat	1	
18	452392	Screw, M8-1.25 x 50	3	
19	2701638	Spacer, thermostat	1	
20	2701513	Gasket, thermostat spacer	1	
21	2701757	Switch, fan	1	
22	2702539	Cap, thermostat	1	
23	843857	Sender, water temperature	1	
24	829787	Terminal, 45°, 1/4 male	1	
25	2702541	Washer, bleed valve	1	
26	2702540	Bolt, bleed valve	1	
27	2702542	Thermostat (82° C)	1	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.


6.12 STARTER

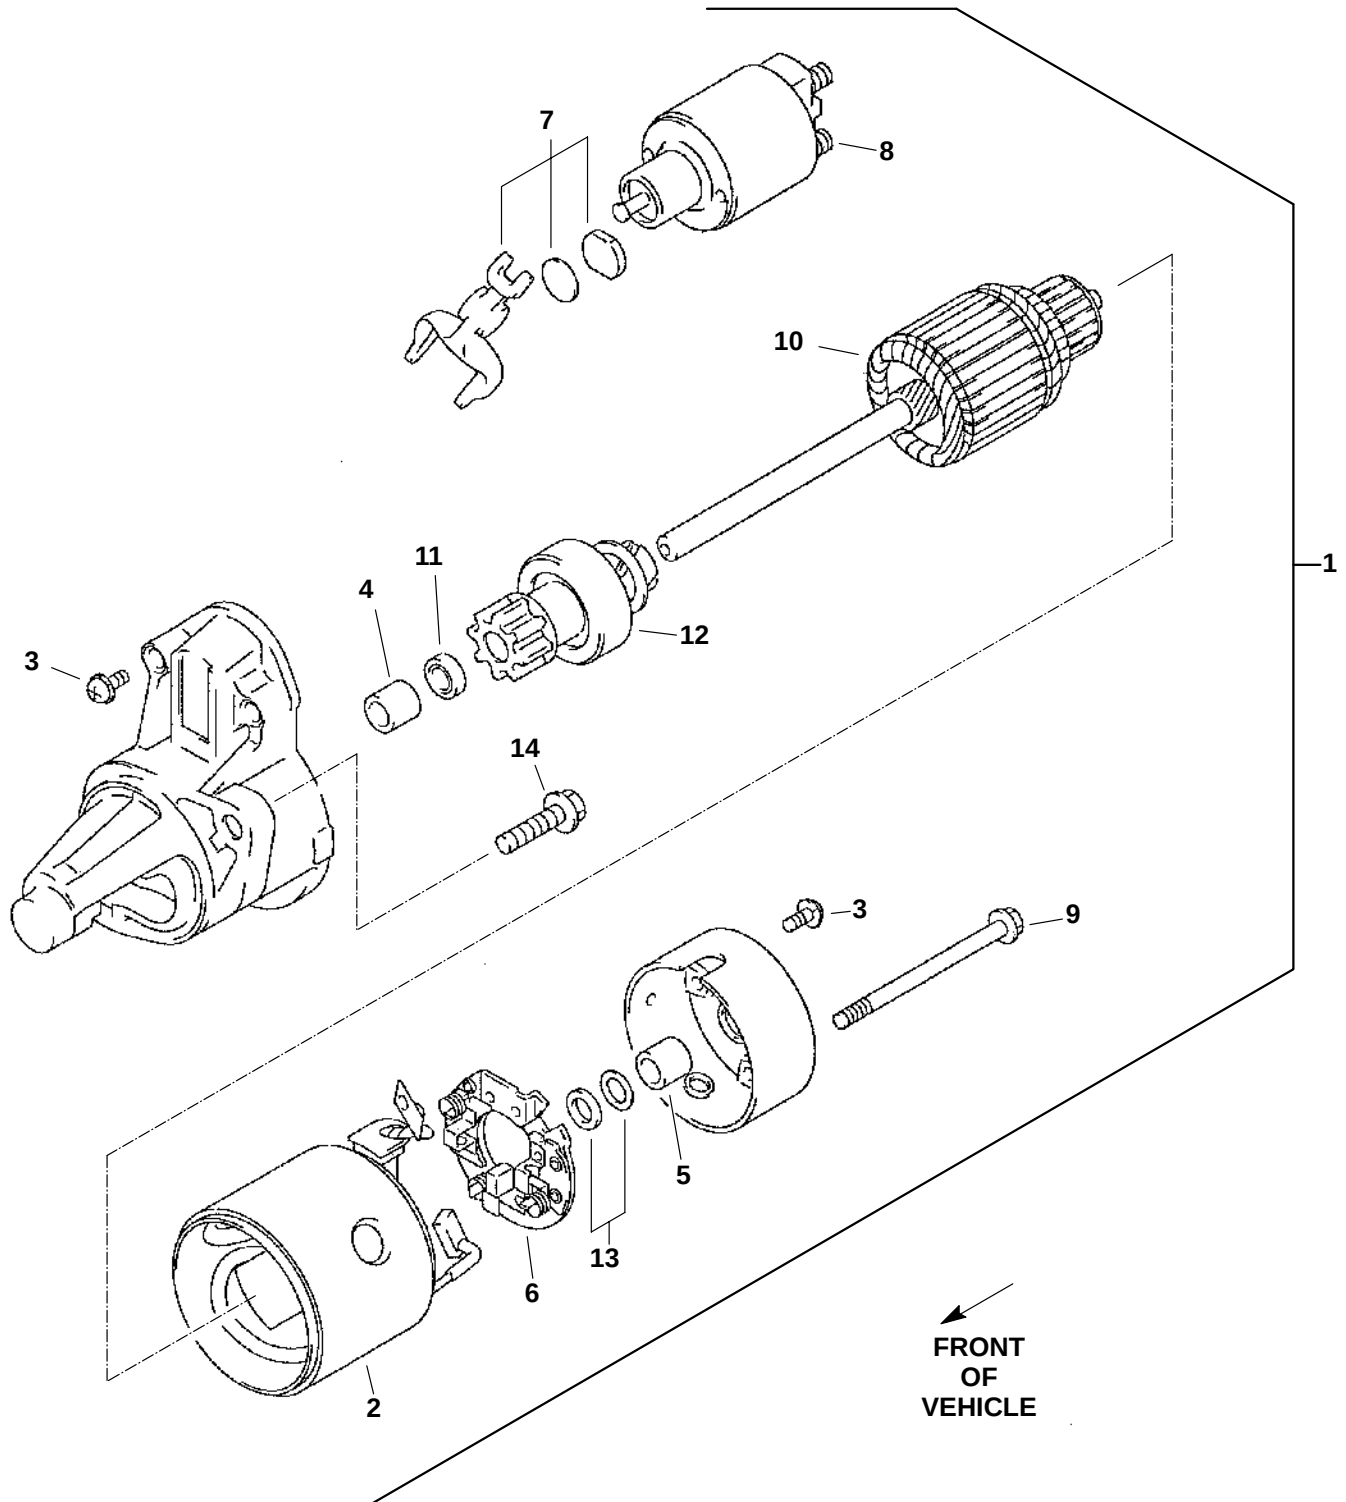

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702906	Motor assembly, starting	1	
2	2702907	•Yoke assembly	1	
3	2702895	•Screw assembly	1	
4	2702896	•Bushing	1	
5	2702897	•Bushing	1	
6	2702898	•Holder assembly, brush	1	
7	2702899	•Lever assembly	1	
8	2702900	•Switch assembly	1	
9	2702908	•Bolt	2	
10	2702909	•Armature	1	
11	2702903	•Ring assembly	1	
12	2702904	•Clutch assembly	1	
13	2702905	•Washer	1	
14	2702470	•Bolt	2	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.13 DRIVESHAFT, TORQUE CONVERTER

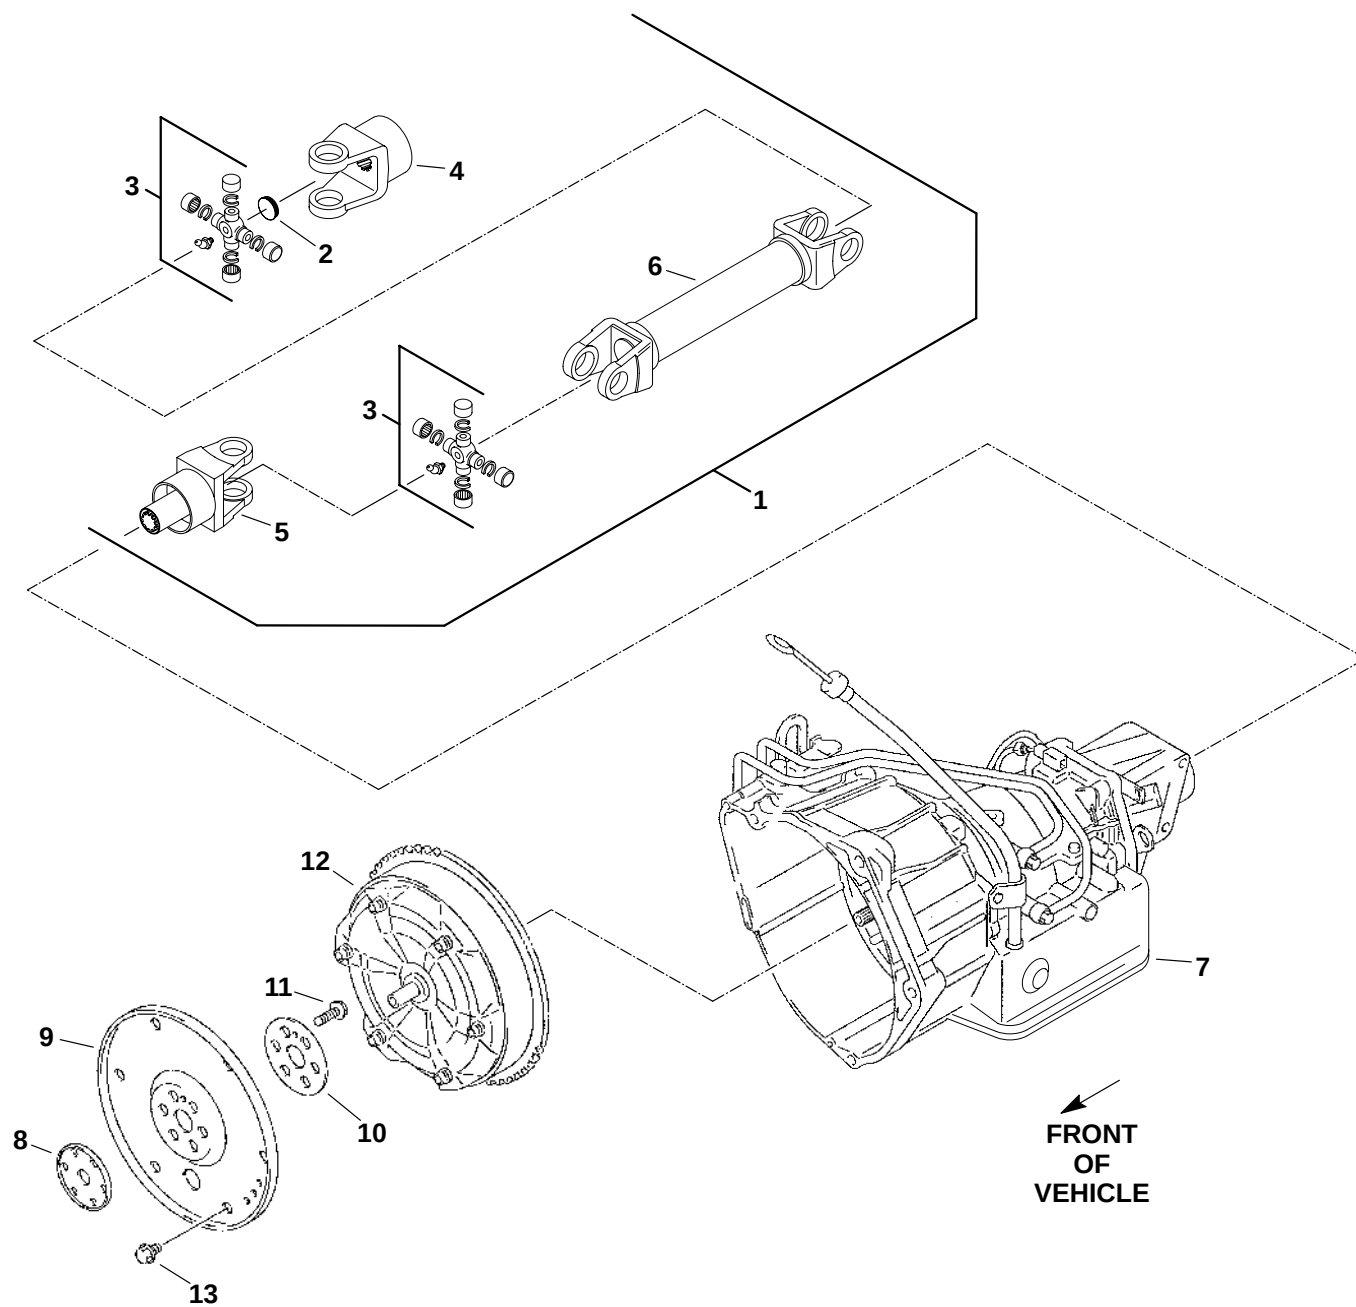


DRIVESHAFT, TORQUE CONVERTER 6.13

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701461.7	Driveshaft, complete	1	
2	548482	•Plug, expansion	3	
3	826284	•Cross, u-joint	2	
4	826285	•Yoke, universal	1	
5	895125	•Yoke, front	1	
6	2701463	•Shaft, drive	1	
7	2702697	Transmission, complete	1	
8	2702698	Flange, drive plate	1	
9	2702699	Plate, drive (flywheel)	1	
10	2702700	Plate, drive rear	1	
11	2701951	Bolt	6	
12	2702701	Converter, torque	1	
13	2702702	Bolt	6	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.


6.14 AUTOMATIC TRANSMISSION

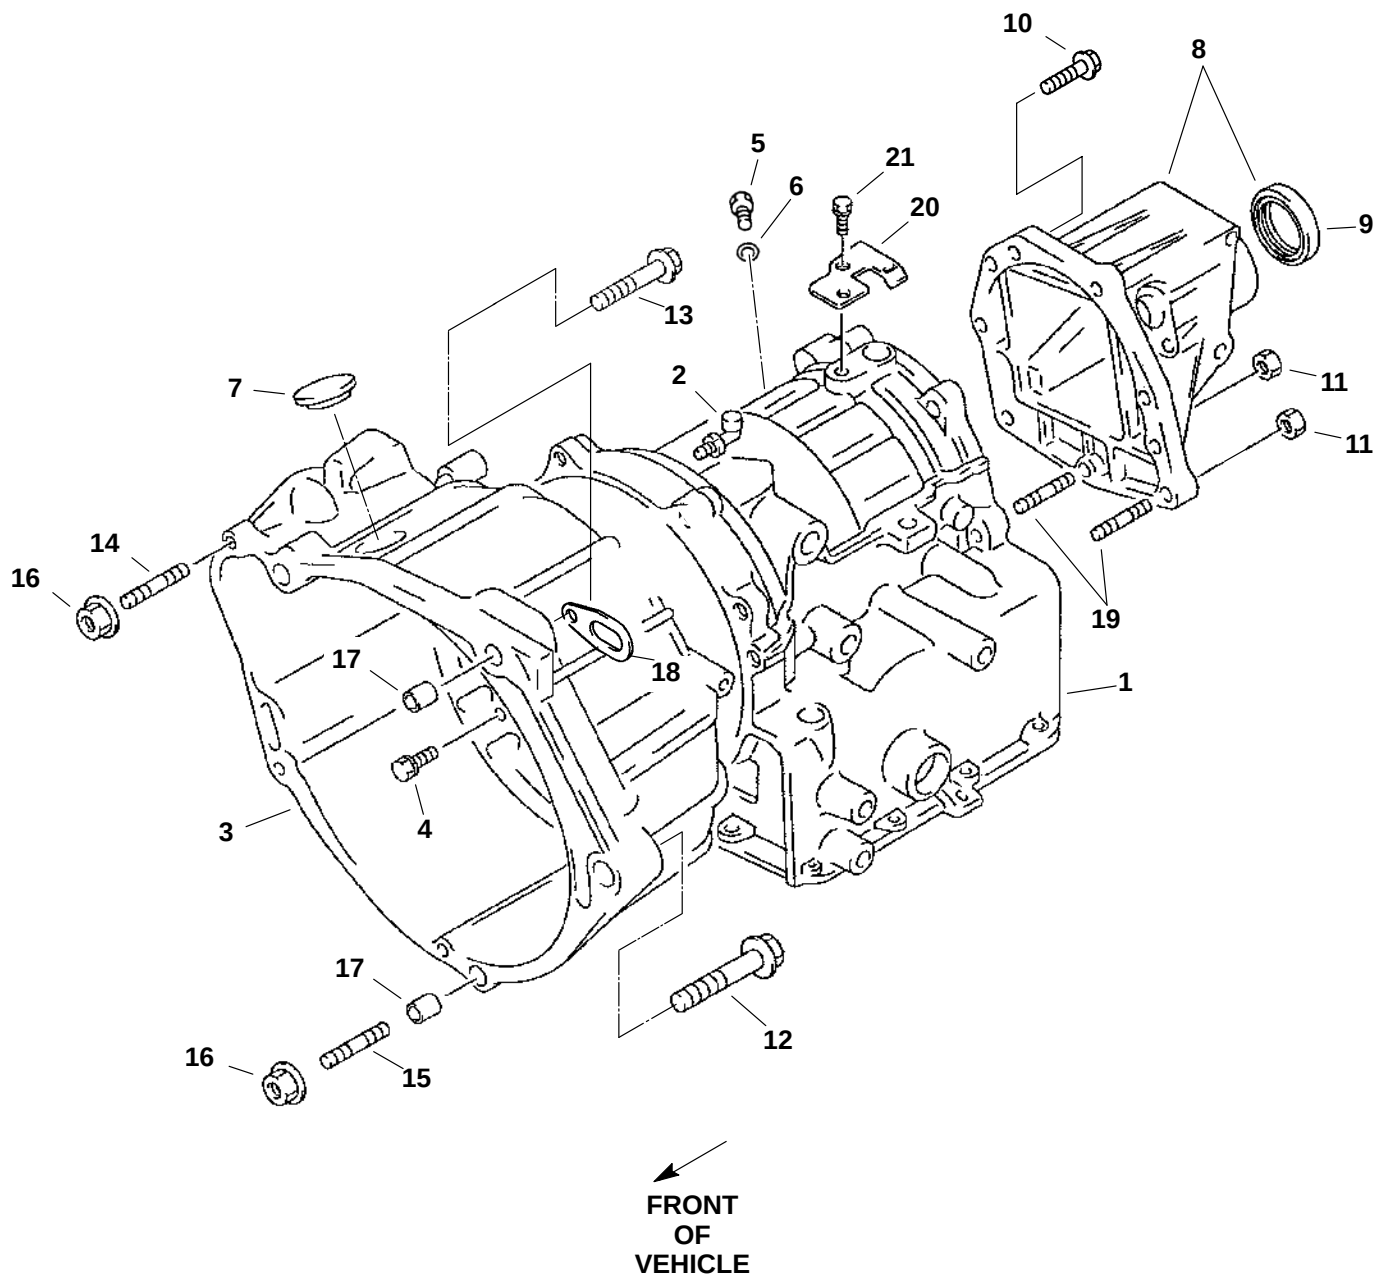

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702750	Case, transmission	1	
2	2702751	•Breather	1	
3	2702752	Housing, torque converter	1	
4	2702753	Bolt	6	
5	2702760	Plug, booster	1	
6	2702761	•O-ring	1	
7	2702662	Cap	1	
8	2702754	Housing, extension	1	
9	2702683	•Seal, extension case	1	
10	2702755	Bolt	5	
11	2702494	Nut	2	
12	2702756	Bolt	1	
13	2702686	Bolt	1	
14	2702757	Stud	1	
15	2702758	Stud	1	
16	2702689	Nut	2	
17	2702690	Collar	2	
18	2702759	Hook, engine	1	
19	2702762	Bolt, transmission case	2	
20	2702763	Bracket, connector clamp	1	
21	2702764	Bolt	1	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.15 AUTOMATIC TRANSMISSION PAN, DIPSTICK & GASKETS

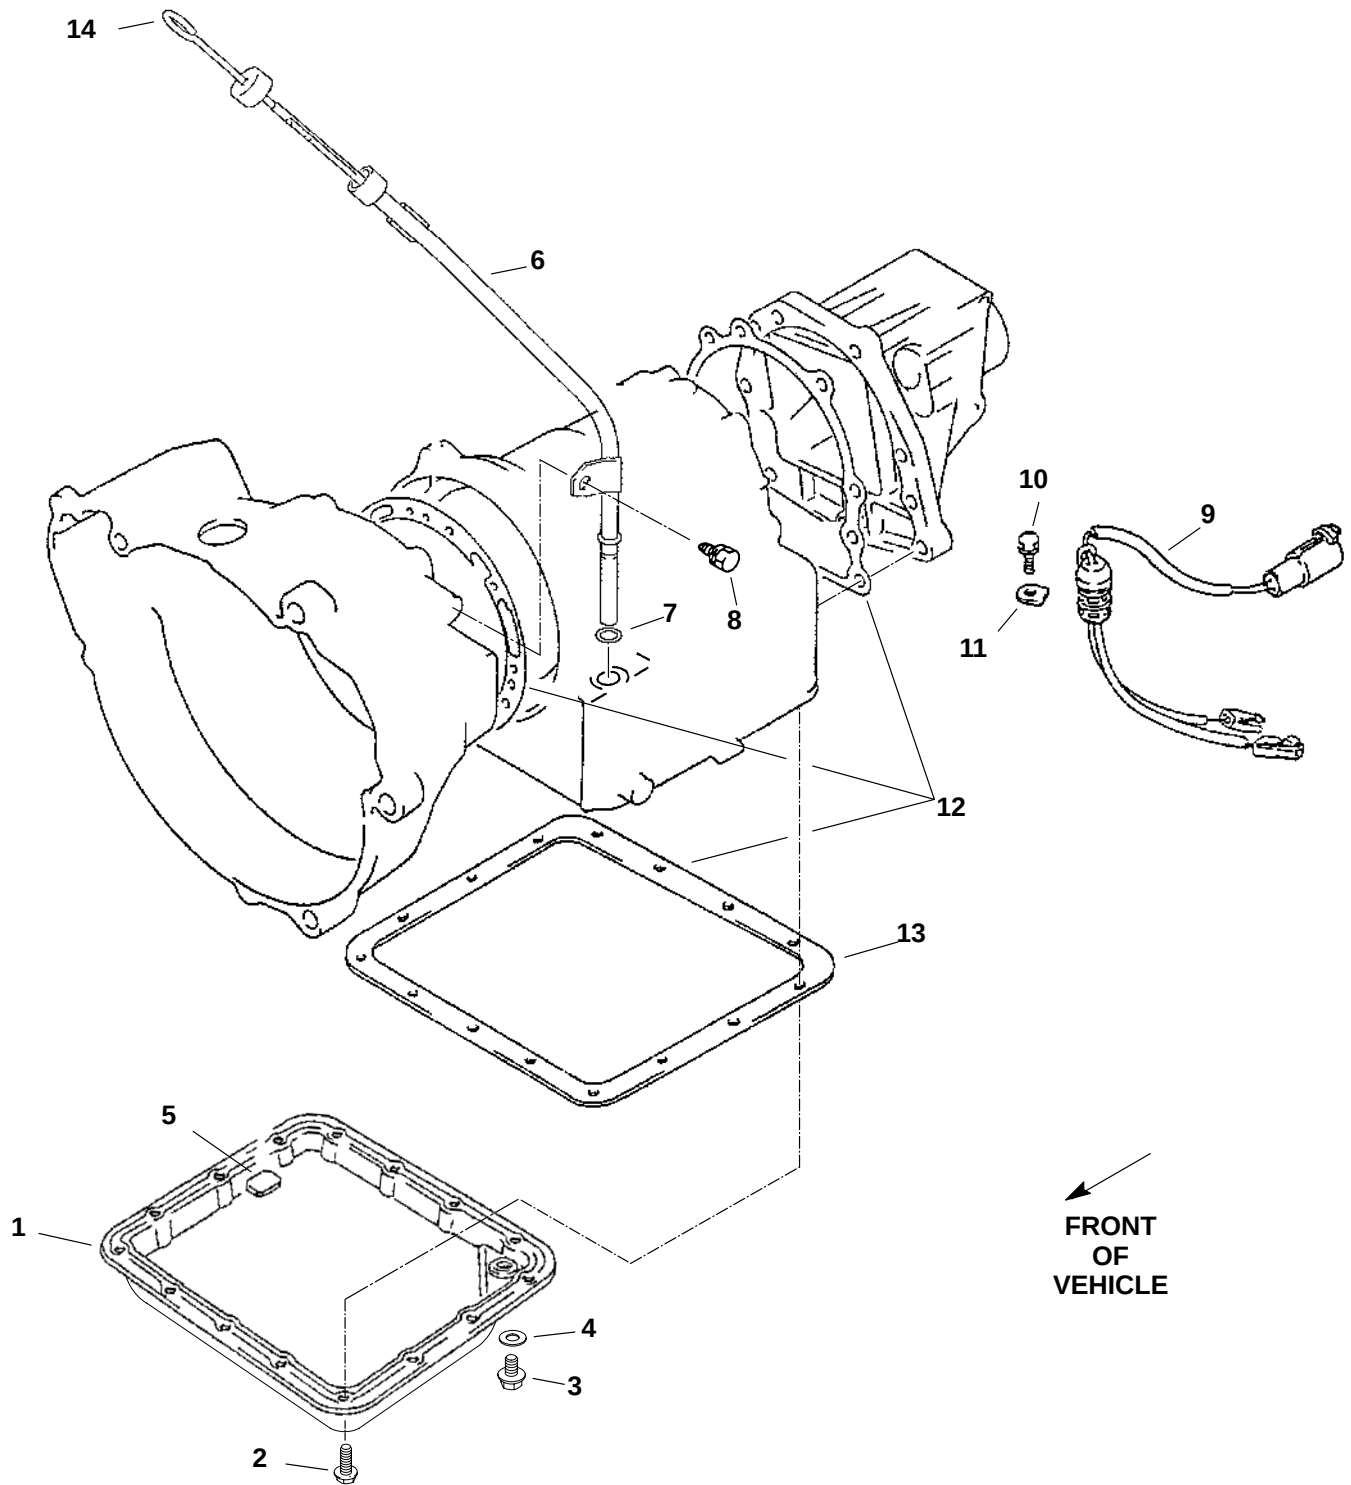


AUTOMATIC TRANSMISSION PAN, DIPSTICK & GASKETS 6.15

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702806	Pan, transmission	1	
2	2702807	Bolt	15	
3	2702808	Plug, transmission drain	1	
4	2702809	Gasket, plug	1	
5	2702810	Magneto, fluid cleaner	1	
6	2702811	Tube, transmission dipstick	1	
7	2702813	•O-ring	1	
8	2702475	Bolt	1	
9	2702816	Harness, solenoid wire	1	
10	2701921	Bolt	1	
11	2702817	Plate, solenoid harness	1	
12	2702748	Set, transmission gasket	1	
13	2702749	•Gasket, transmission pan	1	
14	2702814	Dipstick, transmission	1	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.16 TRANSMISSION TUBES, OIL PUMP, SOLENOIDS & SHIFT SWITCH

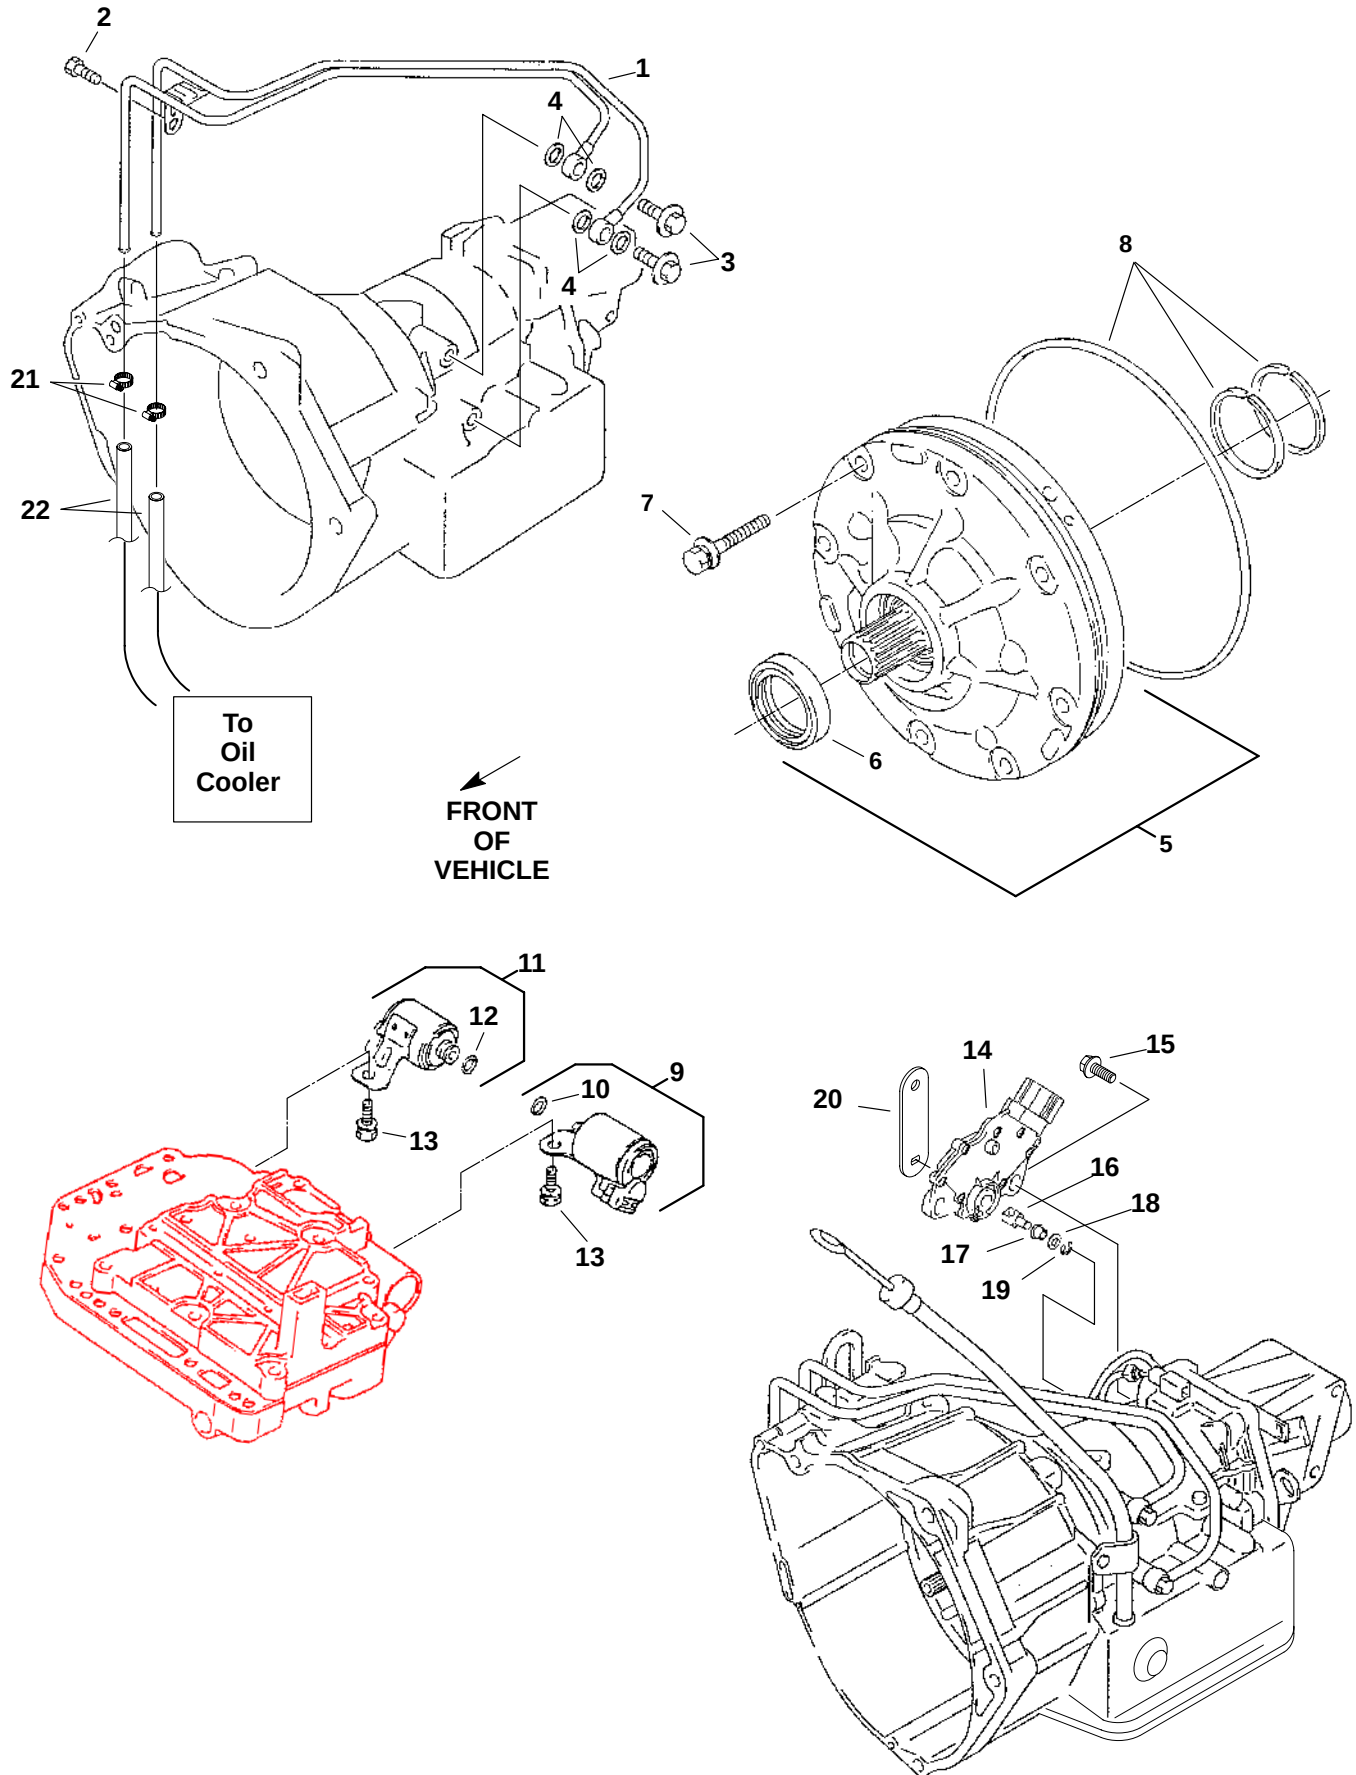


TRANSMISSION TUBES, OIL PUMP, SOLENOIDS & SHIFT SWITCH 6.16

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702843	Pipe assembly, oil	1	
2	2702849	Bolt	1	
3	2702847	Union bolt	2	
4	2702845	Gasket	4	
5	2702765	Pump, oil	1	
6	2702766	•Seal, oil pump	1	
7	2702767	Bolt, oil pump	8	
8	2702768	Ring set, oil pump seal	1	
9	2702822	Solenoid, direct clutch	1	
10	2702823	•O-ring	1	
11	2702824	Solenoid, 2nd brake	1	
12	2702823	•O-ring	1	
13	2702764	Bolt	2	
14	2702885	Switch, shift	1	
15	2702886	Bolt	1	
16	2702881	Joint, transmission shifter	2	
17	2702882	Bushing	1	
18	2702883	Washer	1	
19	2702884	E-ring	1	
20	842740	Lever, shifter	1	
21	825624	Clamp, hose	2	
22	826590	Hose, 5/16 i.d. As Req'd.		

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.17 TRANSMISSION INPUT SHAFT & CLUTCH

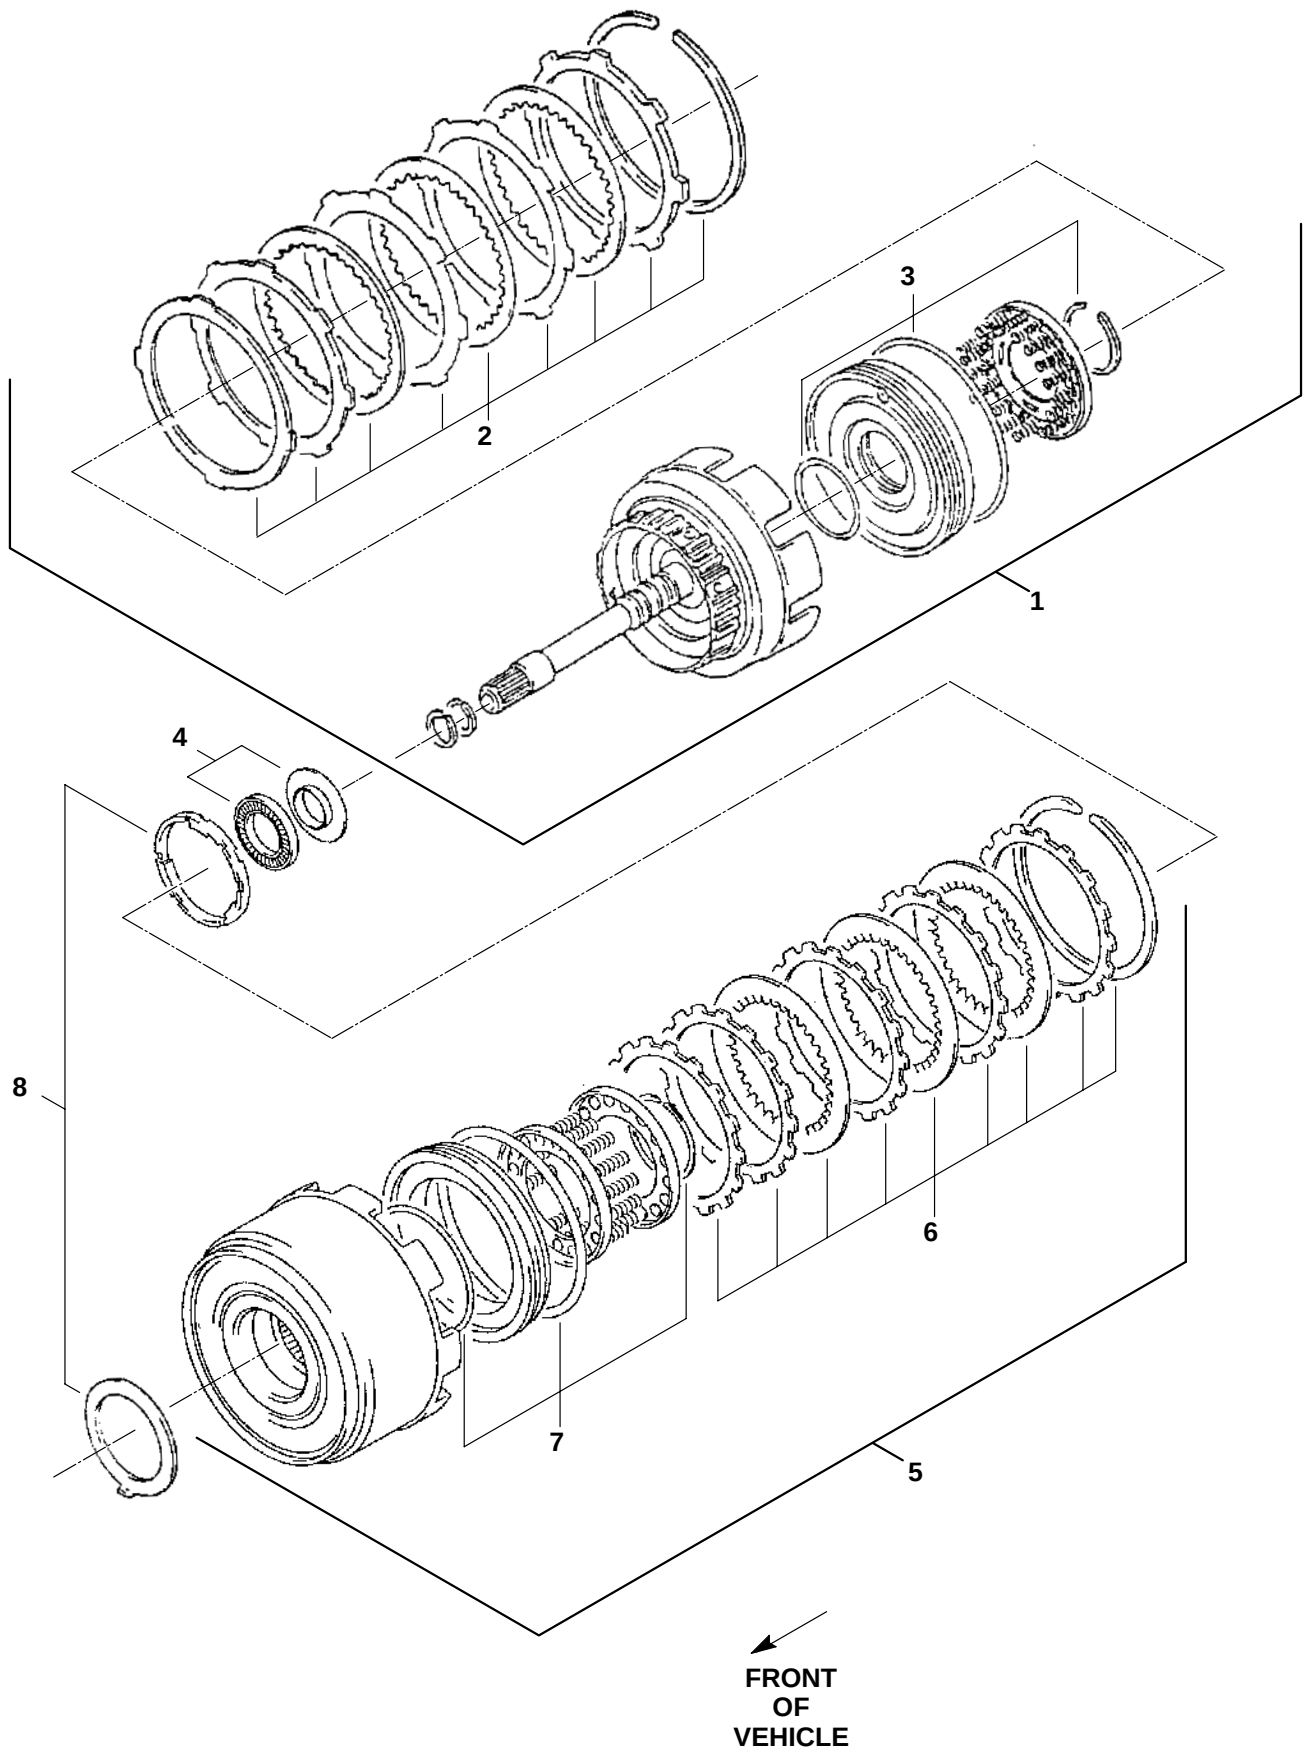


TRANSMISSION INPUT SHAFT & CLUTCH 6.17

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702769	Shaft set, input	1	
2	2702770	•Plate set, forward clutch	1	
3	2702771	•O-ring set, forward clutch	1	
4	2702772	Bearing set, thrust (No. 1)	1	
5	2702773	Clutch assembly, direct	1	
6	2702774	•Plate set, direct clutch	1	
7	2702775	•O-ring set, direct clutch	1	
8	2702776	Washer set, direct clutch	1	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.18 TRANSMISSION PLANETARY GEARS & OUTPUT SHAFT

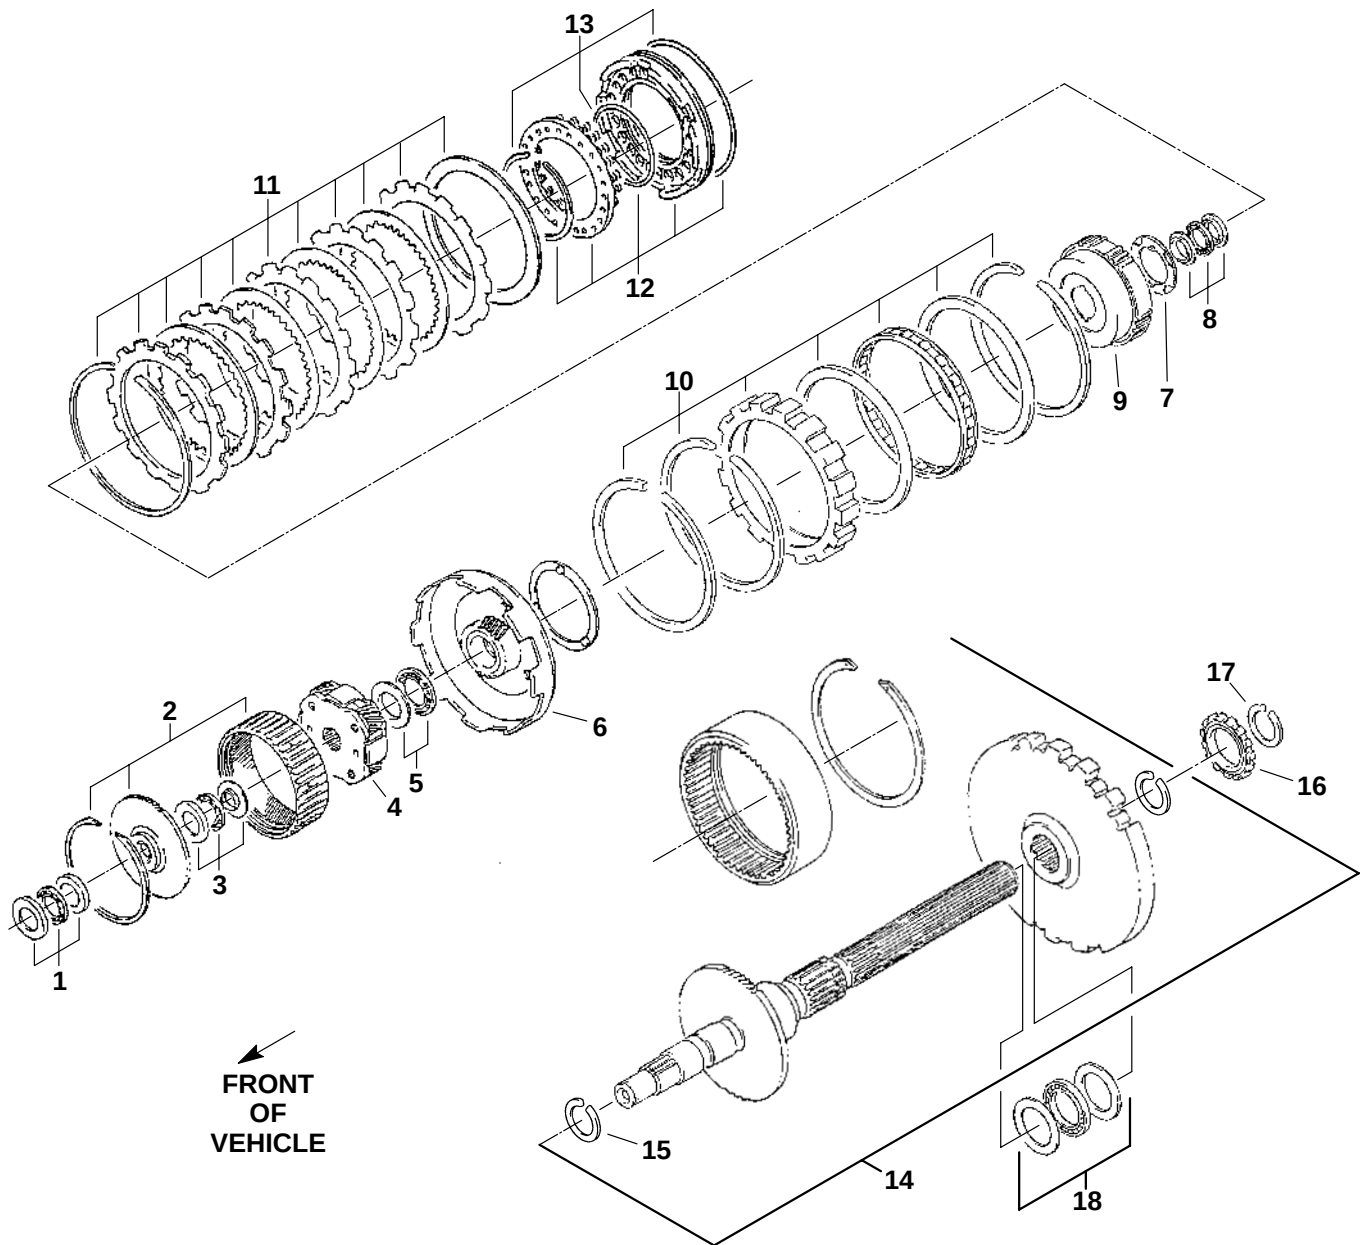



TRANSMISSION PLANETARY GEARS & OUTPUT SHAFT 6.18

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702778	Bearing set, thrust (No. 3)	1	
2	2702777	Gear assembly, forward planetary link	1	
3	2702780	Bearing set, thrust (No. 4)	1	
4	2702779	Gear assembly, front	1	
5	2702781	Bearing set, thrust (No. 5)	1	
6	2702782	Gear, planetary sun	1	
7	2702783	Washer set, thrust	1	
8	2702785	Bearing set, thrust (No. 1)	1	
9	2702784	Gear, rear planetary	1	
10	2702786	Clutch set, 1-way	1	
11	2702787	Plate set, 1st/reverse	1	
12	2702788	Piston set, 1st/reverse	1	
13	2702789	•O-ring set, 1st/reverse	1	
14	2702790	Shaft, output	1	
15	2702792	Ring, snap	1	
16	2702793	Ring, speedometer exciter	1	
17	2702794	Cir-clip, exciter ring	1	
18	2702795	Bearing, thrust (Set No. 6)	1	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.19 BRAKE BAND & SHIFT SHAFT

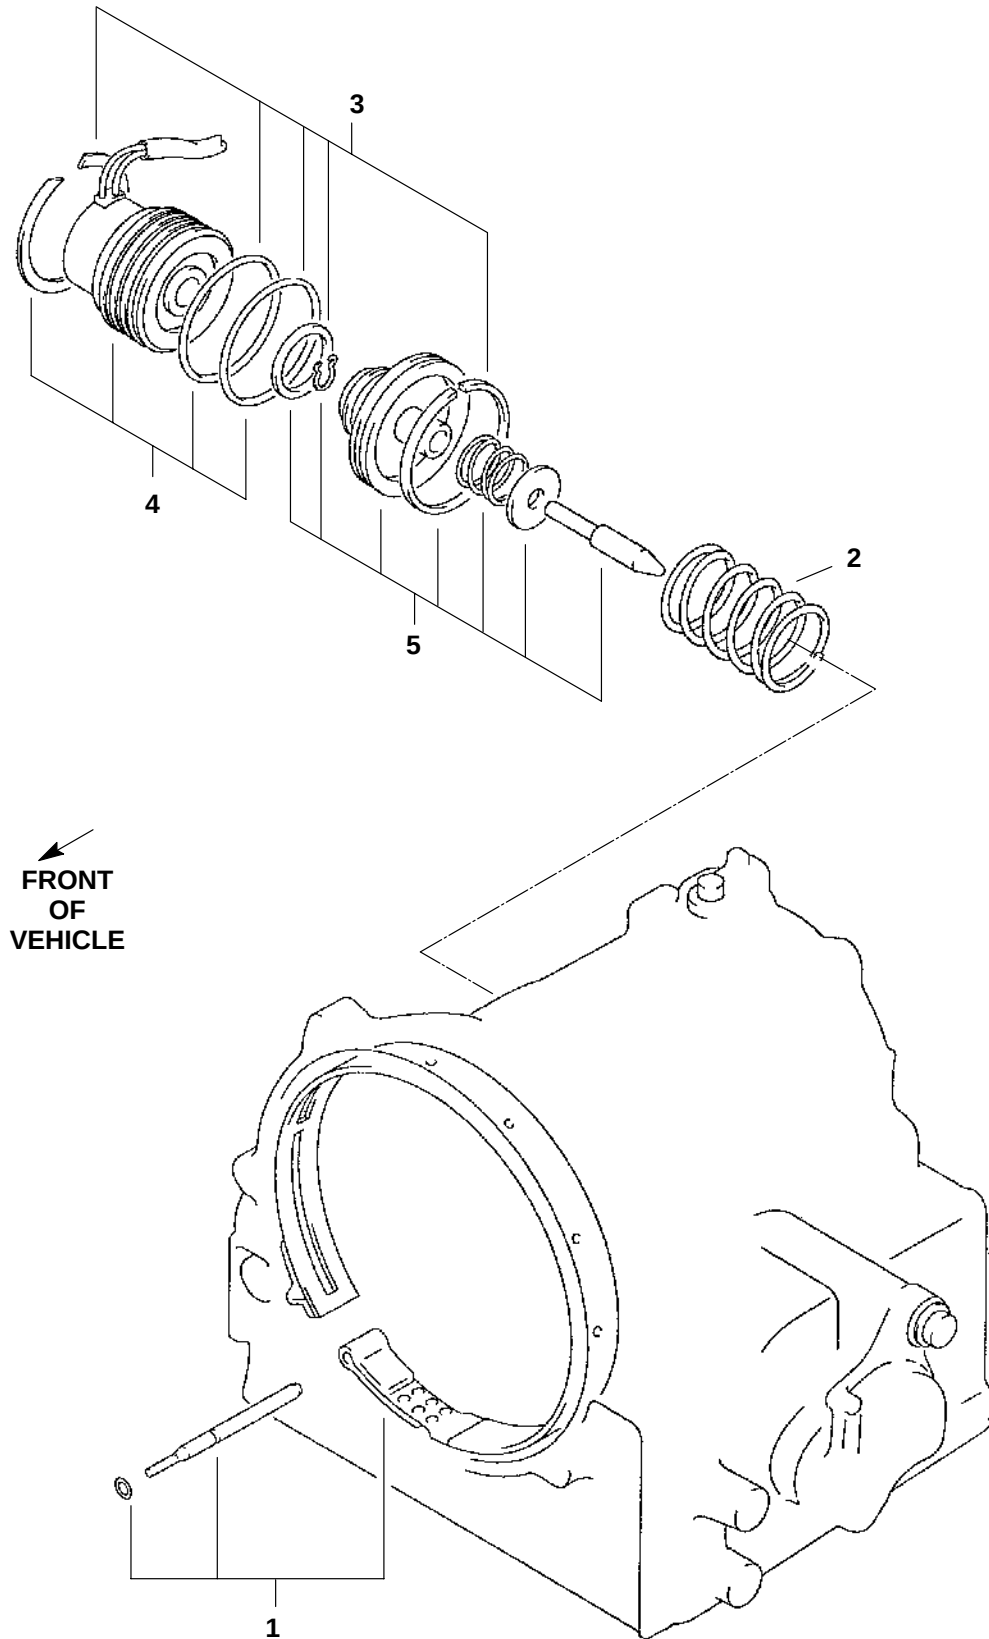


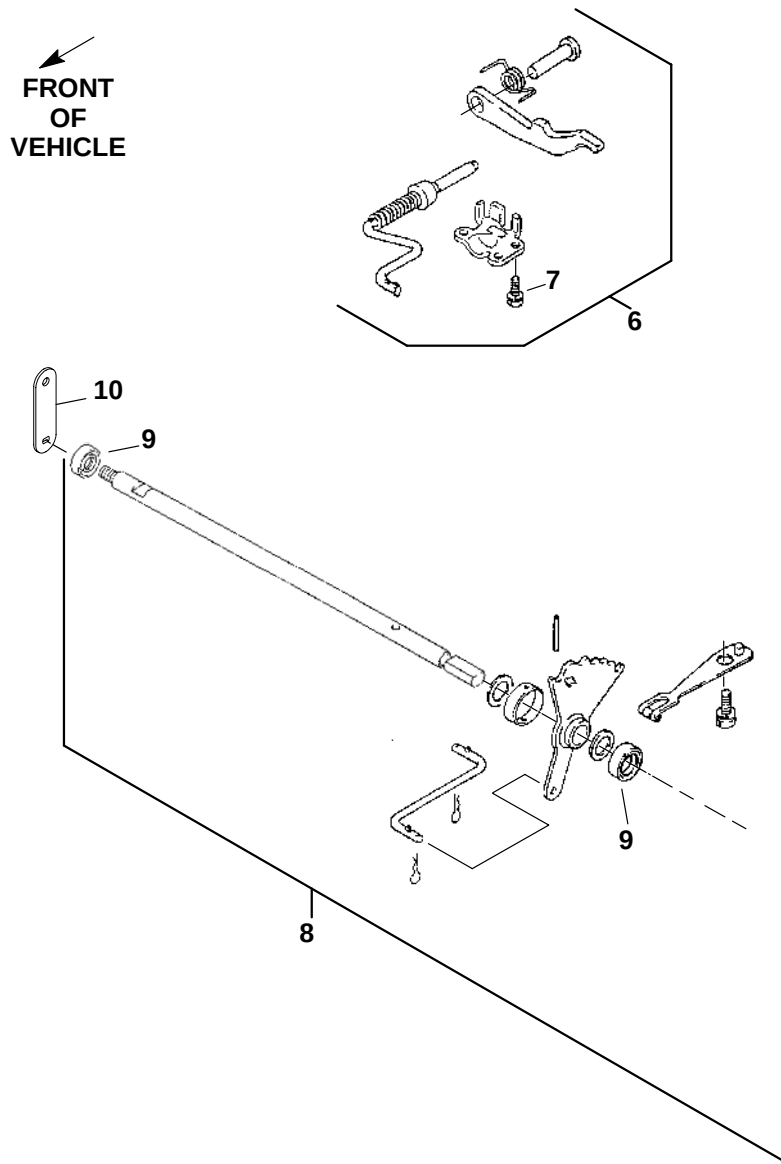

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702800	Band set, second brake	1	
2	2702805	Spring, second brake piston return	1	
3	2702801	Piston assembly, second brake	1	
4	2702804	Cover set, 2nd brake	1	
5	2702801	Ring set, 2nd brake seal	1	
6	2702796	Pole set, parking	1	
7	2701921	•Bolt	3	
8	2702797	Shaft set, lever	1	
9	2702798	•Seal	2	
10	842740	Lever, shifter	1	


•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.20 TRANSMISSION VALVE

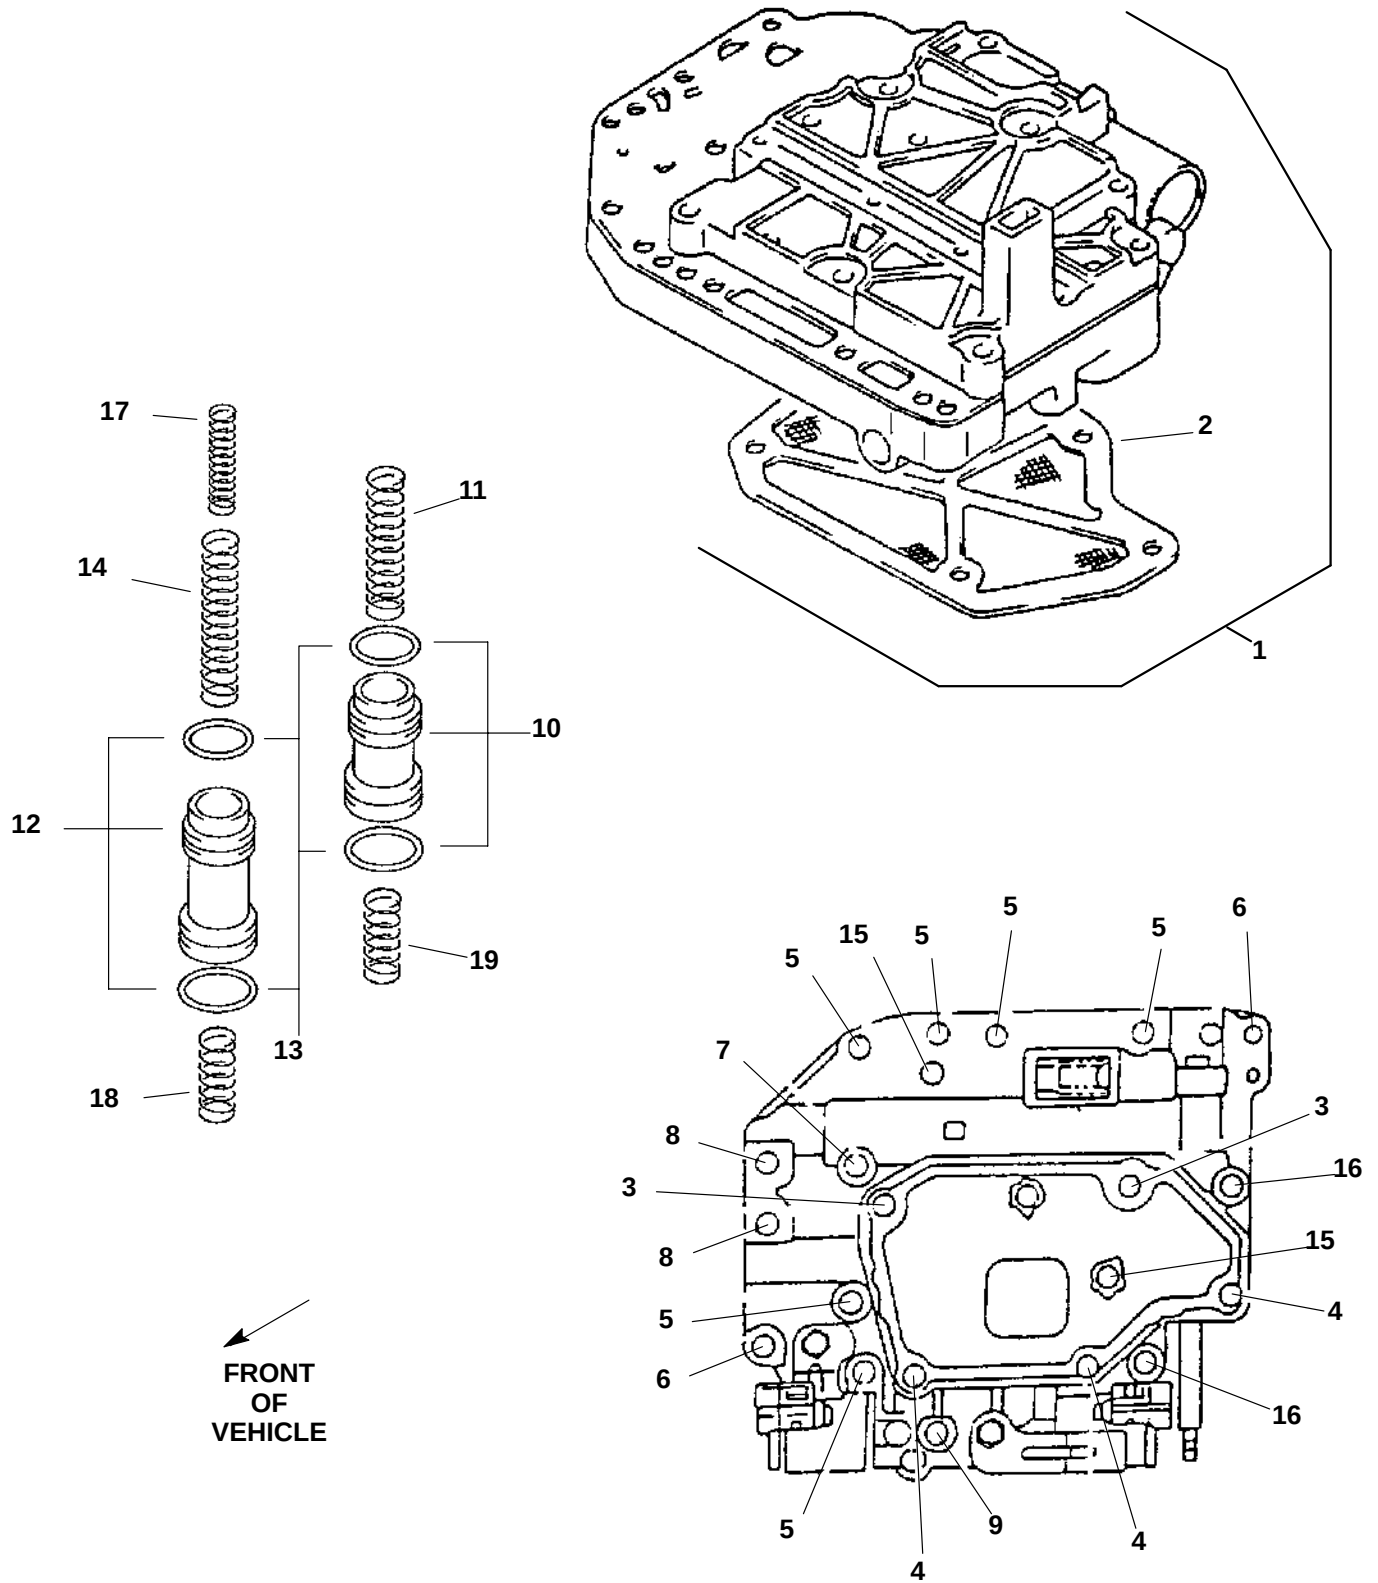

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702821	Body assembly transmission valve	1	
2	2702825	Strainer, transmission	1	
3	2702826	Bolt, valve body, No. 5	2	
4	2702827	Bolt, valve body, No. 6	3	
5	2702836	Bolt, valve body, No. 1	6	
6	2702834	Bolt, valve body, No. 2	2	
7	2702835	Bolt, valve body, No. 3	1	
8	2702837	Bolt, valve body, No. 4	2	
9	2702838	Bolt, valve body, No. 6	1	
10	2702828	Piston set, C1 accumulator	1	
11	2702829	Spring, forward piston	1	
12	2702830	Piston set, B1 accumulator	1	
13	2702833	Seal ring set, accumulator	1	
14	2702831	Spring, accumulator 2nd brake position	1	
15	2702839	Bolt, valve body, No. 1	2	
16	2702840	Bolt, valve body, No. 2	2	
17	2702841	Spring, 2nd brake No. 2	1	
18	2702842	Spring, 2nd brake No. 3	1	
19	2702832	Spring, accumulator forward piston lower	1	


6.21 MAIN FRAME

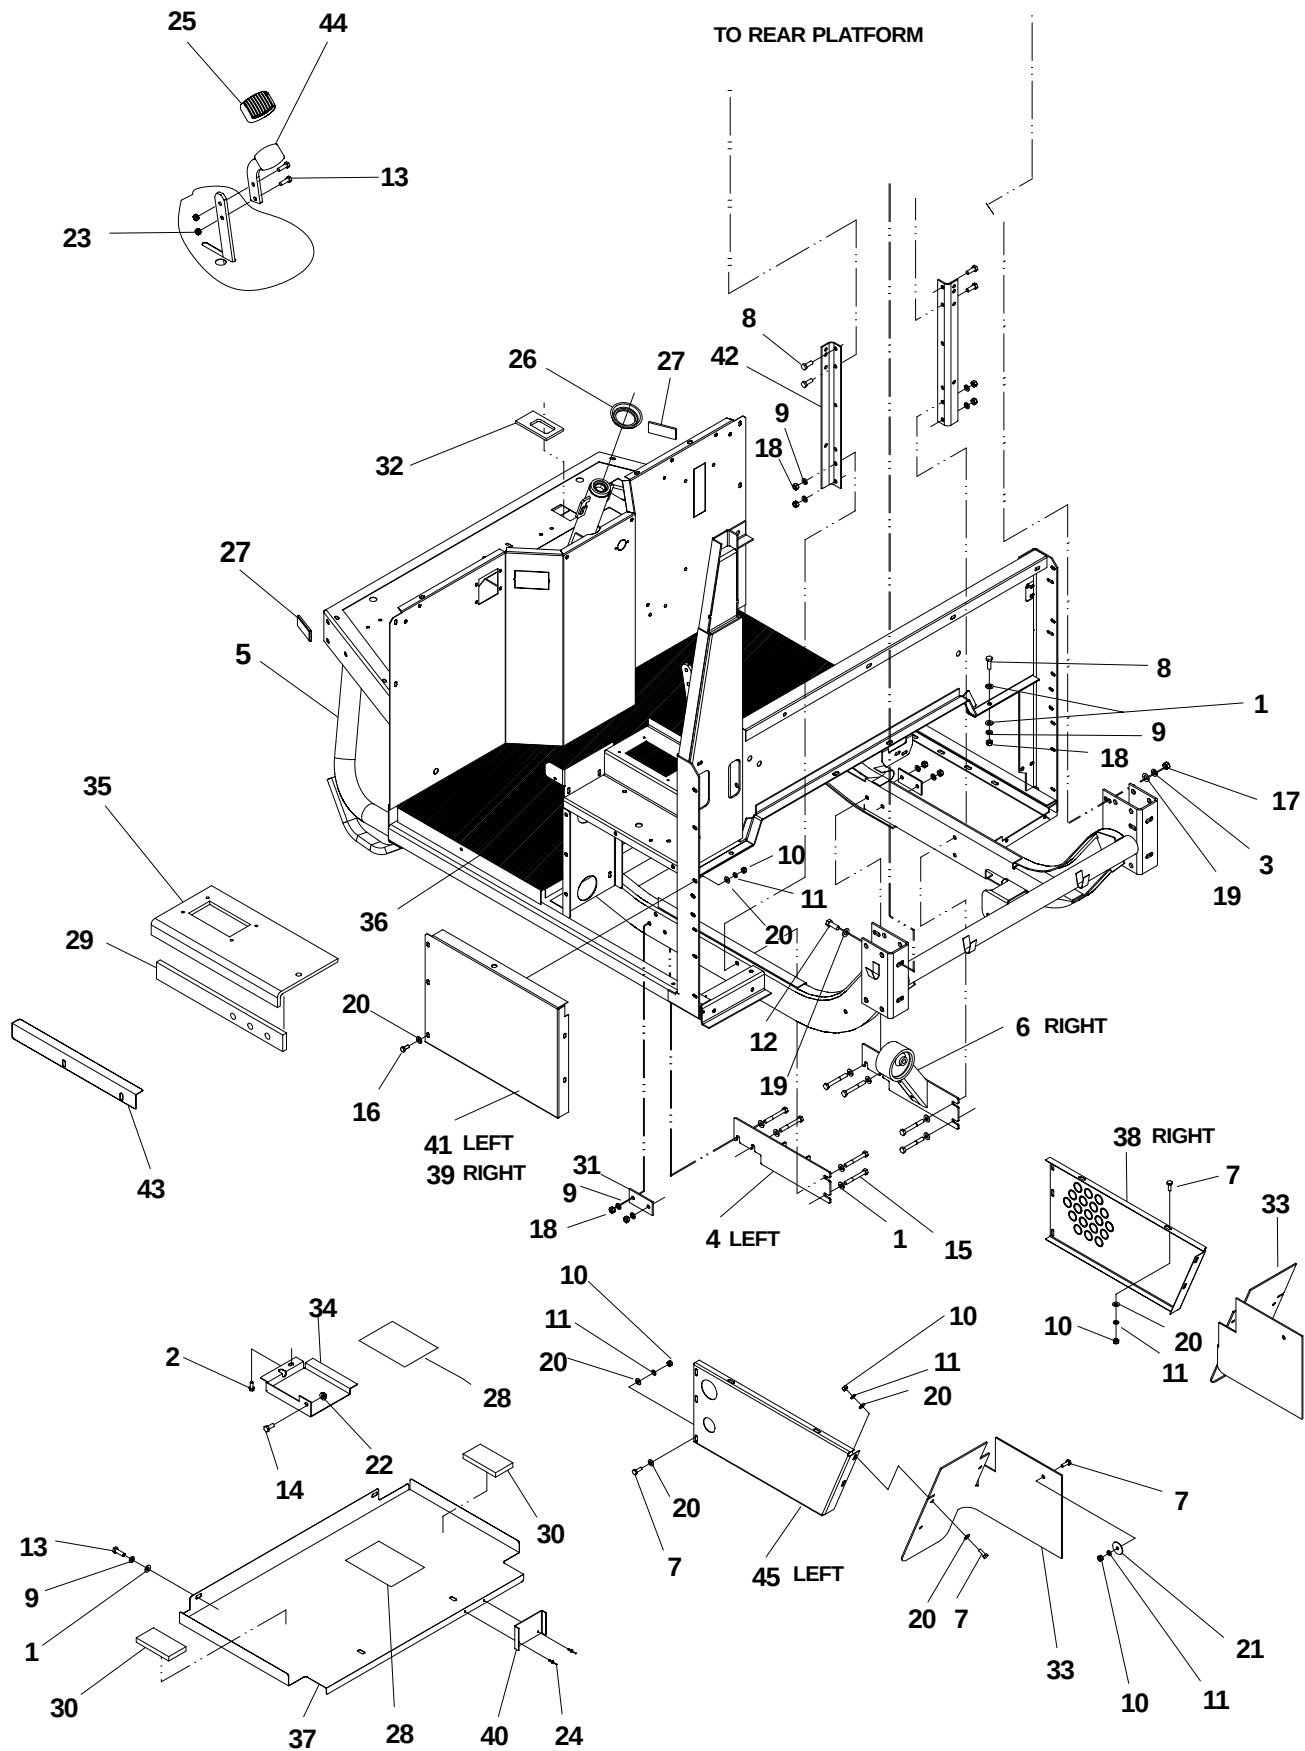

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16	12	
2	112050	Screw, 1/4-20 x 5/8, tapping	1	
3	120177	Lockwasher, 3/8	2	
4	2701419.7	Motor mount, LEFT	1	
5	2702232.7	Frame, main	1	
6	2702236	Motor mount, RIGHT	1	
7	300646	Screw, 1/4-20 x 3/4	16	
8	306322	Screw, 5/16-18 x 7/8	6	
9	306325	Lockwasher, 5/16	10	
10	306375	Nut, 1/4-20	18	
11	306396	Lockwasher, 1/4	18	
12	306414	Screw, 3/8-16 x 1	4	
13	306416	Screw, 5/16-18 x 1	4	
14	306450	Screw, 5/16-18 x 3/4	1	
15	306464	Screw, 5/16-18 x 2 1/2	8	
16	306487	Screw, 1/4-20 x 5/8	6	
17	306562	Nut, 3/8-16	8	
18	306932	Nut, 5/16-18	12	
19	306981	Washer, 13/32	8	
20	308090	Washer, 1/4	22	
21	548175	Washer, 1/4	2	
22	548911	Nut, 5/16-18	1	
23	800290	Nut, 5/16-18, centerlock	2	
24	800390	Rivet, 1/8 x 25/64	2	
25	810152	Cover	1	
26	821606	Grommet	1	
27	825933	Reflector, yellow	2	
28	828577	Pad	2	
29	828998	Seal, foam	1	
30	829880	Pad	2	
31	830762	Plate	2	
32	836389	Gasket, horn	1	
33	837690	Guard, splash	2	
34	838477	Guard, throttle pedal	1	
35	838688	Cover, foam	1	
36	838706	Mat, floor	1	
37	839905	Pan, skid	1	
38	840230	Panel, RIGHT	1	
39	840233	Panel, RIGHT side	1	
40	842868	Plate, oil deflector	1	
41	845073.7	Panel, LEFT filler	1	
42	843218	Angle, platform support	2	
43	843219	cover, pad	1	
44	891795	Pad, brake	1	
45	894057	Panel, LEFT	1	


6.22 PLATFORM FRAME

Touch-Up Paint
12 oz. Spray Can
..... Part No. 843311
1 Qt. Can
..... Part No. 843312

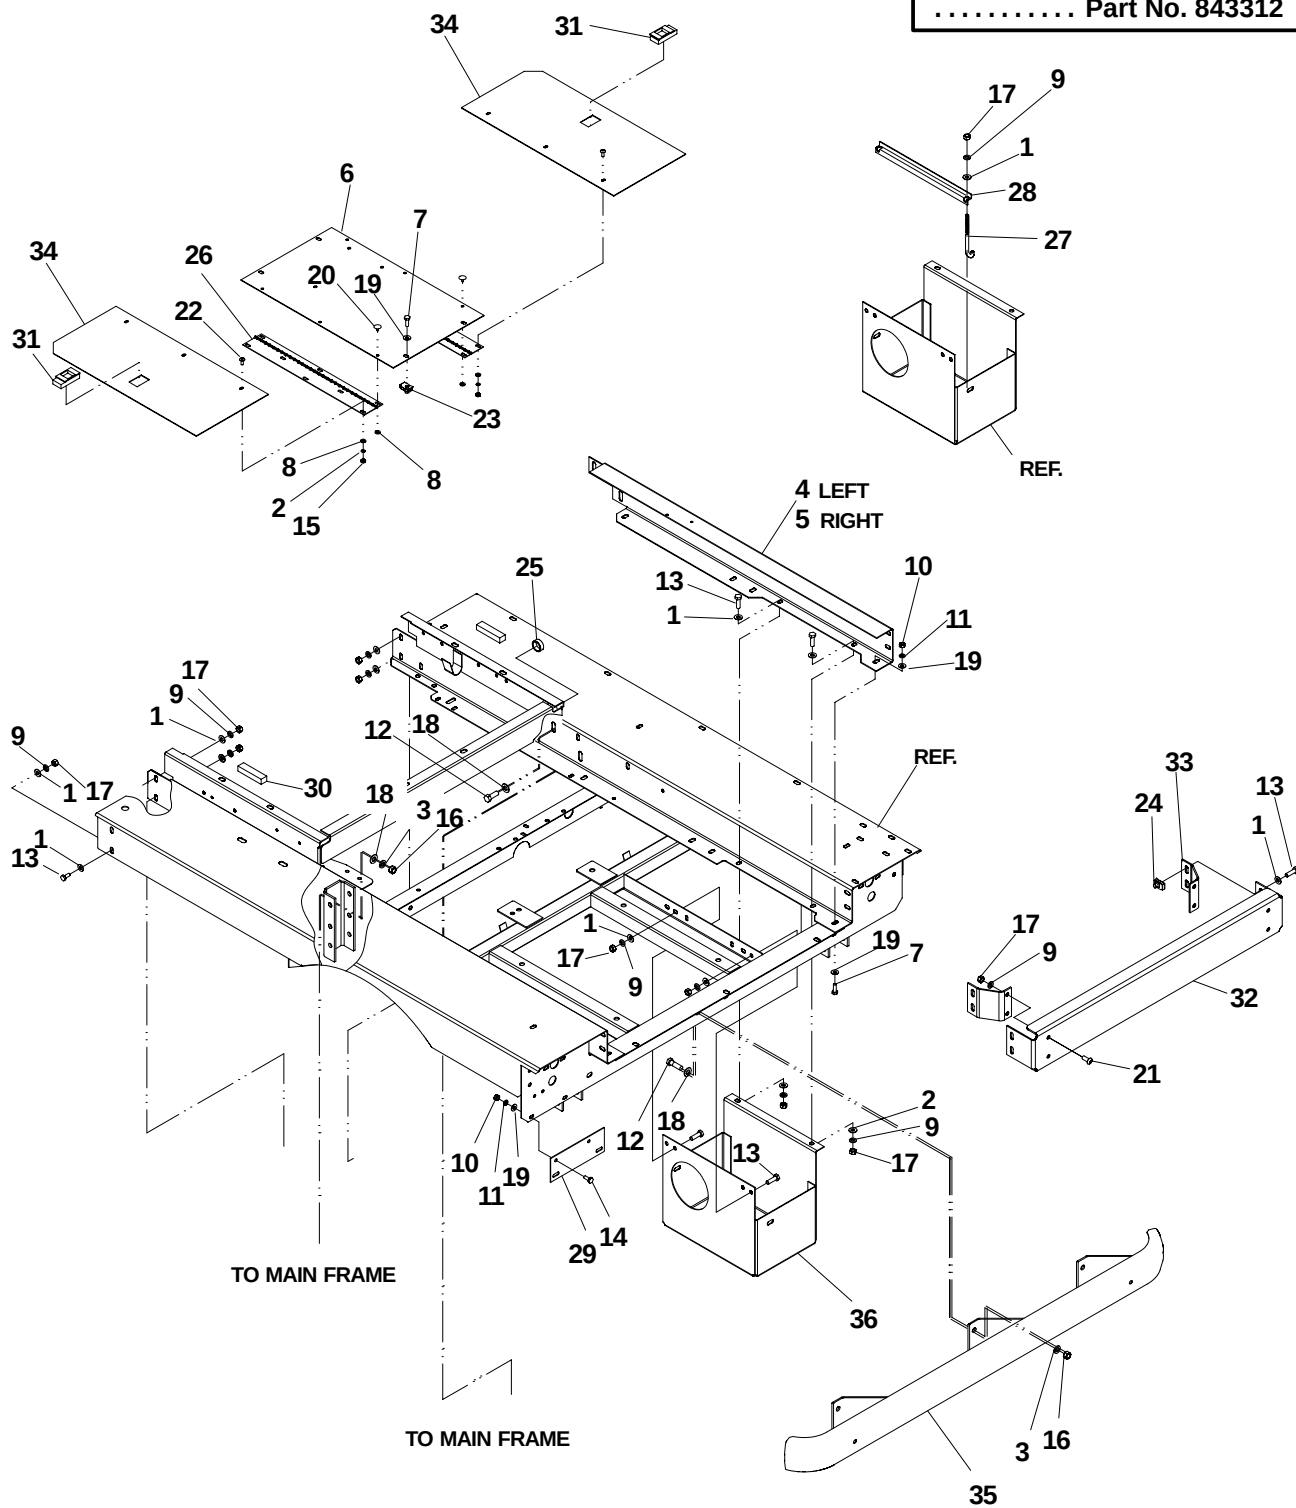


Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16	28	
2	120052	Lockwasher, #10	6	
3	120177	Lockwasher, 3/8	4	
4	2700615.7	Channel, LEFT	1	
5	2700616.7	Channel, RIGHT	1	
6	2702277.12	Cover	1	
7	300646	Screw, 1/4–20 x 3/4	6	
8	303952	Washer, 13/64	12	
9	306325	Lockwasher, 5/16	22	
10	306375	Nut, 1/4–20	6	
11	306396	Lockwasher, 1/4	6	
12	306414	Screw, 3/8–16 x 1	7	
13	306416	Screw, 5/16–18 x 1	14	
14	306487	Screw, 1/4–20 x 5/8	2	
15	306531	Nut, #10–24	6	
16	306562	Nut, 3/8–16	3	
17	306932	Nut, 5/16–18	16	
18	306981	Washer, 13/32	10	
19	308090	Washer, 1/4	16	
20	548238	Rivet, 3/16 x 5/8	6	
21	800177	Screw, 5/16–18 x 3/4	4	
22	800271	Screw, #10–24 x 1/2	6	
23	800449	Nut, 1/4–20	4	
24	800696	Nut, 5/16–18	4	
25	810441	Grommet	1	
26	812208	Hinge, continuous	2	
27	812313	J-bolt	2	
28	815847	Hold down, battery	1	
29	826294	Plate, mounting	1	
30	828378	Sealer As Req'd.		
31	835213	Latch, slide	2	
32	840403	Bumper, rear	1	
33	840404	Bracket, rear bumper	2	
34	843206	Door	2	
35	883883	Bumper	1	
36	884183	Box	1	

6.23 FRONT BODY

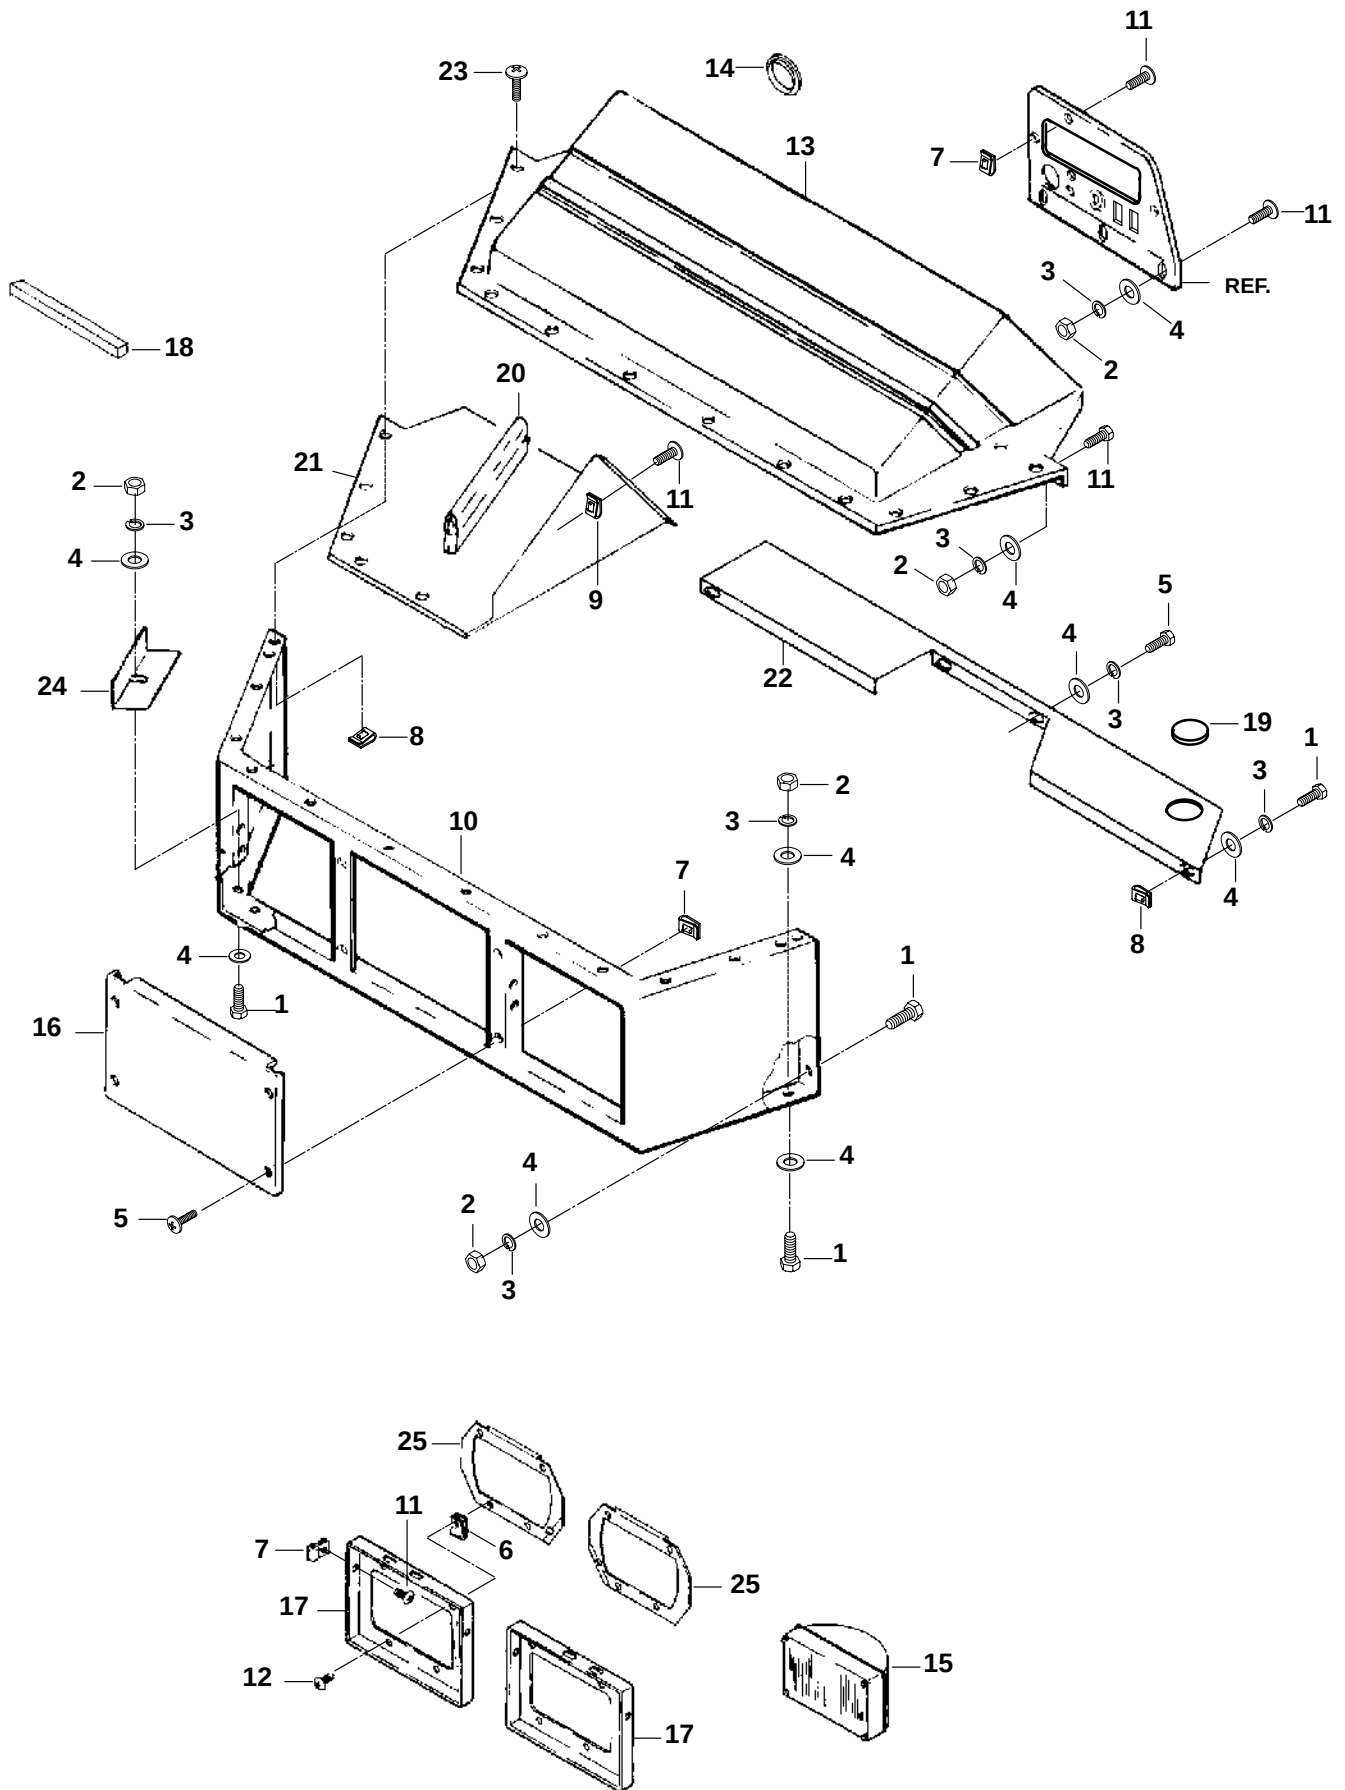


Ref. No.	Part No.	Description	No. Req'd	Notes
1	300646	Screw, 1/4-20 x 3/4"	11	
2	306375	Nut, 1/4-20	17	
3	306396	Lockwasher, 1/4"	27	
4	308090	Washer, 1/4"	21	
5	800026	Screw, P.T.H., 1/4-20 x 3/4"	2	
6	800169	Nut, speed, 1/4-20	4	
7	800279	Nut, speed, 1/4-20	4	
8	800449	Nut, speed, 1/4-20	12	
9	800495	Nut, speed, 1/4-20	3	
10	885833	Body, front	1	
11	800582	Screw, P.T.H., 1/4-20 x 3/4"	10	
12	800739	Screw, P.T.H., 1/4-20 x 1 1/2"	6	
13	889159	Panel, dash	1	
14	829101	•Plug, hole, defroster	1	
15	837303	Headlight, rectangular	2	
16	843210	Panel, front body	1	
17	843209	Panel, headlight	2	
18	830355	Seal, rubber, 35' (10.7M)	As Req'd	
19	842863	Plug, access	1	
20	830908	Seal, push on, 25' (7.6M)	As Req'd	
21	843208	Panel, glove box	1	
22	843212	Brace, dash	1	
23	833830	Screw, shoulder, 1/4-20 x 3/4"	13	
24	833943	Bracket, clamping	2	
25	843211	Panel, retainer	2	

6.24 ENGINE COVER

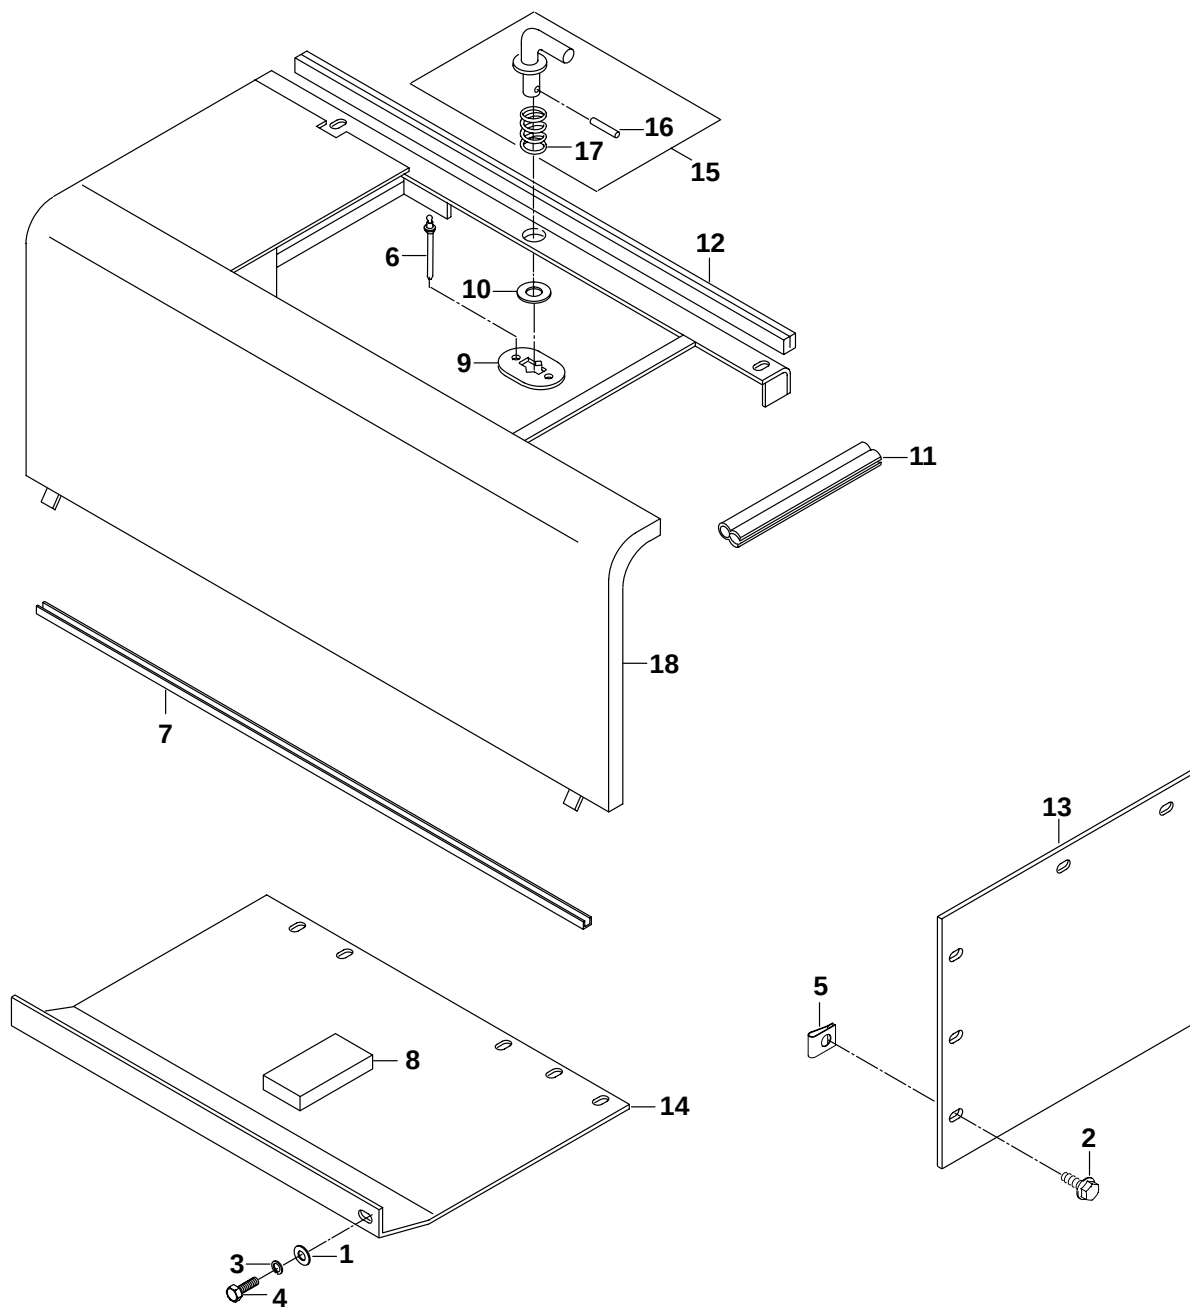

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16"	4	
2	112050	Screw, tapping, 1/4-20 x 5/8"	6	
3	306325	Lockwasher, 5/16"	6	
4	306416	Screw, 5/16-18 x 1"	4	
5	800279	Nut, speed, 1/4-20	6	
6	800390	Rivet, pop, 1/8"	2	
7	828378	Weatherstrip, 50' (15.2M)	As Req'd	
8	829880	Pad, panel	1	
9	830780	Catch, latching	1	
10	830781	Retainer, engine cover	1	
11	830908	Seal, push-on, 25' (7.6M)	As Req'd	
12	831004	Weatherstrip, 25' (7.6M)	As Req'd	
13	843207	Panel, left cover	1	
14	839905	Pan, skid	1	
15	887443	Latch, engine cover	1	
16	316935	Pin, spirol, 5/32" x 5/8"	1	
17	830658	Spring	1	
18	888386	Cover, engine	1	


6.25 FLOORMAT, INSULATION, WEATHERSTRIP & MOLDINGS

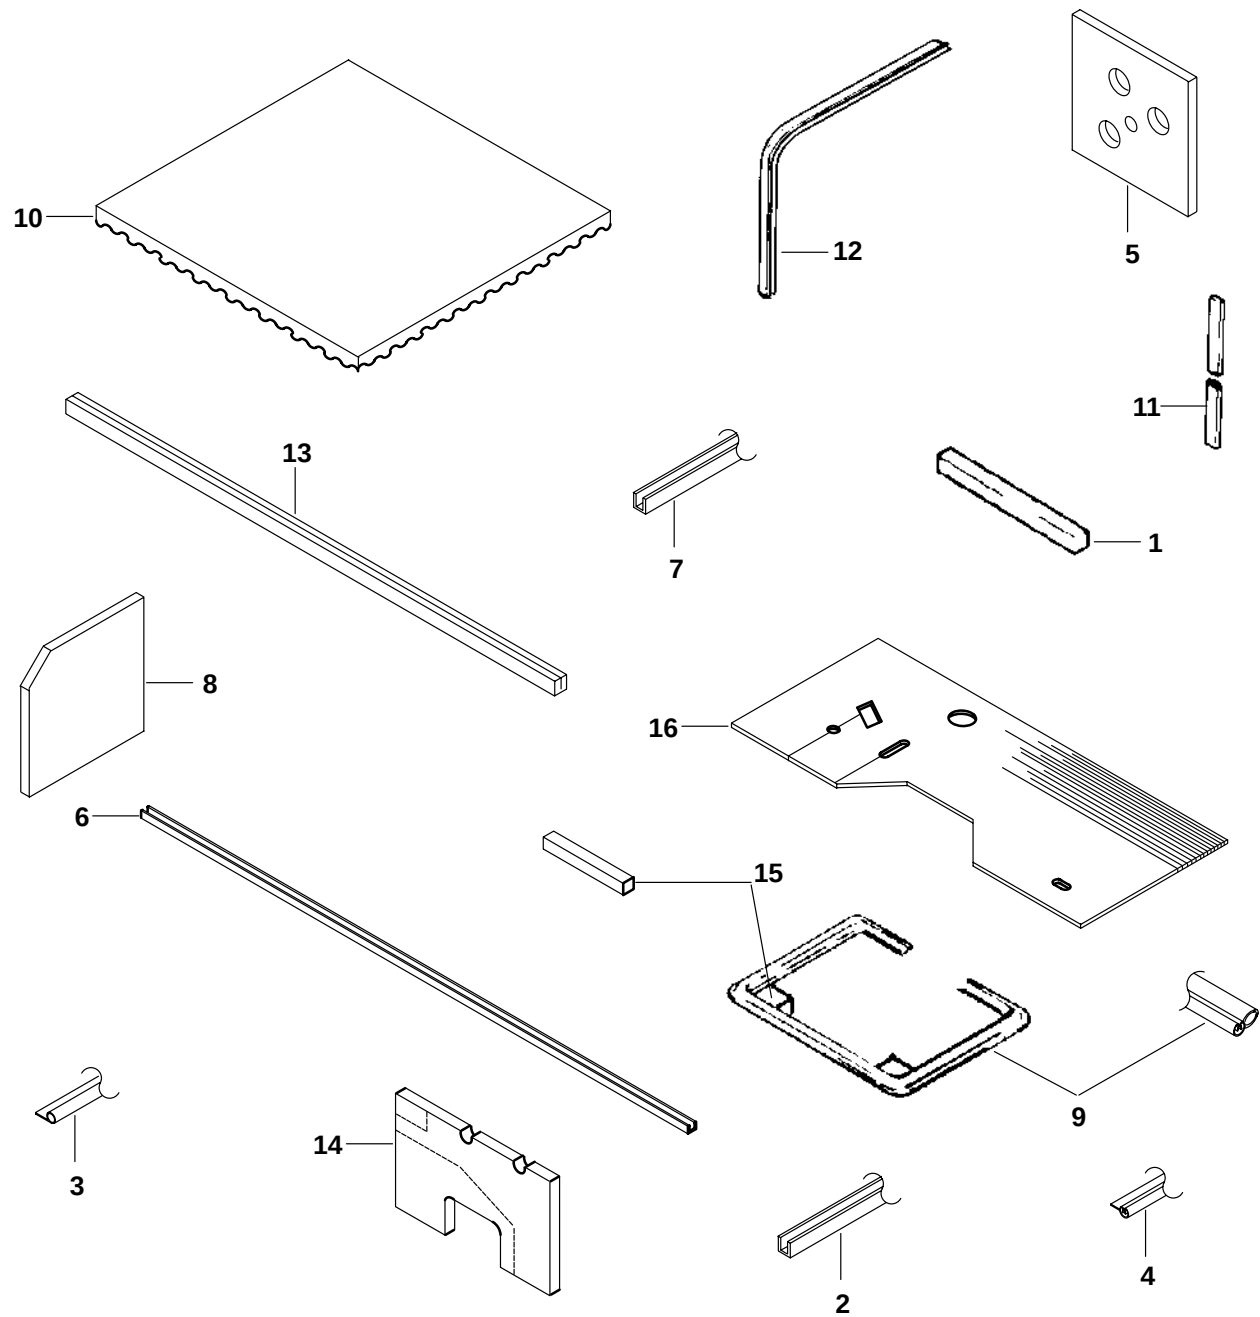

FLOORMAT, INSULATION, WEATHERSTRIP & MOLDINGS 6.25

Ref. No.	Part No.	Description	No. Req'd	Notes
1	821893	Molding, 12' (3.7M)	As Req'd	
2	825840	Molding, window	1	
3	825842	Weatherstrip	As Req'd	
4	825924	Seal, push-on	1	
5	827769	Insulation, engine cover	1	
6	828378	Weatherstrip	As Req'd	
7	828733	Molding, window	3	
8	828834	Foam	1	
9	828976	Seal, push-on, 25' (7.6 M)	As Req'd	
10	829735	Foam, roof	1	
11	830355	Seal, rubber, 35' (10.7M)	As Req'd	
12	830908	Seal, push-on, 25' (7.6M)	As Req'd	
13	831004	Weatherstrip	As Req'd	
14	833745	Insulation, engine cover	1	
15	833851	Seal, neoprene, 1/2" x 1/2" x 7" (13 mm x 13 mm x 178 mm)	2	
16	838706	Mat, floor	1	


6.26 REAR BOX & SIDES (SIDE OPENING)

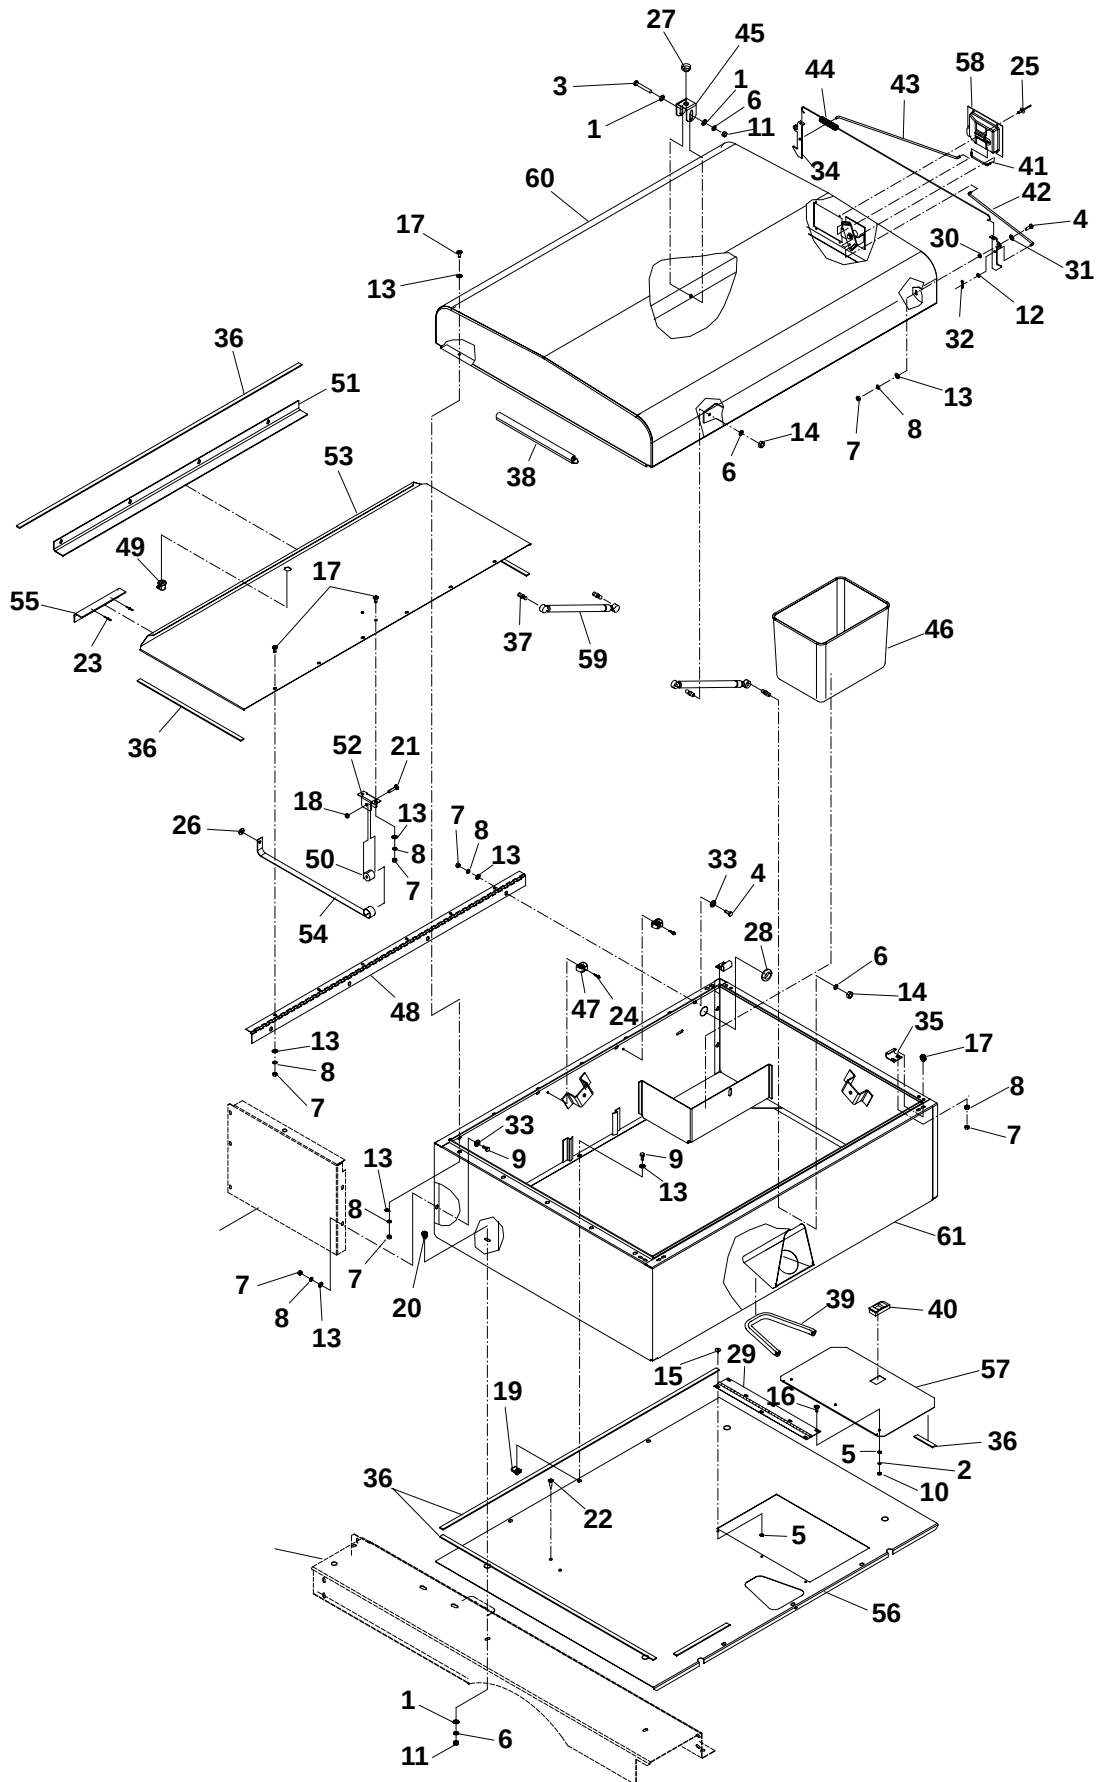

REAR BOX & SIDES (SIDE OPENING) 6.26

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16"	6	
2	120052	Lockwasher, #10	3	
3	2702098	Screw, 5/16-18 x 2 1/4"	1	
4	300646	Screw, 1/4-20 x 3/4"	6	
5	303952	Washer, 13/64	3	
6	306325	Lockwasher, 5/16"	11	
7	306375	Nut, 1/4-20	21	
8	306396	Lockwasher, 1/4"	21	
9	306487	Screw, 1/4-20 x 5/8	9	
10	306531	Nut, #10-24	3	
11	306932	Nut, 5/16-18	7	
12	308089	Washer, #10	6	
13	308090	Washer, 1/4"	19	
14	450324	Nut, M8	4	
15	548238	Rivet, pop, 3/16	3	
16	800021	Screw, #10-32 x 1/2	3	
17	800026	Screw, 1/4-20 x 3/4"	17	
18	800059	Nut, lock, 1/4-20	1	
19	800169	Nut, lock, 1/4-20	5	
20	800177	Screw, P.T.H., 5/16-18 x 3/4"	4	
21	800263	Screw, P.T.H., 1/4-20 x 1 1/4"	1	
22	800384	Screw, 1/4 x 1, tapping	2	
23	800390	Rivet, pop, 1/8	2	
24	800475	Rivet, pop, 13/64"	2	
25	800483	Rivet, pop, 3/16	4	
26	809183	Washer, 1/4"	1	
27	810149	Bumper, rubber	1	
28	810441	Grommet	2	
29	812208	Hinge, continuous	1	
30	814585	Bushing	2	
31	816307	Washer, 17/64	2	
32	821164	Pin, hair, 1/4 x 1 1/8	6	
33	821427	Washer, sealing 1/4	11	
34	824484	Latch	2	
35	824576	Plate	2	
36	828378	Weatherstripping	As Req'd.	
37	828879	Stud, ball, 10mm x 8mm x 1.25mm	4	
38	828976	Weatherstrip	As Req'd.	
39	831004	Weatherstripping	As Req'd.	
40	835213	Latch, slide	1	
41	837960	Rod, short	1	
42	837961	Rod, medium	1	
43	837962	Rod, long	1	
44	838053	Spring, box latch	1	
45	838072	Support, box	1	
46	838223	Box, battery, plastic marine	1	
47	838225	Clip, spring	2	
48	840402	Hinge, cover	1	
49	840436	Lock, paddle handle w/key	1	
50	840438	Bushing, cover spring	1	
51	843169	Angle, cover mount	1	
52	843213	Bracket, spring bushing	1	
53	843217	Cover, box to cab	1	
54	843276	Spring, cover	1	
55	843474	Angle, platform support	1	
56	844417	Panel, floor	1	
57	844880	Door	1	
58	885927	Handle, paddle with key	1	
59	886257	Spring, gas	2	
60	891250	Cover, police box	1	
61	894631	Box, lower	1	


6.27 REAR SPRING

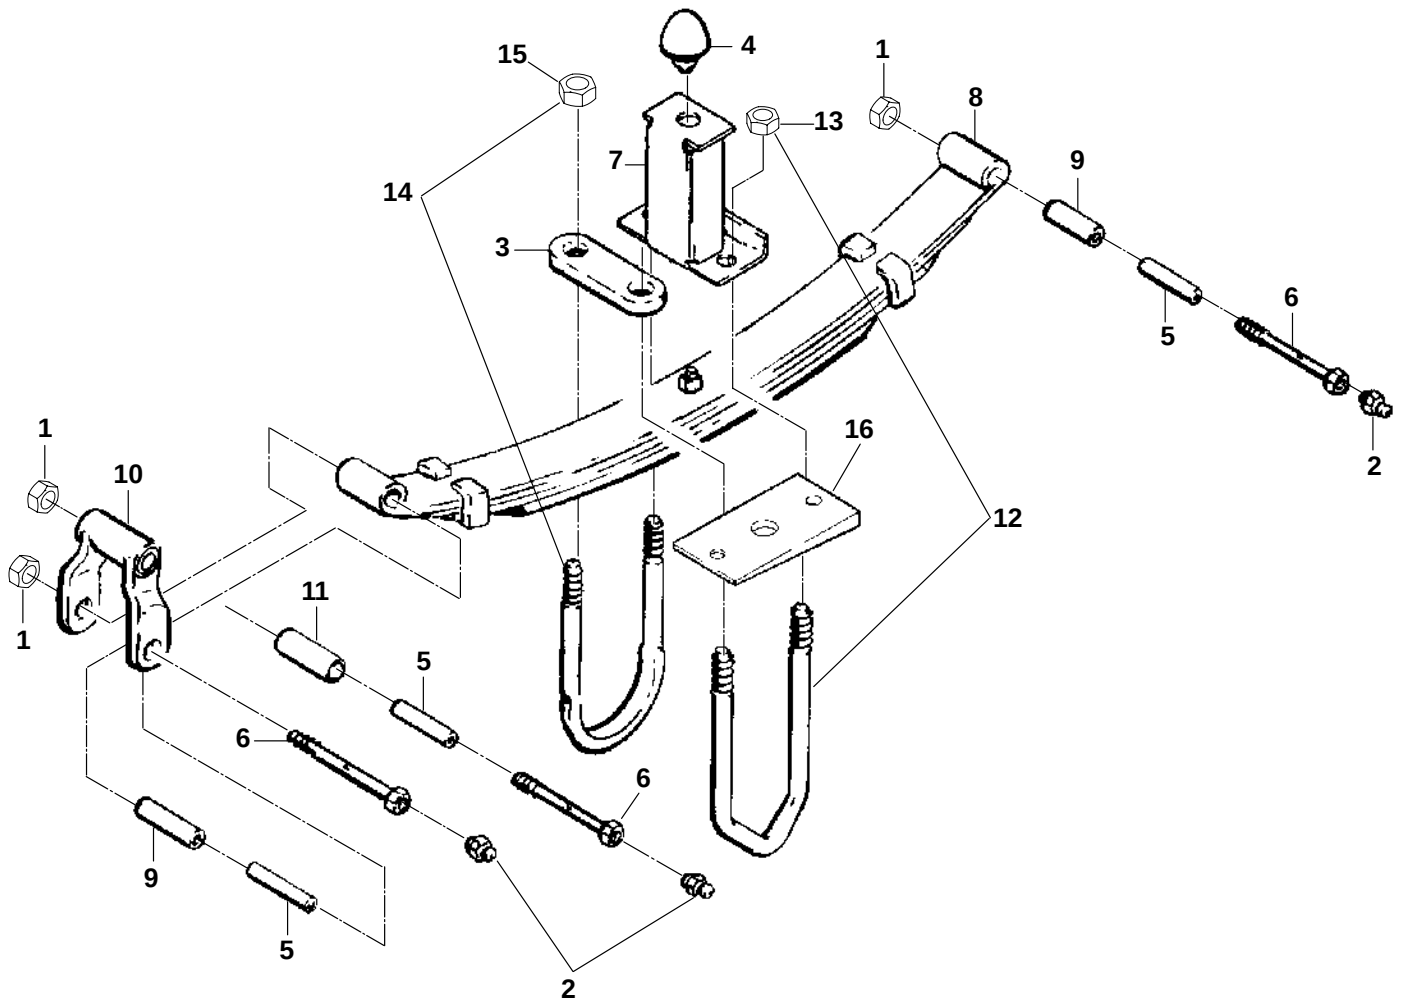

Ref. No.	Part No.	Description	No. Req'd	Notes
1	800294	Nut, lock, 7/16-14	6	
2	2702168	Fitting, lubrication, 1/4-28	6	
3	812218	Plate	2	
4	813850	Bumper, rubber	2	
5	828946	Bushing	6	
6	828948	Screw, shackle, 7/16-14 x 3 1/4"	4	
7	834979	Upstop	2	
8	886014	Spring, rear	2	
9	821734	•Bushing	2	
10	886016	Shackle, spring	2	
11	805196	•Bushing	2	
12	887187	U-bolt, 2" (51 mm) w/nuts	2	
13	548061	•Nut, lock, 7/16-20	2	
14	887188	U-bolt, 2 1/2" (64 mm) w/nuts	2	
15	548061	•Nut, lock, 7/16-20	2	
16	838409	Spacer, leaf spring	2	

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.


6.28 FRONT FORK

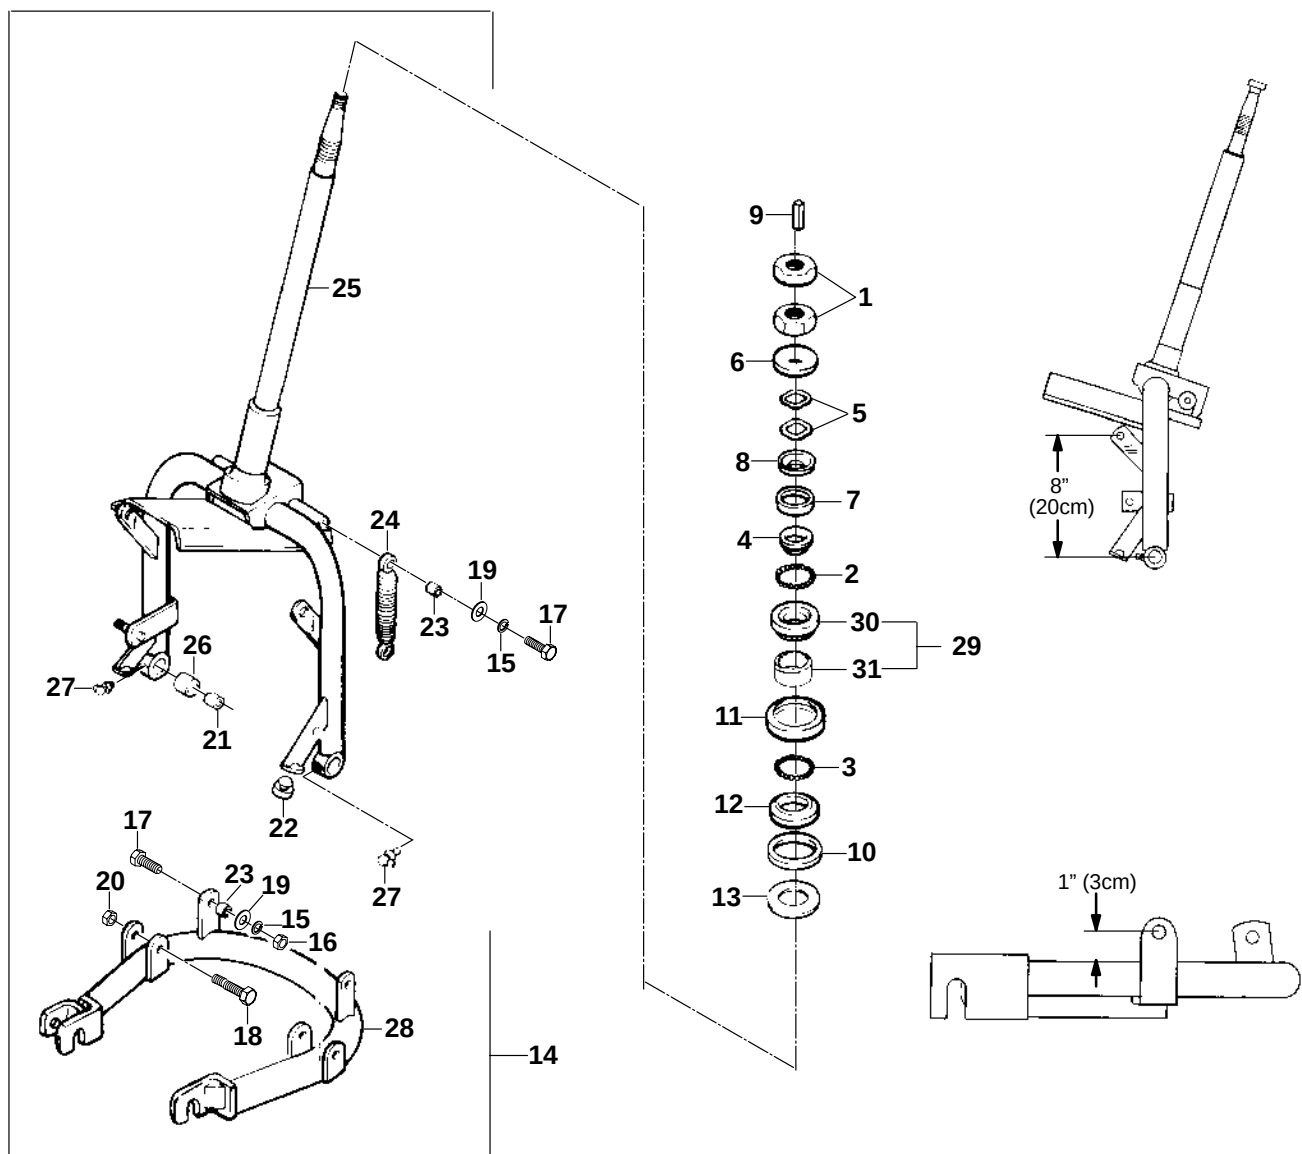

Ref. No.	Part No.	Description	No. Req'd	Notes
1	305134	Nut, jam, 7/8-14	2	
2	800128	Ball, bearing, 3/16" (5mm)	20	
3	800130	Ball, bearing, 1/4" (6mm)	28	
4	808076	Cone, upper bearing	1	
5	809221	Washer, wave	2	
6	809255	Cover, dust shield	1	
7	812167	Seal, dust	1	
8	814961	Washer	1	
9	816659	Key, 5/32" x 5/32" x 1 1/4"	1	
10	825679	Shield, felt dust	1	
11	825681	Cup, bearing	1	
12	825682	Cone, bearing	1	
13	825683	Washer, front fork	1	
14	891767	Fork, complete	1	
15	120177	•Lockwasher, 3/8"	4	
16	306562	•Nut, 3/8-16	2	
17	306835	•Screw, 3/8-16 x 1 1/4"	4	
18	311396	•Screw, 7/16-14 x 2 1/4"	2	
19	604174	•Washer, 3/8"	4	
20	800293	•Nut, lock, 7/16-14	2	
21	808969	•Bushing	2	
22	810149	•Bumper, rubber	2	
23	816697	•Bushing	4	
24	825403	•Spring	2	
25	891764	•Tube, fork	1	
26	805189	••Bushing	2	
27	807442	••Fitting, lubrication, 1/4-28	2	
28	891765	•Tube, axle mounting	1	
29	886600	Cup, bearing, complete	1	
30	812098	•Cup, bearing	1	
31	829285	•Bushing, upper fork	1	

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.29 STEERING GEAR, WHEEL & HORN

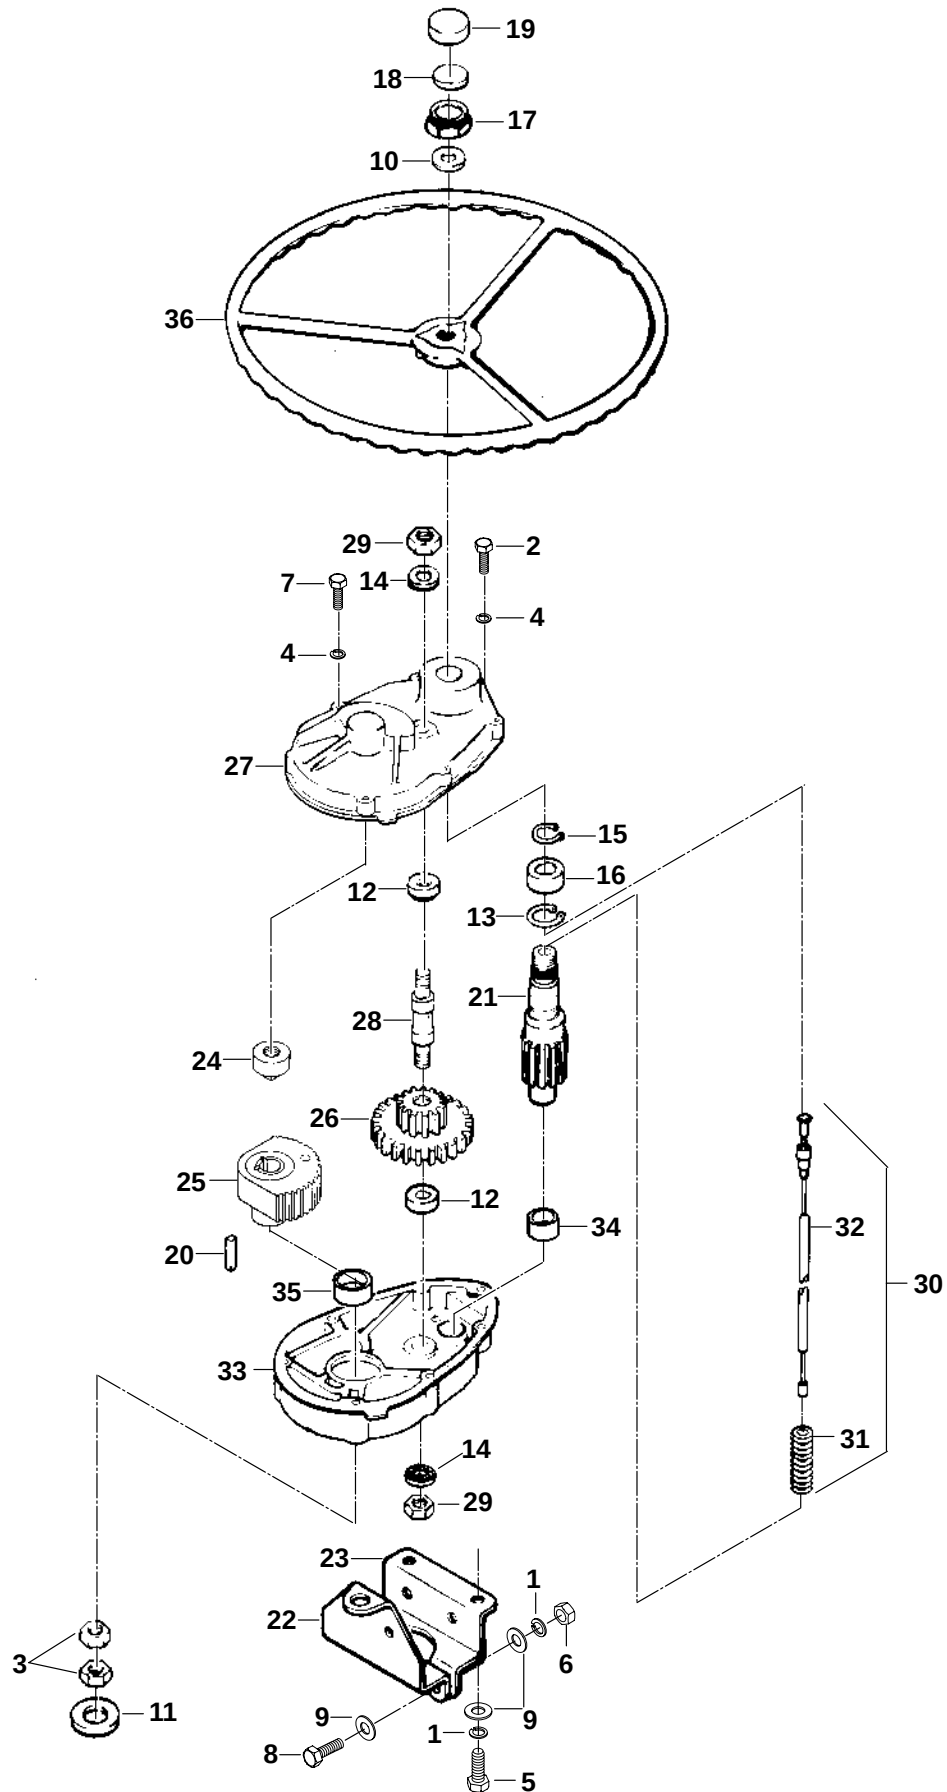


STEERING GEAR, WHEEL & HORN 6.29

Ref. No.	Part No.	Description	No. Req'd	Notes
1	120177	Lockwasher, 3/8"	5	
2	302030	Screw, 1/4-20 x 1 1/4"	3	
3	305134	Nut, jam, 7/8-14	2	
4	306396	Lockwasher, 1/4"	7	
5	306414	Screw, 3/8-16 x 1"	3	
6	306562	Nut, 3/8-16	2	
7	306832	Screw, 1/4-20 x 2"	4	
8	306835	Screw, 3/8-16 x 1 1/4"	2	
9	306981	Washer, 3/8"	7	
10	311496	Washer, 11/16"	1	
11	809255	Cover, dust shield	1	
12	816446	Washer, 7/16"	2	
13	816447	Ring, retaining	1	
14	816449	Washer, knurled, 3/8"	2	
15	816455	Ring, retaining	1	
16	816456	Bearing, ball	1	
17	816652	Nut, steering wheel	1	
18	816653	Plate, horn button contact	1	
19	816654	Button, horn	1	
20	816659	Key, 5/32" x 5/32" x 1 1/4"	1	
21	816660	Shaft, pinion gear	1	
22	816674	Support, steering housing, front	1	
23	816675	Support, steering housing, rear	1	
24	825672	Nut, special, 1/2-20	1	
25	830167	Gear, steering, driven	1	
26	830168	Gear, steering, idler cluster	1	
27	832555	Housing, upper, steering gear	1	
28	883317	Bolt, idler adjusting	1	
29	800612	•Nut, crownlock, 7/16-20	2	
30	884750	Wire and spring set	1	
31	826491	•Spring	1	
32	880365	•Wire and connector	1	
33	886883	Housing, lower steering gear	1	
34	830369	•Bushing	1	
35	830370	•Bushing	1	
36	892807	Wheel, steering	1	


- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.30 THROTTLE PEDAL

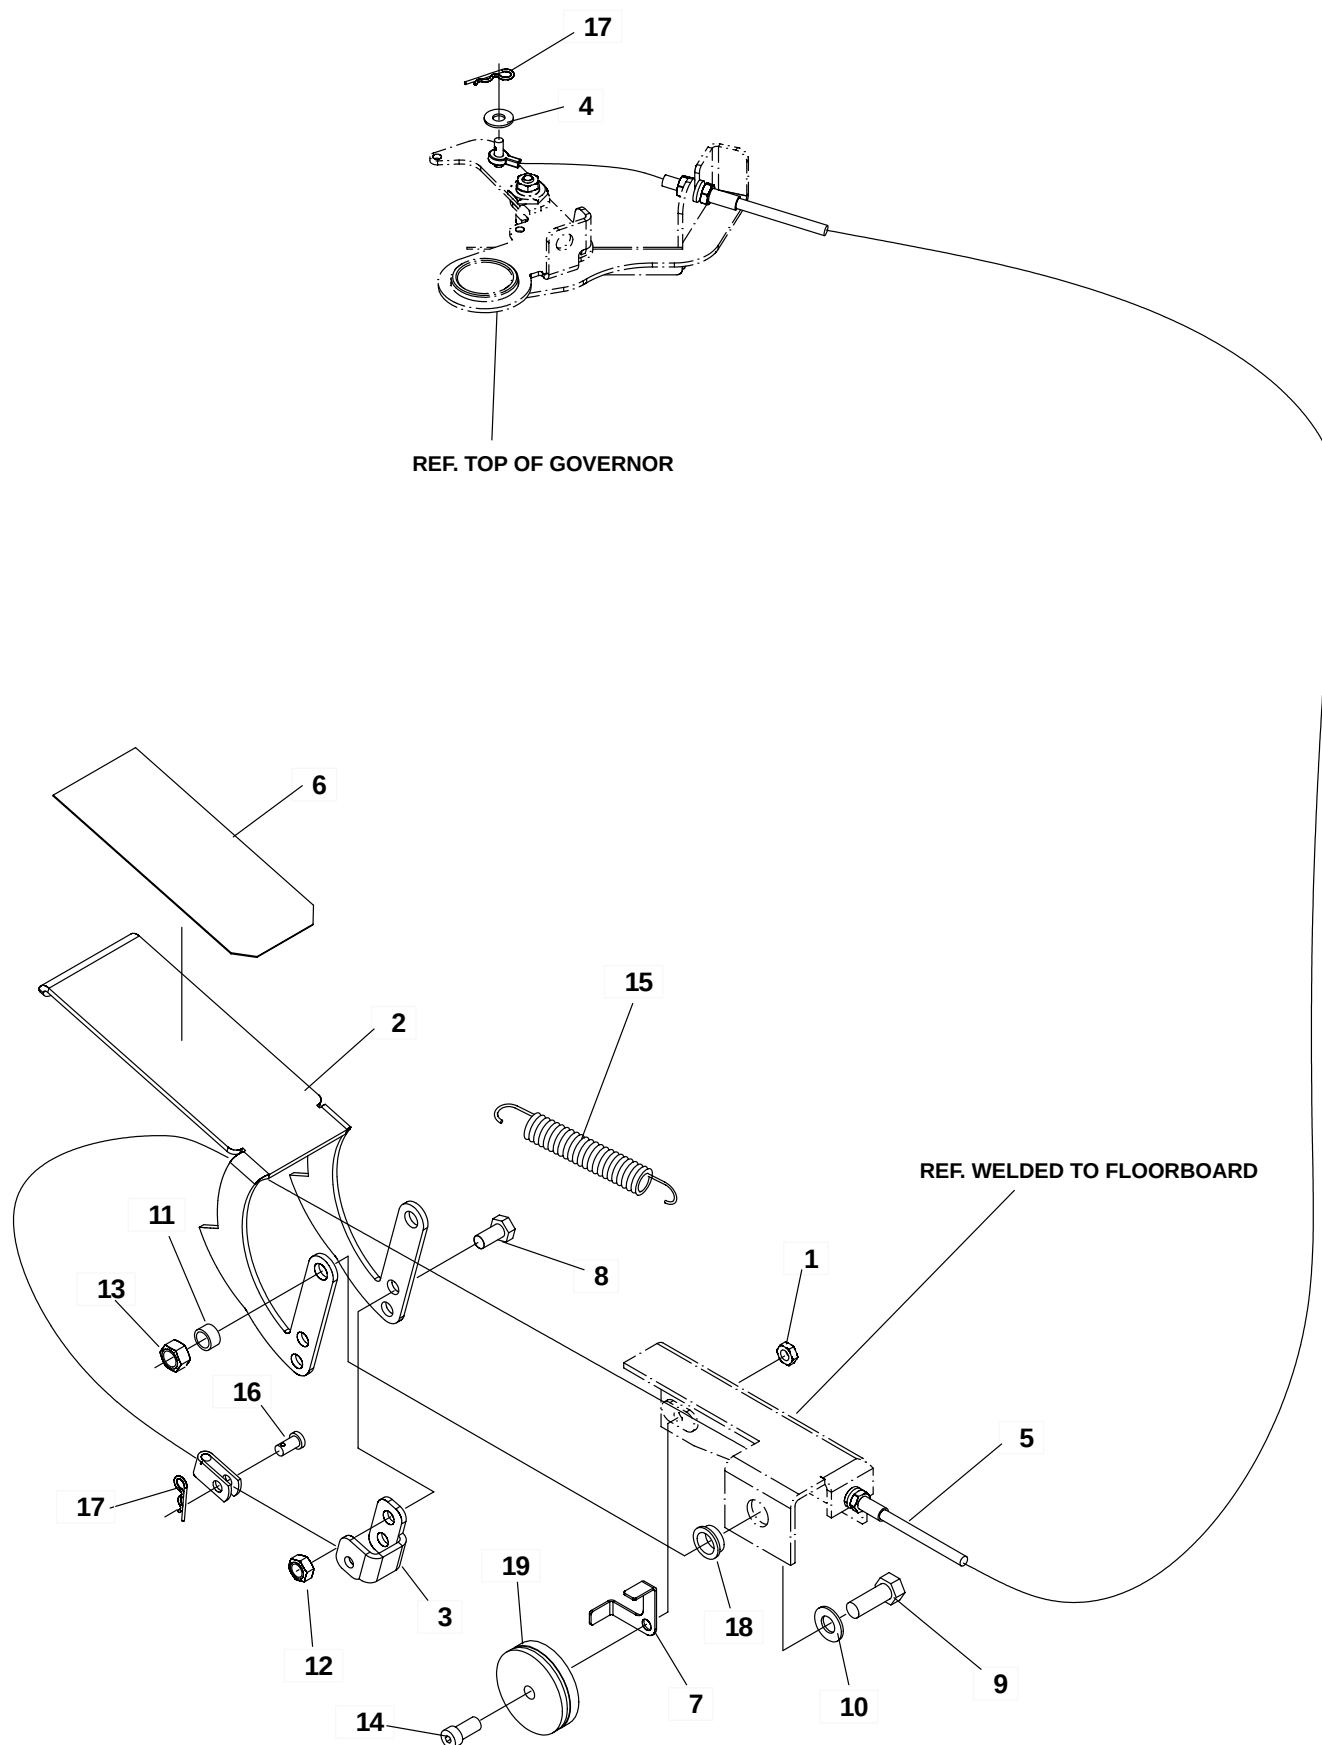


Ref. No.	Part No.	Description	No. Req'd	Notes
1	130728	Nut, 1/4-20	1	
2	2700910.7	Pedal, throttle	1	
3	2700911.7	Bracket, cable	1	
4	2700938	Retainer, cable	1	
5	2701002	Mount, throttle cable	1	
6	2701326	Tread, pedal	1	
7	2702089	Cable, throttle police EFI	1	
8	306414	Screw, 3/8-16 x 1	2	
9	306555	Screw, 5.16-18 x 5/8	2	
10	306981	Washer, 13/32	2	
11	521679	Bushing	2	
12	800290	Nut, 5/16	2	
13	800292	Nut, 3/8	2	
14	800927	Screw, 1/4-20 x 5/8, shoulder	1	
15	817119	Spring, extension	1	
16	818395	Pin, clevis, 1/4 x 1/2	1	
17	821164	Pin, hair, 1/4 x 1 1/8	2	
18	830165	Bushing	2	
19	843014	Pulley, pedal	1	

6.31 ALTERNATOR & GOVERNOR

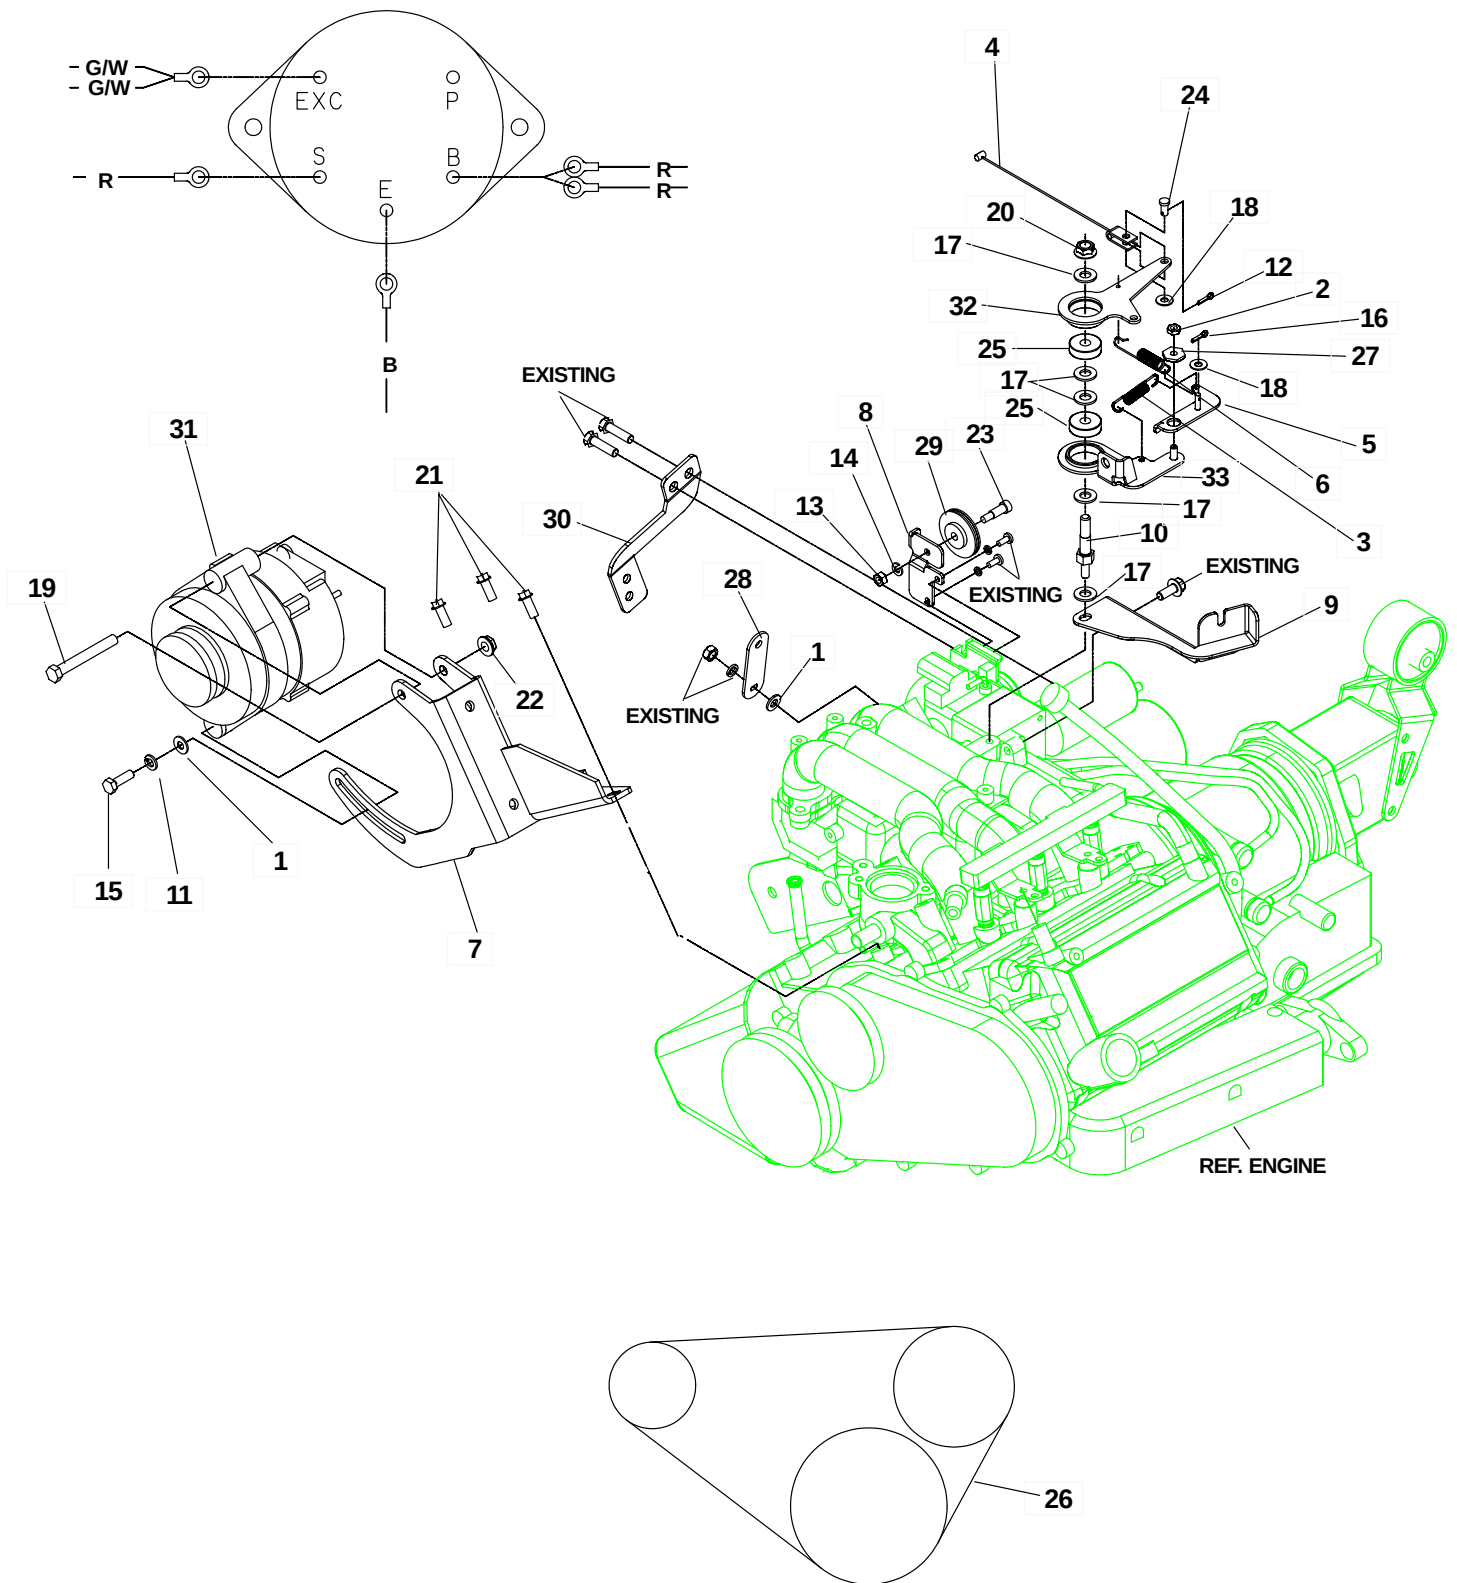


Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16	2	
2	130728	Nut, 1/4-20	1	
3	2700335	Spring, governor	1	
4	2700503	Cable, carburetor	1	
5	2701129	Arm, throttle	1	
6	2701236	Spring, extension	1	
7	2701434.7	Bracket, alternator	1	
8	2701510	Bracket, pulley, throttle cable	1	
9	2701511	Bracket, throttle cable	1	
10	2701517	Post, throttle	1	
11	306325	Lockwasher, 5/16	1	
12	306372	Pin, cotter	1	
13	306375	Nut, 1/4-20	1	
14	306396	Lockwasher, 1/4	1	
15	306416	Screw, 5/16-18 x 1	1	
16	306463	Pin, cotter	1	
17	306981	Washer, 13/32	5	
18	308090	Washer, 1/4	2	
19	311213	Screw, 3/8-16 x 3	1	
20	450454	Nut, M10-1	1	
21	452388	Screw, M8-1.25 x 20	3	
22	548804	Nut, 3/8-16	1	
23	800927	Screw, 1/4-20 x 5/8	1	
24	818395	Pin, clevis 1/4 x 1/2	1	
25	830140	Bearing, ball	2	
26	835062	Belt, fan	1	
27	835271	Nut, 1/4-20	1	
28	842740	Lever, shifter	1	
29	843013	Pulley, governor	1	
30	845345.7	Bracket, shift cable mount	1	
31	893876	Alternator, 65 AMP	1	
32	894706	Arm, governor	1	
33	894708	Lever, throttle	1	

6.32 HOSES & AIR FILTER

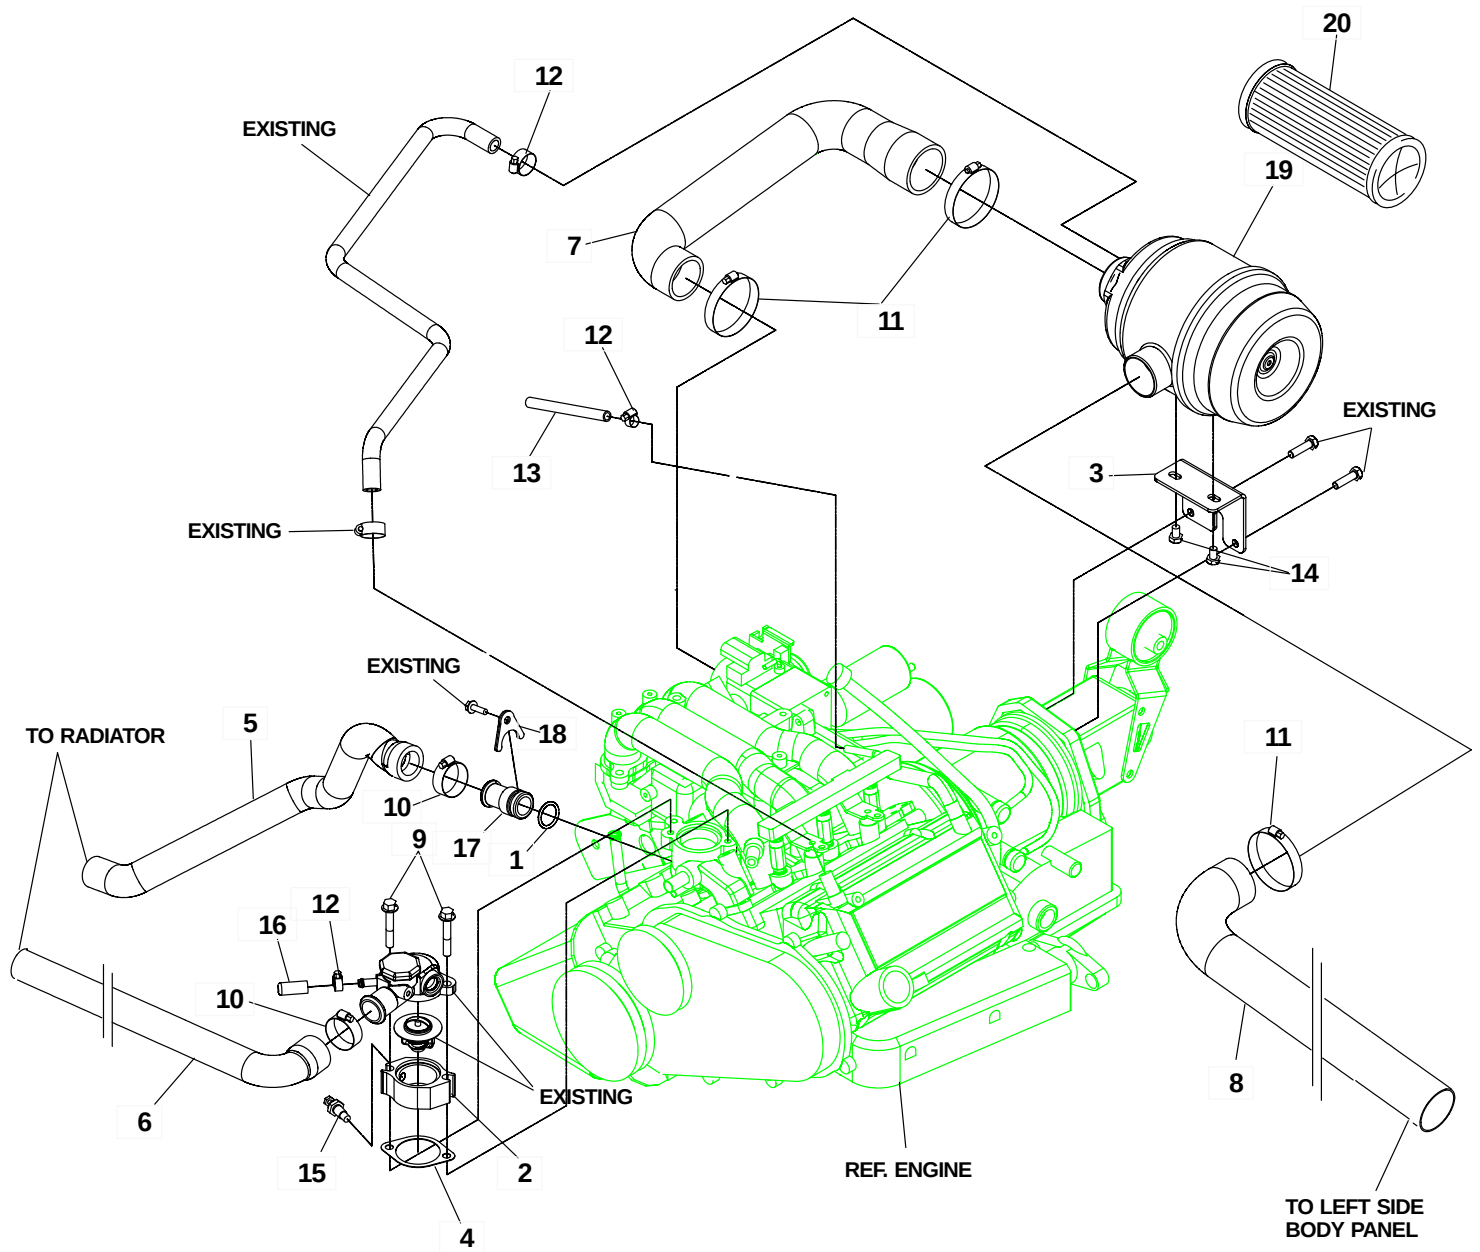


Ref. No.	Part No.	Description	No. Req'd	Notes
1	2700031	O-ring, 15/16" I.D., 1/8"	1	Not illustrated.
2	2701442	Housing, temperature sender	1	
3	27015212.7	Bracket, air cleaner	1	
4	2701513	Gasket, thermostat spacer	1	
5	2701516	Hose, radiator lower	1	
6	2701652	Hose, radiator upper	1	
7	2702037	Intake hose	1	
8	2702301	Hose, high temperature air	1	
9	452392	Bolt, M8-1.25 x 50	2	
10	820889	Clamp	2	
	823549	Tie, cable 15.5" (394 mm)	1	
11	825358	Clamp	3	
12	825624	Clamp	4	
13	826590	Hose, fuel, 25' (7.6 M)	As Req'd.	
14	843545	Bolt, air cleaner	2	
15	843857	Sender, water tempature	1	
16	845224	Cap	1	
17	845365	Tube, water inlet	1	
18	845409	Bracket, u-water inlet	1	
19	13701-53F20	Cleaner, air	1	
20	13780-79201	Element, air cleaner	1	

6.33 OIL FILL & FILTER

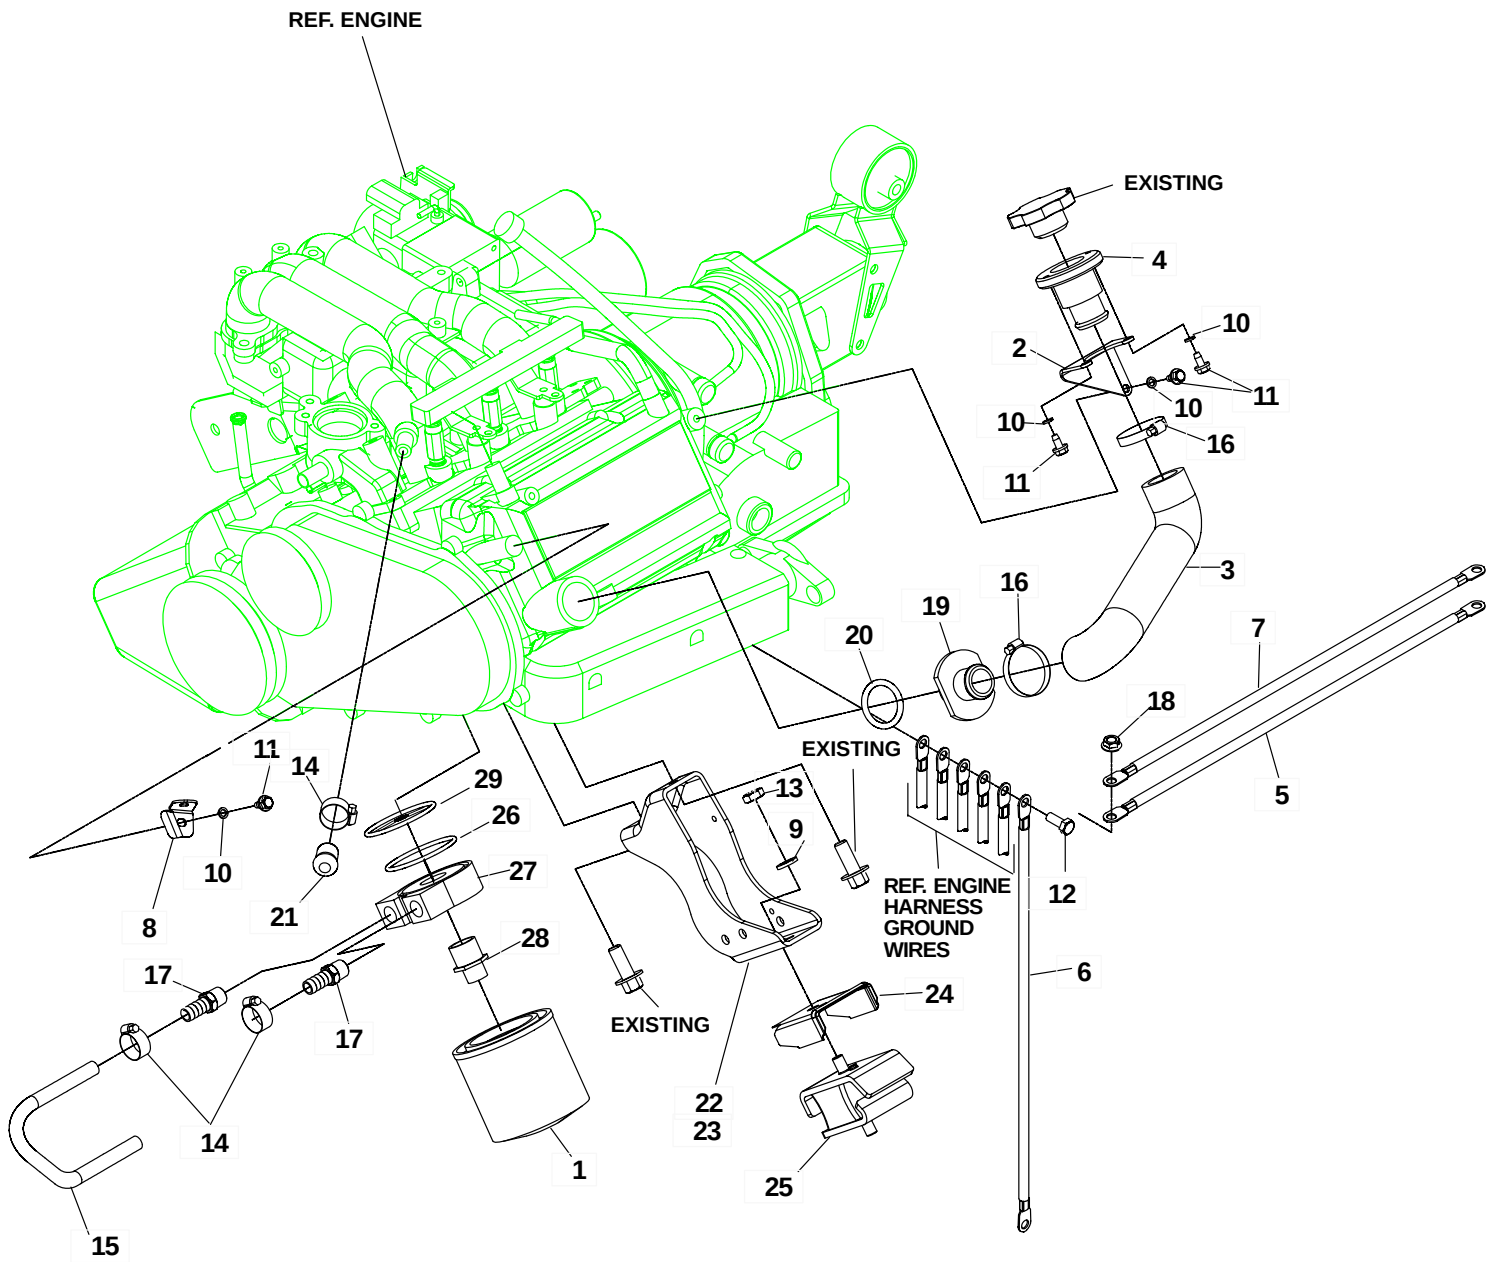

Ref. No.	Part No.	Description	No. Req'd	Notes
1	111836	Filter, oil	1	Not illustrated.
2	2701514.7	Bracket, remote oil fill cap	1	
3	2701636	Hose, oil fil	1	
4	2701640	Adapter, oil cap	1	
	2701870	Harness, main	1	
5	2702266	Wire, 4ga, red	1	
6	2702267	Wire, 4ga, black	1	
7	2702268	Wire, 6ga, red	1	
8	2702300.7	Bracket, clamp	1	
9	303269	Lockwasher, 7/16	1	
10	450410	Lockwasher, M6	4	
11	800425	Screw, M6–1.00 x 12	4	
12	800548	Screw, M8–1.25 x 20	1	
13	800571	Nut, 10–1.25	1	
14	825624	Clamp, hose	3	
15	830929	Hose	1	
16	836206	Clamp, hose	2	
17	842944	Fitting	2	
18	843058	Nut, starter motor	1	
19	843399	Adapter, valve cover	1	
20	843420	O–ring	1	
21	845224	Cap	1	
22	11640–53F20	Support, engine, RIGHT	1	
23	2703091	Bracket front mounting, LEFT	1	
24	2703090	Cover, front mounting	1	
25	11610–60C01	Mount, engine	2	
26	830920	O–ring	1	
27	830176	Plate	1	
28	830175	Connector	1	
29	4109580	Plate, oil filter adapter	1	


6.34 SHIFTER & SHIFT CABLE

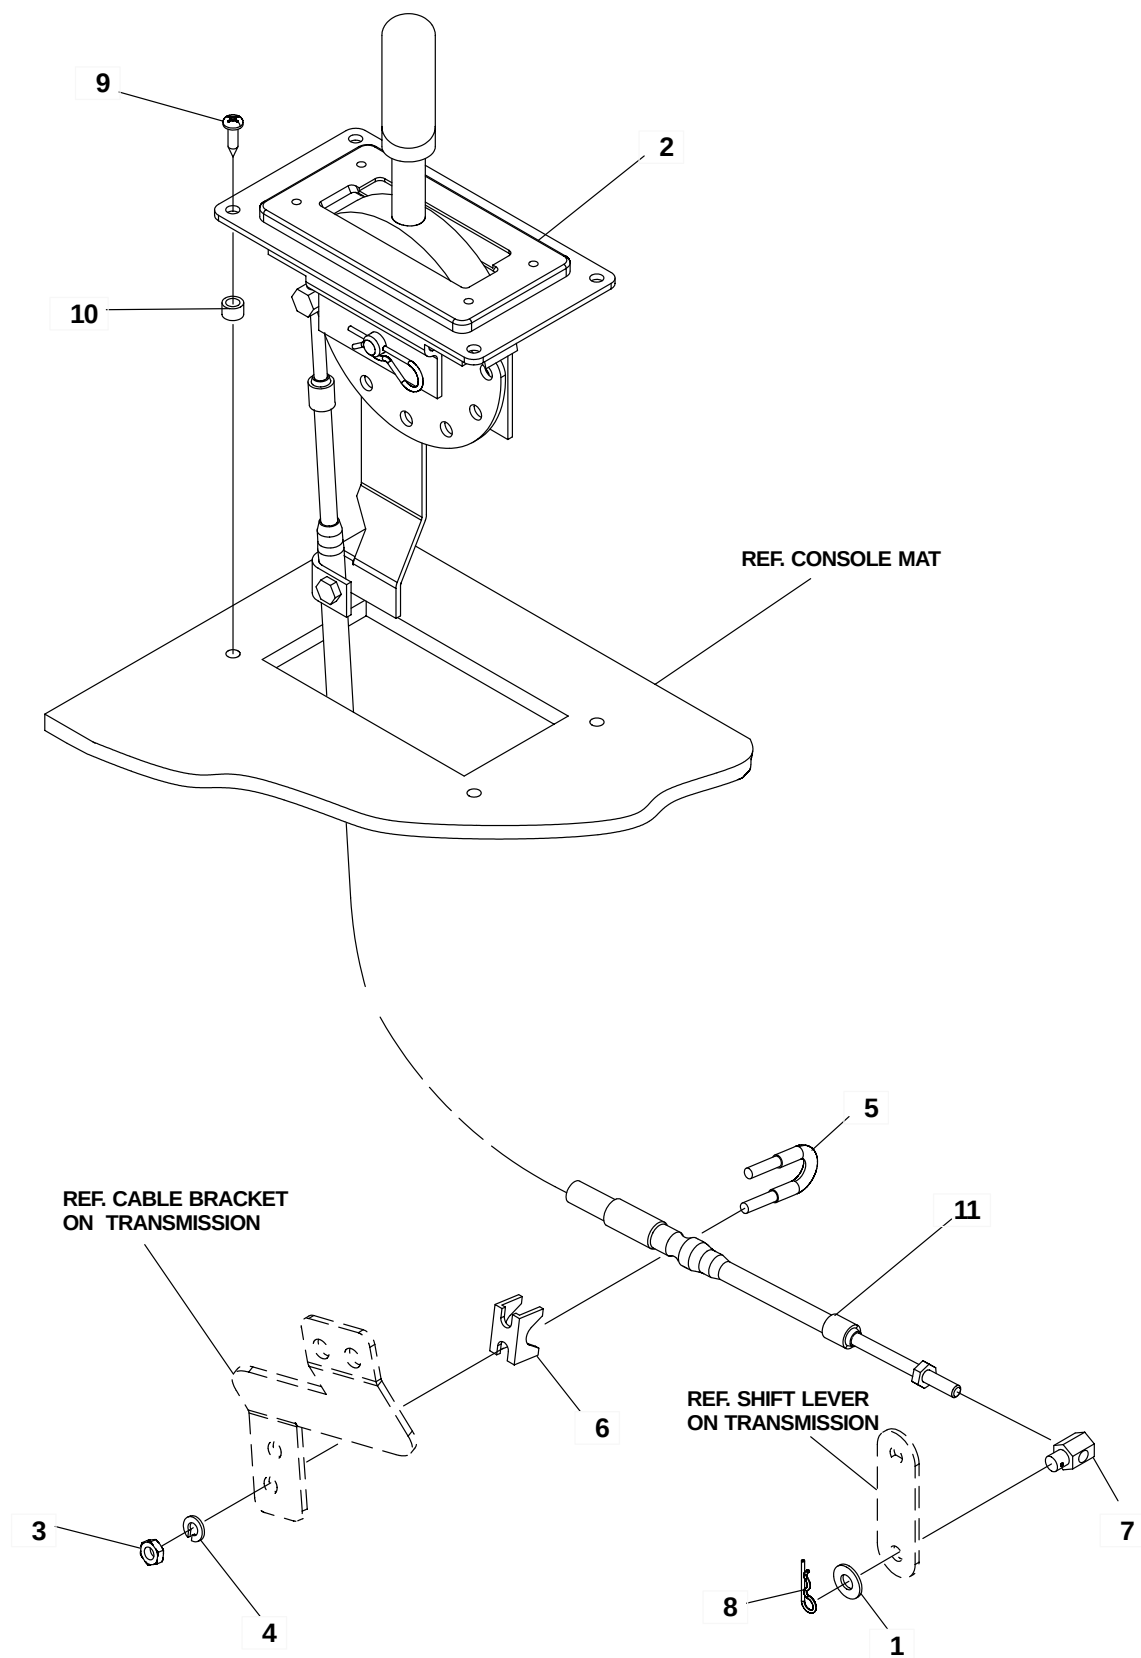

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701309	Washer, 5/16	1	Not offered separately. Not offered separately. Not offered separately.
2	2701750	Shifter, complete	1	
3	306375	•Nut, 1/4-20	2	
4	306396	•Lockwasher, 1/4	2	
5		•U-bolt, cable clamp	1	
6		•Bracket, cable clamp	1	
7		•Pin, rod connecting	2	
8	306372	Pin, cotter, 3/32" x 1/2"	1	
9	800146	Screw, #10, tapping	4	
10	817019	Bushing	4	
11	839229	Cable, shifter	1	

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.35 FRONT BRAKES, AXLE & HUB

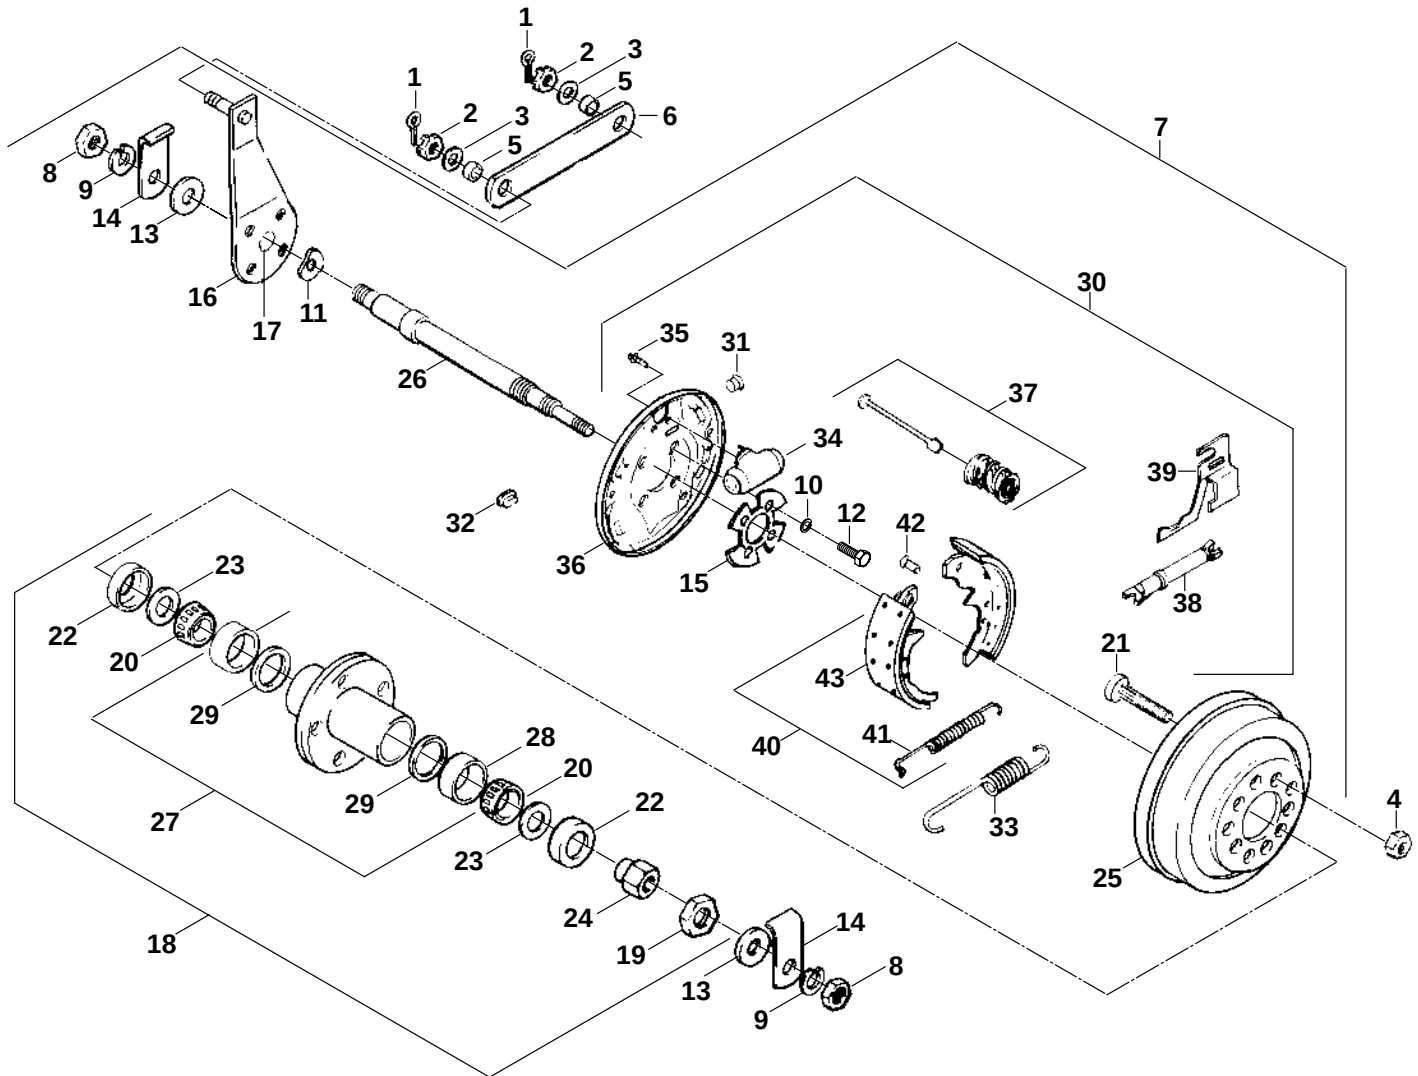


FRONT BRAKES, AXLE & HUB 6.35

Ref. No.	Part No.	Description	No. Req'd	Notes
1	306328	Pin, cotter, 3/32" x 3/4"	2	
2	306825	Nut, castle, 7/16–20	2	
3	306982	Washer, 7/16"	2	
4	800573	Nut, wheel retaining, 1/2–20	5	
5	825404	Bushing	2	
6	825405	Link, brake anchor	1	
7	889924	Hub, axle, shield and drum	1	
8	304104	•Nut, jam, 5/8–18	2	
9	306494	•Lockwasher, 5/8"	2	
10	548183	•Lockwasher, 5/16"	4	
11	800422	•Washer, spring	1	
12	800600	•Screw, 5/16–18 x 5/8", grade 8	4	
13	836674	•Washer, thrust, 9/16"	2	
14	813717	•Lockwasher	2	
15	835072	•Plate, lock	1	
16	888451	•Arm, brake	1	
17	824060	•Bushing	1	
18	888610	•Hub and drum	1	
19	307665	••Nut, jam, 3/4–16	1	
20	385174	••Cone, tapered roller bearing	2	
21	523474	••Screw, grade 8, 1/2–20 x 1 13/16"	5	
22	807630	••Seal	2	
23	809229	••Slinger, oil	2	
24	831199	••Nut, bearing adjusting	1	
25	833993	••Drum, brake	1	
26	884022	••Axle	1	
27	888524	••Hub	1	
28	808088	•••Cup, tapered roller bearing	2	
29	809268	•••Ring, bearing backing	2	
30	889906	•Shoe assembly	1	
31	811650	••Plug	1	
32	824833	••Cover, adjustment hole	2	
33	833850	••Spring, retainer	1	
34	892471	••Cylinder, wheel	1	
35	833911	••Screw, M6	2	
36	833912	••Dust shield	1	
37	833916	••Retainer, shoe	2	
38	843026	••Kit, brake lever and adjuster	1	
39		•••Lever, brake	1	Not offered separately.
40	889350	••Brake kit, two brake shoes	1	
41	833918	•••Spring, retainer	1	
42	834723	•••Pin, brake	1	
	838355	•••Guide, spring	1	Not illustrated.
43		•••Shoe, brake	2	Not offered separately.
44	889930	*Kit, wheel cylinder	As Req'd	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.36 REAR BRAKES, HUB & WHEEL CYLINDER

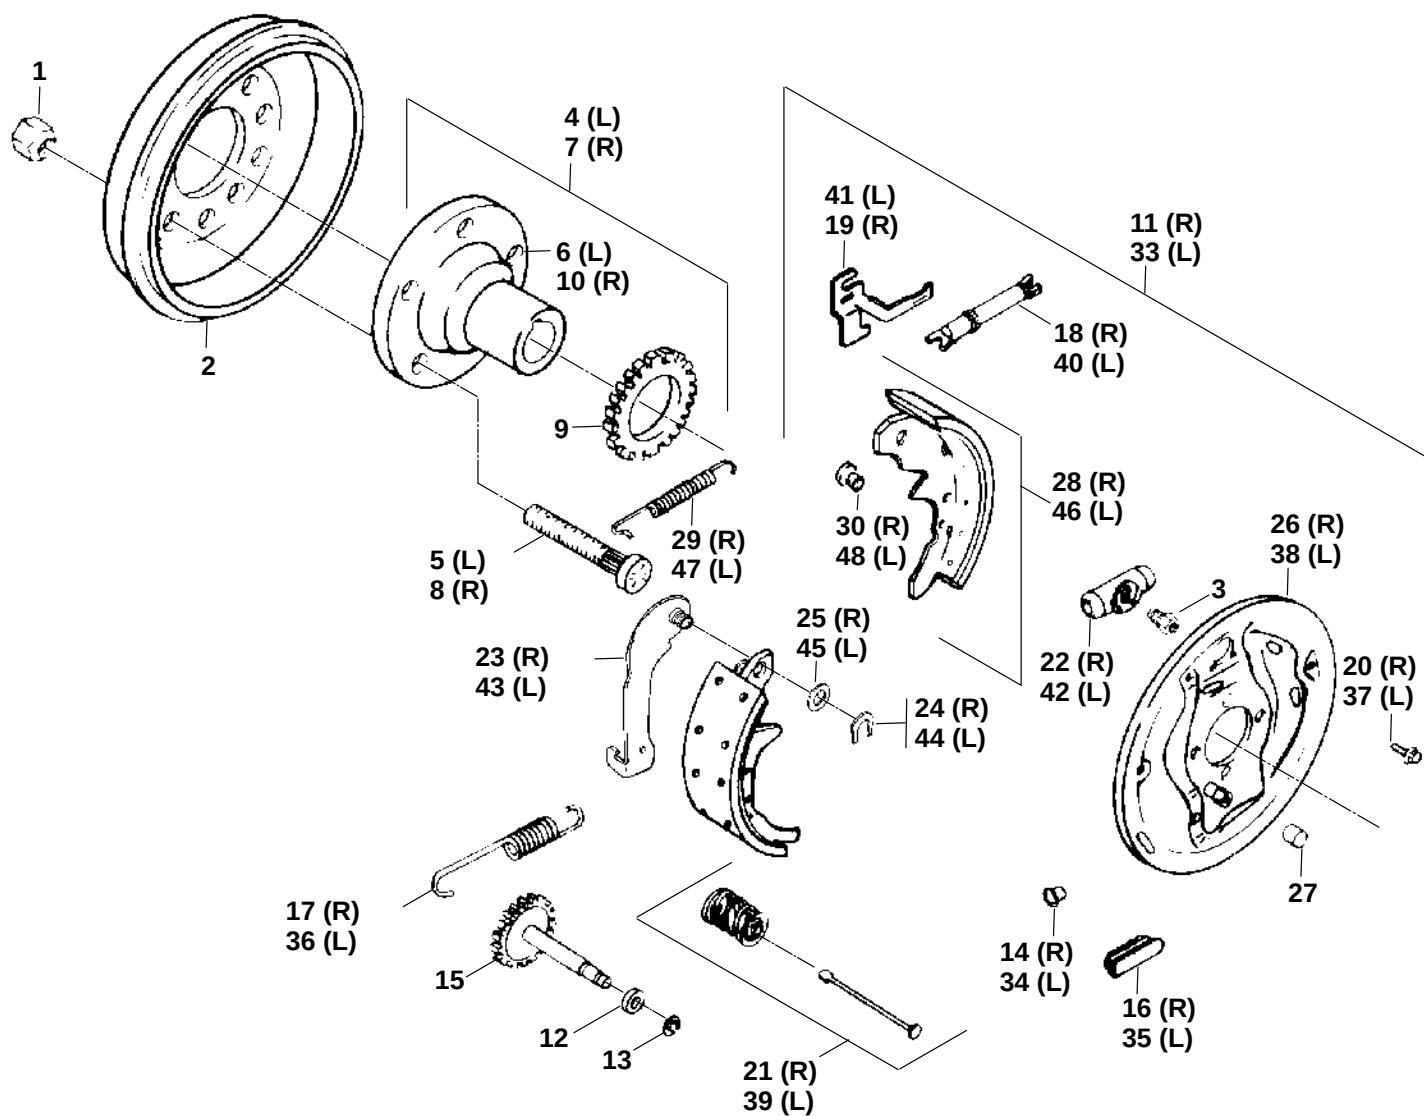


REAR BRAKES, HUB & WHEEL CYLINDER 6.36

Ref. No.	Part No.	Description	No. Req'd	Notes
1	800573	Nut, wheel retaining, 1/2-20	10	Not offered separately.
2	833993	Drum, brake	2	
3	834161	Adapter, brake line	2	
4	888793	Hub, LEFT	1	
5	523474	•Screw, 1/2-20 x 1 13/16" grade 8	5	
6	833891	•Hub	1	
7	888861	Hub, RIGHT	1	
8	523474	•Screw, 1/2-20 x 1 13/16" grade 8	5	
9	833879	•Gear, speedometer drive	1	
10	833891	•Hub	1	
11	891811	Shoe w/dust shield, complete, RIGHT	1	
12	809018	•Bushing, speedometer	1	
13	809257	•Ring, retainer	1	
14	811650	•Plug, hole	1	
15	821153	•Gear, speedometer, 34 tooth	1	
16	824833	•Cover, adjustment hole	2	
17	833850	•Spring, retainer	1	
18	843025	••Kit, brake lever and adjuster	1	
19		•Lever, brake, RIGHT	1	
20	833911	•Bolt, M6	2	
21	833916	•Retainer, shoe	2	
22	892471	•Cylinder, wheel, 13/16" (21mm)	1	
23	838403	•Lever, park brake, RIGHT	1	
24	838404	•Retainer, park brake lever pin	1	
25	838405	•Washer, spring	1	
26	888777	•Dust, shield, RIGHT	1	
27	824925	••Cap	1	
28	889350	•Brake kit, two brake shoes	1	
29	833918	••Spring, retainer	1	
30	834723	••Pin, brake	1	
31	838355	••Guide, brake spring	1	Not illustrated. Not offered separately.
32		••Shoe, brake	2	
33	891812	Shoe w/dust shield, complete, LEFT	1	Not offered separately.
34	811650	•Plug, hole	1	
35	824833	•Cover, adjustment hole	2	
36	833850	•Spring, retainer	2	
37	833911	•Bolt, M6	2	
38	833912	•Dust shield, LEFT	1	
39	833916	•Retainer, shoe	2	
40	843026	•Kit, brake lever and adjuster	1	
41		••Lever, brake, LEFT	1	
42	892471	•Cylinder, wheel, 13/16" (21mm)	1	
43	838402	•Lever, park brake, LEFT	1	
44	838404	•Retainer, park brake lever pin	1	
45	838405	•Washer, spring	1	
46	889350	•Brake kit, two brake shoes	1	
47	833918	••Spring, retainer	1	
48	834723	••Pin, brake	1	
49	838355	••Guide, spring	1	Not illustrated. Not offered separately. Not illustrated.
50		••Shoe, brake	2	
51	889930	Kit, wheel cylinder	As Req'd	
	884823	Cable, speedometer	1	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.


6.37 HYDRAULIC BRAKE SYSTEM

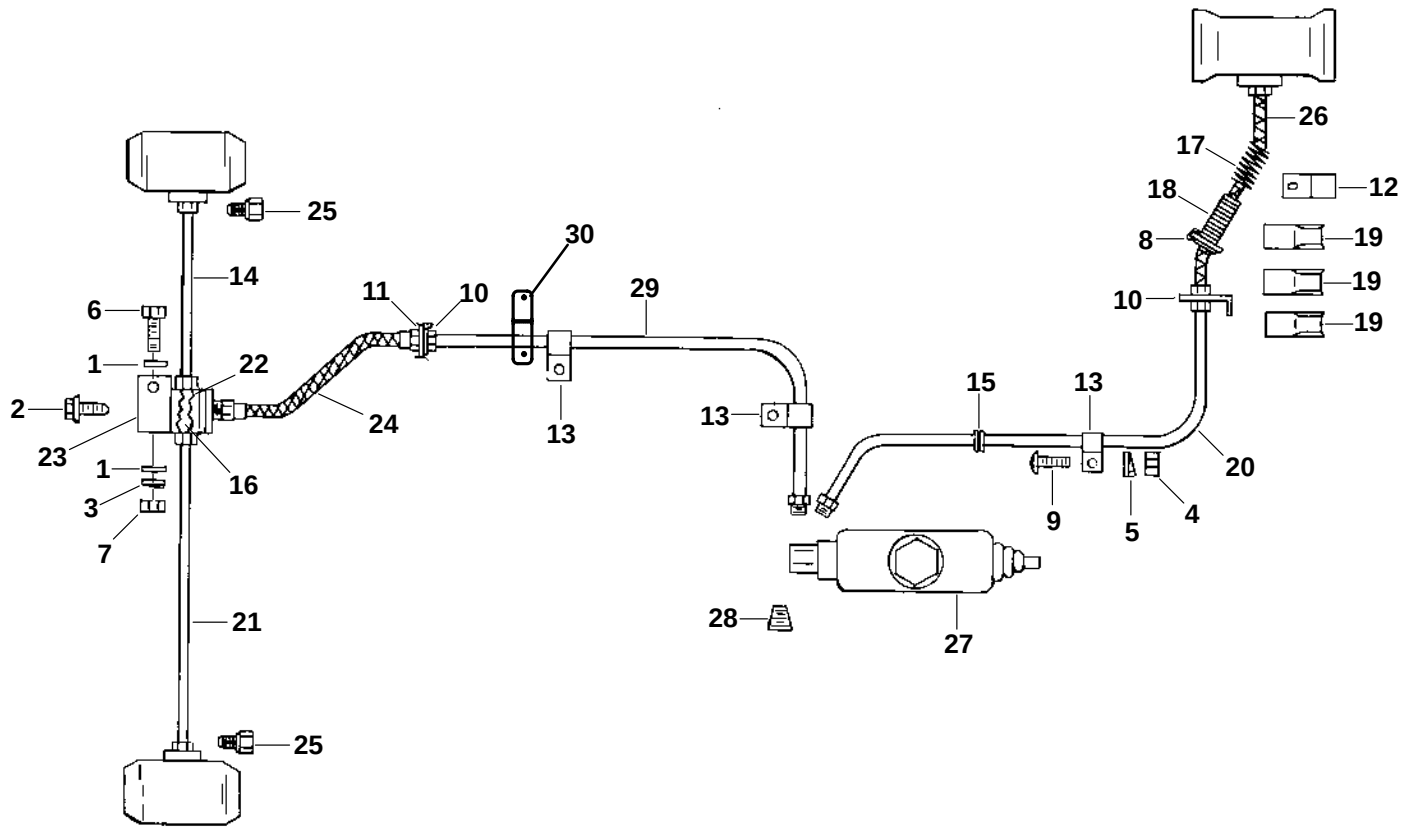

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16"	2	
2	112050	Screw, tapping, 1/4-20 x 5/8"	1	
3	306325	Lockwasher, 5/16"	1	
4	306375	Nut, 1/4-20	3	
5	306396	Lockwasher, 1/4"	3	
6	306435	Screw, 5/16-18 x 1 1/4"	1	
7	306932	Nut, 5/16-18	1	
8	320107	Tie, cable, 7 1/2" (191mm)	1	
9	800277	Screw, P.T.H., 1/4-20 x 5/8"	3	
10	809137	Clip	2	
11	809196	Washer	1	
12	810437	Clip	1	
13	812445	Clamp	3	
14	815421	Tube, brake, left rear	1	
15	817307	Grommet	1	
16	820008	Tee, union	1	
17	824219	Protector, brake hose	1	
18	824731	Protector, brake hose	1	
19	825477	Clip	3	
20	828072	Tube, brake, front	1	
21	829049	Tube, brake, right rear	1	
22	832584	Clamp, tee mounting	1	
23	832585	Bracket, brake fitting	1	
24	832587	Hose, hydraulic brake	1	
25	834161	Adapter, brake line	2	
26	834888	Hose, hydraulic brake	1	
27	886875	Cylinder, master, 3/4" (19mm) bore	1	
28	800227	•Plug, pipe, 1/8-27 NPT	1	
	809423	•Plug, brake line	1	Not illustrated.
	839140	•Bolt, master cylinder	1	Not illustrated.
29	888742	Tube, hydraulic	1	
30	4109420	Bracket	1	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.38 MASTER CYLINDER & BRAKE ROD

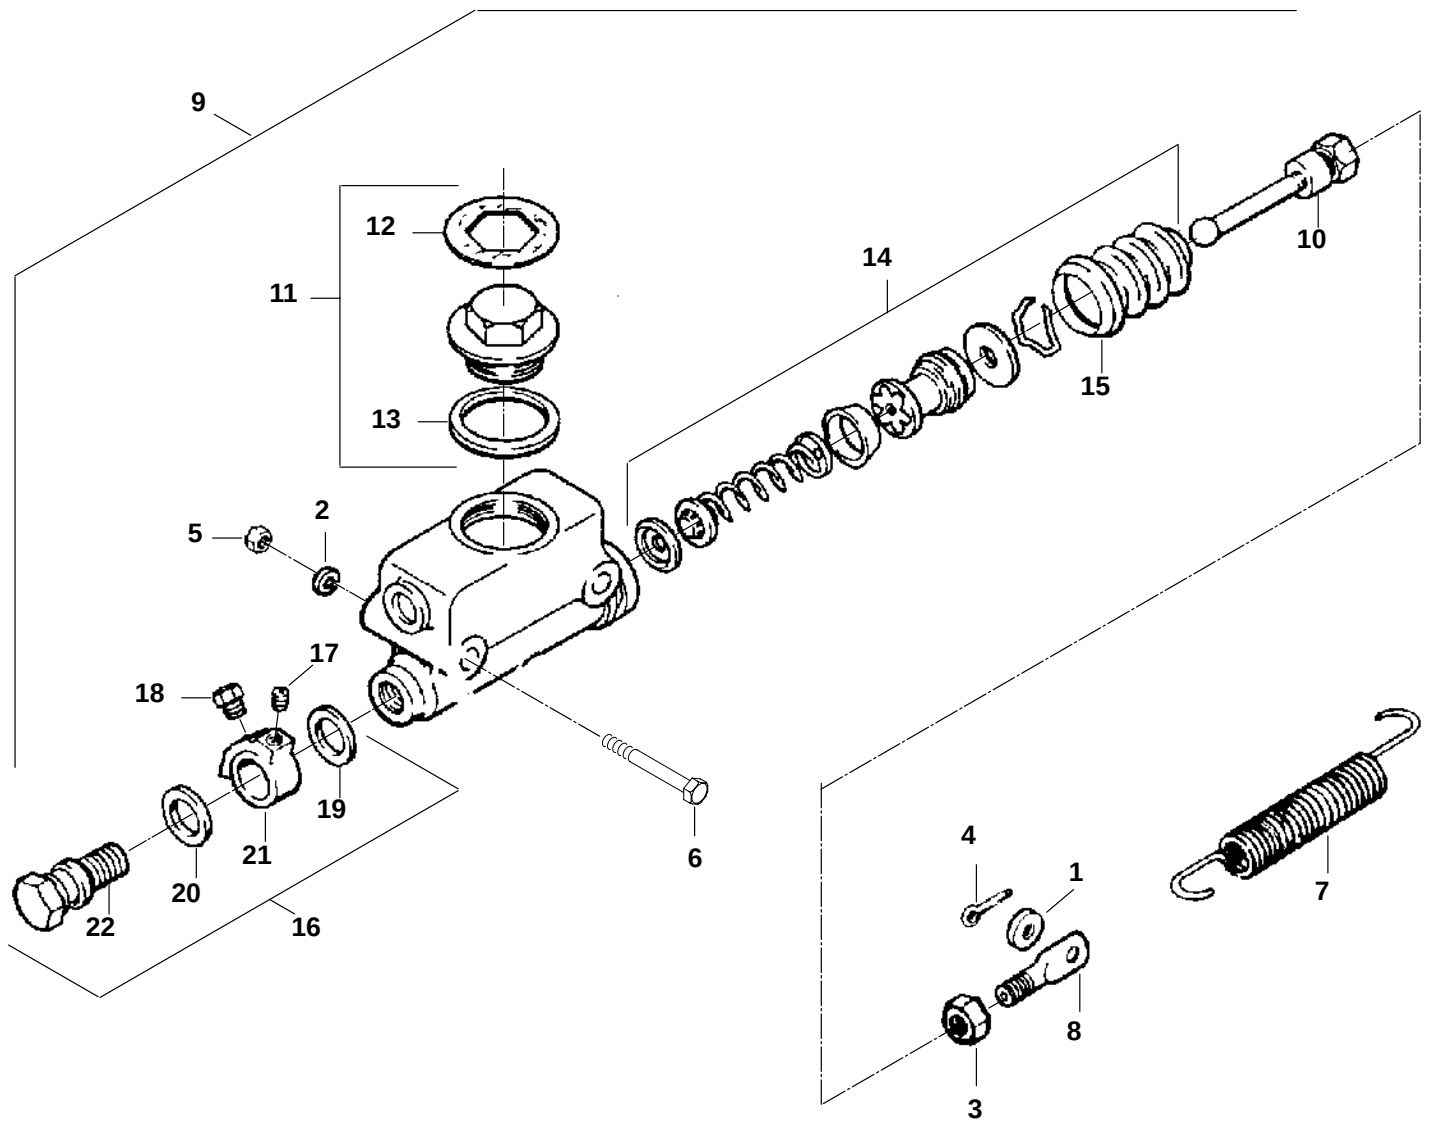


MASTER CYLINDER & BRAKE ROD 6.38

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16"	1	
2	120177	Lockwasher, 3/8"	2	
3	130981	Nut, jam, 7/16–20	1	
4	306328	Pin, cotter, 3/32" x 3/4"	1	
5	306562	Nut, 3/8–16	2	
6	306837	Screw, 3/8–16 x 3 1/4"	2	
7	823089	Spring, extension	1	
8	829158	Rod, brake	1	
9	886875	Cylinder, master, complete	1	
10	823752	•Rod, push	1	
11	886519	•Plug set, filler (includes parts shown)	1	
12	829155	•Label, warning	1	
13	829558	•Gasket, filler plug	1	
14	886874	•Kit, repair (includes parts shown)	1	
15	811928	•Boot	1	
16	892040	•Bolt kit, master cylinder	1	
17	800227	•Plug, 1/8–27 NPT	1	
18	809423	•Plug, brake line	1	
19	810443	•Washer, sealing	1	
20	810444	•Washer, sealing	1	
21	830817	•Fitting, banjo, brass	1	
22	839140	•Bolt	1	


- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.39 PARKING BRAKE

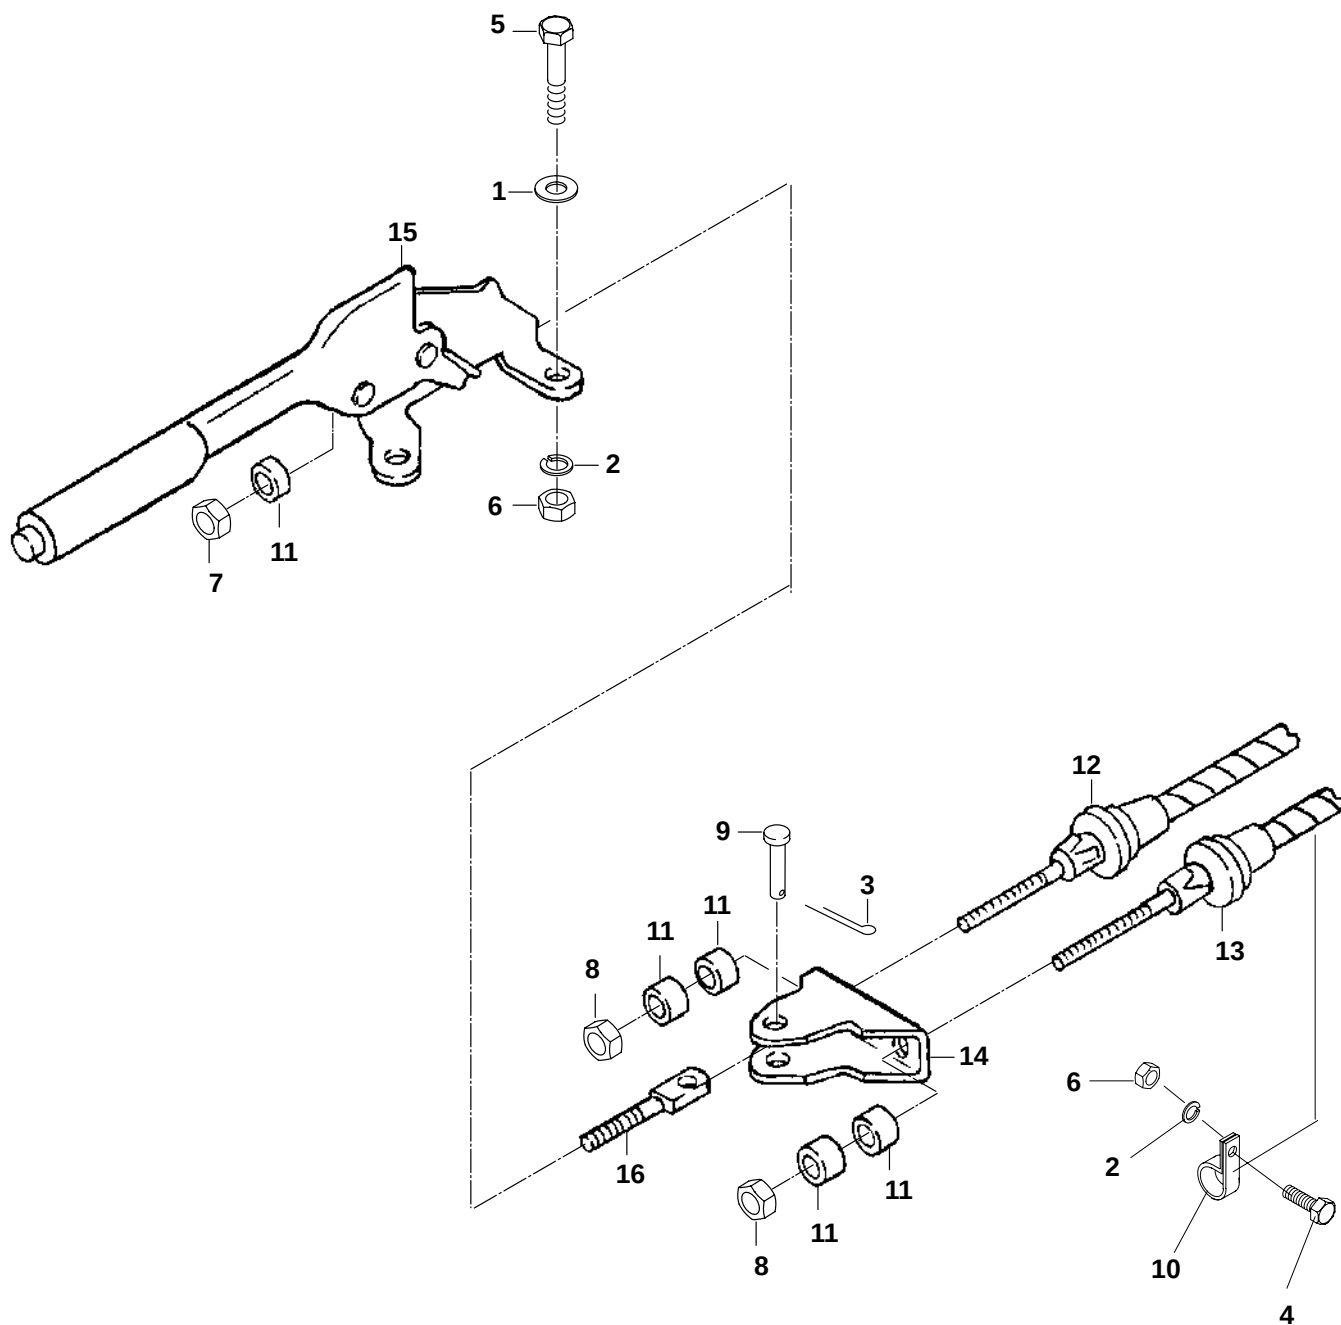


Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16"	2	
2	306325	Lockwasher, 5/16"	3	
3	306328	Pin, cotter, 3/32" x 3/4"	1	
4	306416	Screw, 5/16-18 x 1	1	
5	306450	Screw, 5/16-18 x 3/4"	2	
6	306932	Nut, 5/16-18	3	
7	800290	Nut, lock, 5/16-18	1	
8	800446	Nut, stop, 5/16-24	2	
9	806703	Pin, clevis, 5/16" x 1"	1	
10	810437	Clamp	1	
11	825126	Bushing	5	
12	838095	Cable, parking brake, RIGHT, 67 15/16" (1745 mm)	1	
13	838096	Cable, parking brake, LEFT, 44 15/16" (1146 mm)	1	
14	838109	Bracket, brake cable	1	
15	884189	Lever, park brake	1	
16	884204	Screw, adjusting	1	

6.40 SEAT BELT

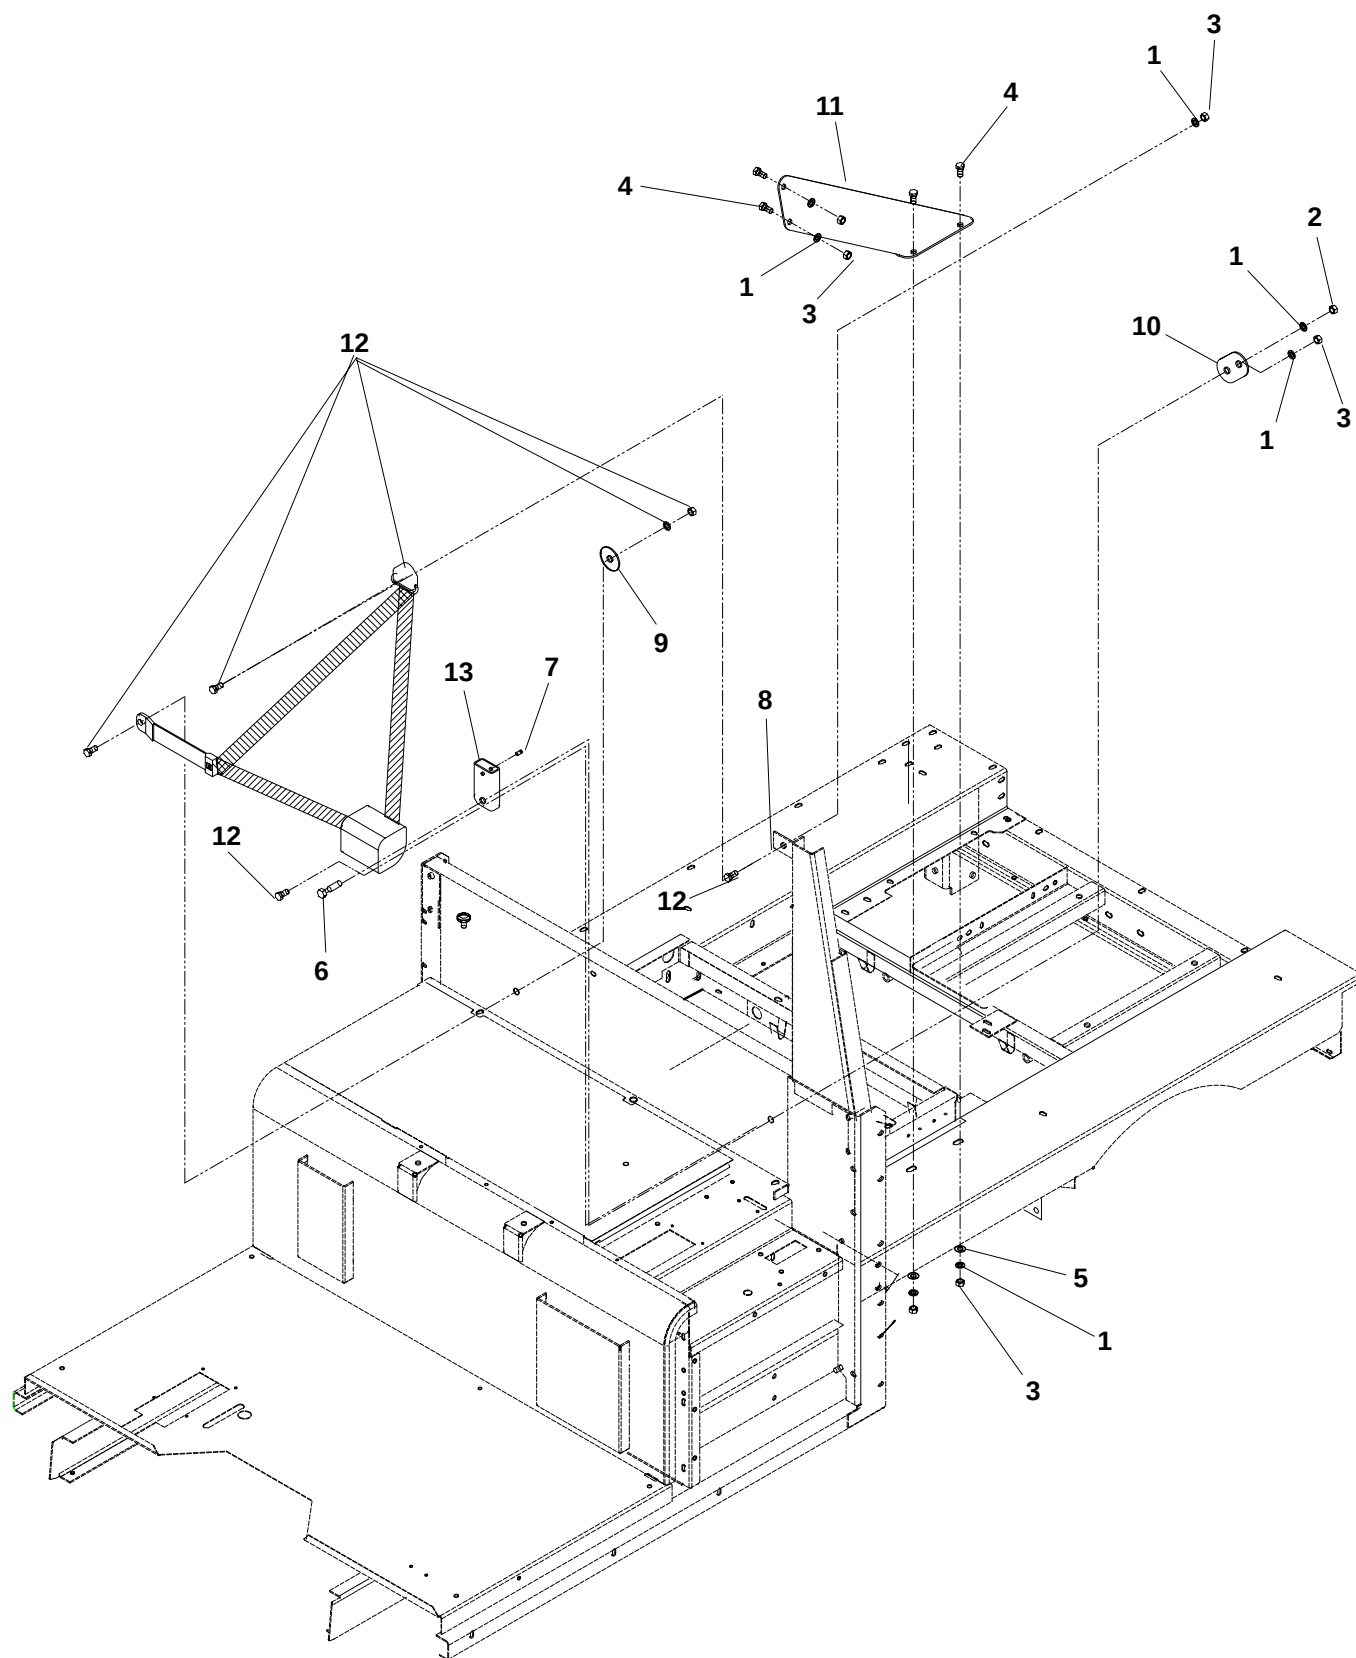

Ref. No.	Part No.	Description	No. Req'd	Notes
1	120177	Lockwaasher, 3/8	4	
2	304364	Nut, 7/16–14	1	
3	306562	Nut, 3/8–16	4	
4	306834	Screw, 3/8–16 x 3/4	4	
5	306981	Washer, 13/32	2	
6	311395	Screw, 7/16–14 x 1 3/4	1	
7	316942	Pin, spirol, 1/4 x 1/2	1	
8	821702	Washer, 29/64	4	
9	831783	Washer, 17/32	1	
10	843081	Plate, reinforcement	1	
11	843173	Brace, seat belt	1	
12	843182	Seat belt	1	
13	845082.7	Spacer, seat belt interior	1	


6.41 SEAT & BACKREST

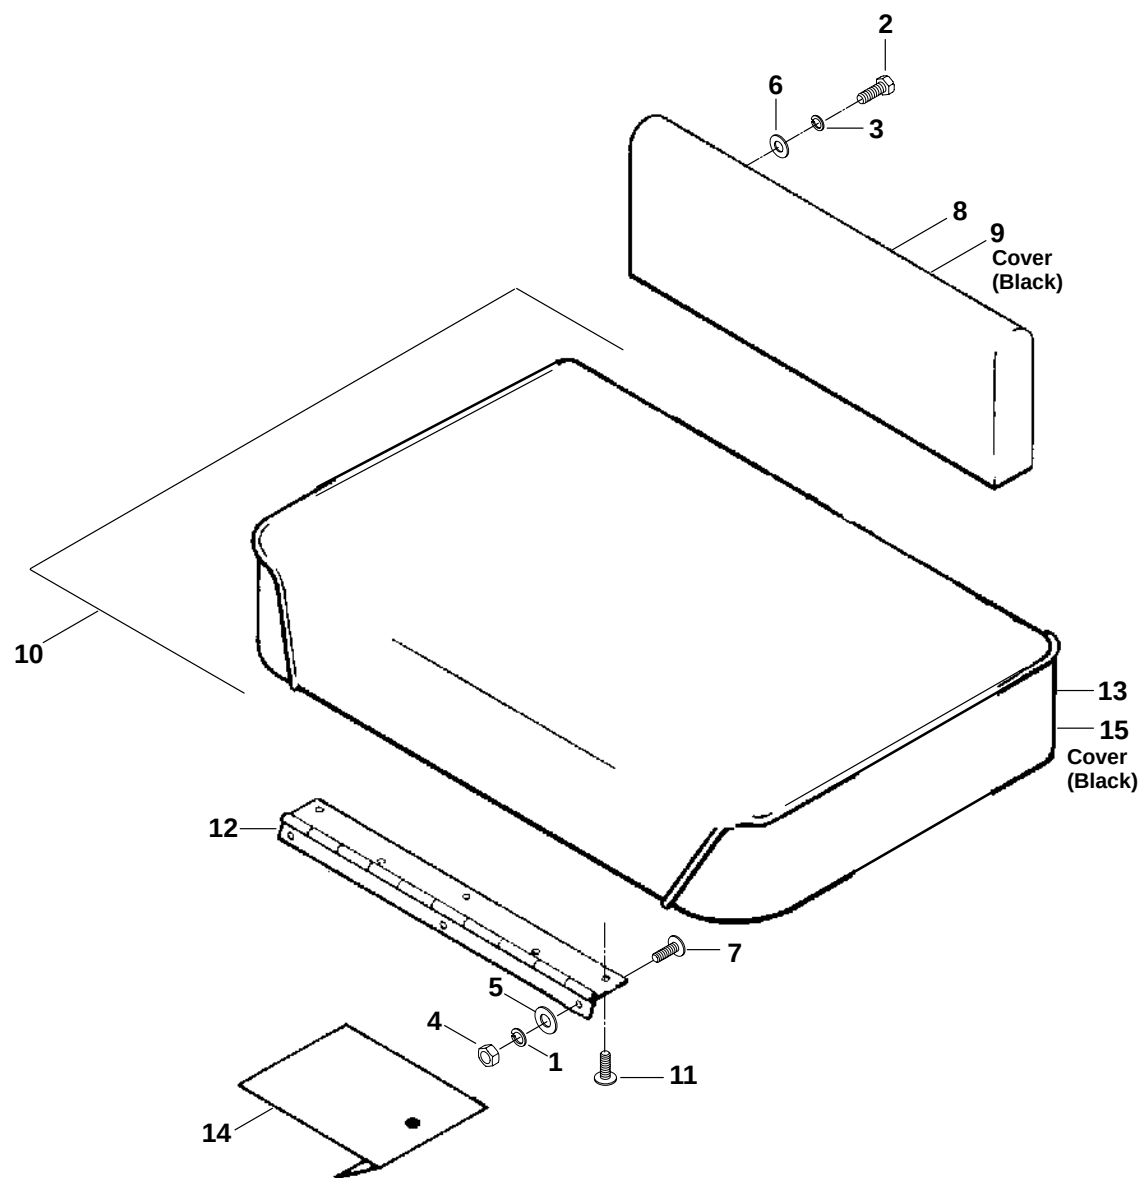

Ref. No.	Part No.	Description	No. Req'd	Notes
1	120052	Lockwasher, #10	3	Not illustrated.
2	300646	Screw, 1/4-20 x 3/4"	10	
3	306396	Lockwasher, 1/4"	4	
4	306531	Nut, #10-24	3	
5	308089	Washer, #10	3	
6	308090	Washer, 1/4"	1	
7	800271	Screw, P.T.H., #10-24 x 1/2"	3	
8	884302	Backrest	1	
9	825967	•Cover, backrest, black	1	
10	894136	Seat w/hinge	1	
11	800215	•Screw, P.T.H., #10-24 x 5/8"	17	
12	812208	•Hinge	1	
13	885947	•Seat	1	
	817606	••Nut, tee, #10-24	17	
14	837581	••Bag, literature	1	
	825602	••Board, seat	1	Not illustrated.
	825603	••Pad, seat	1	Not illustrated.
15	884177	••Cover, black	1	


- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.42 FUEL SYSTEM

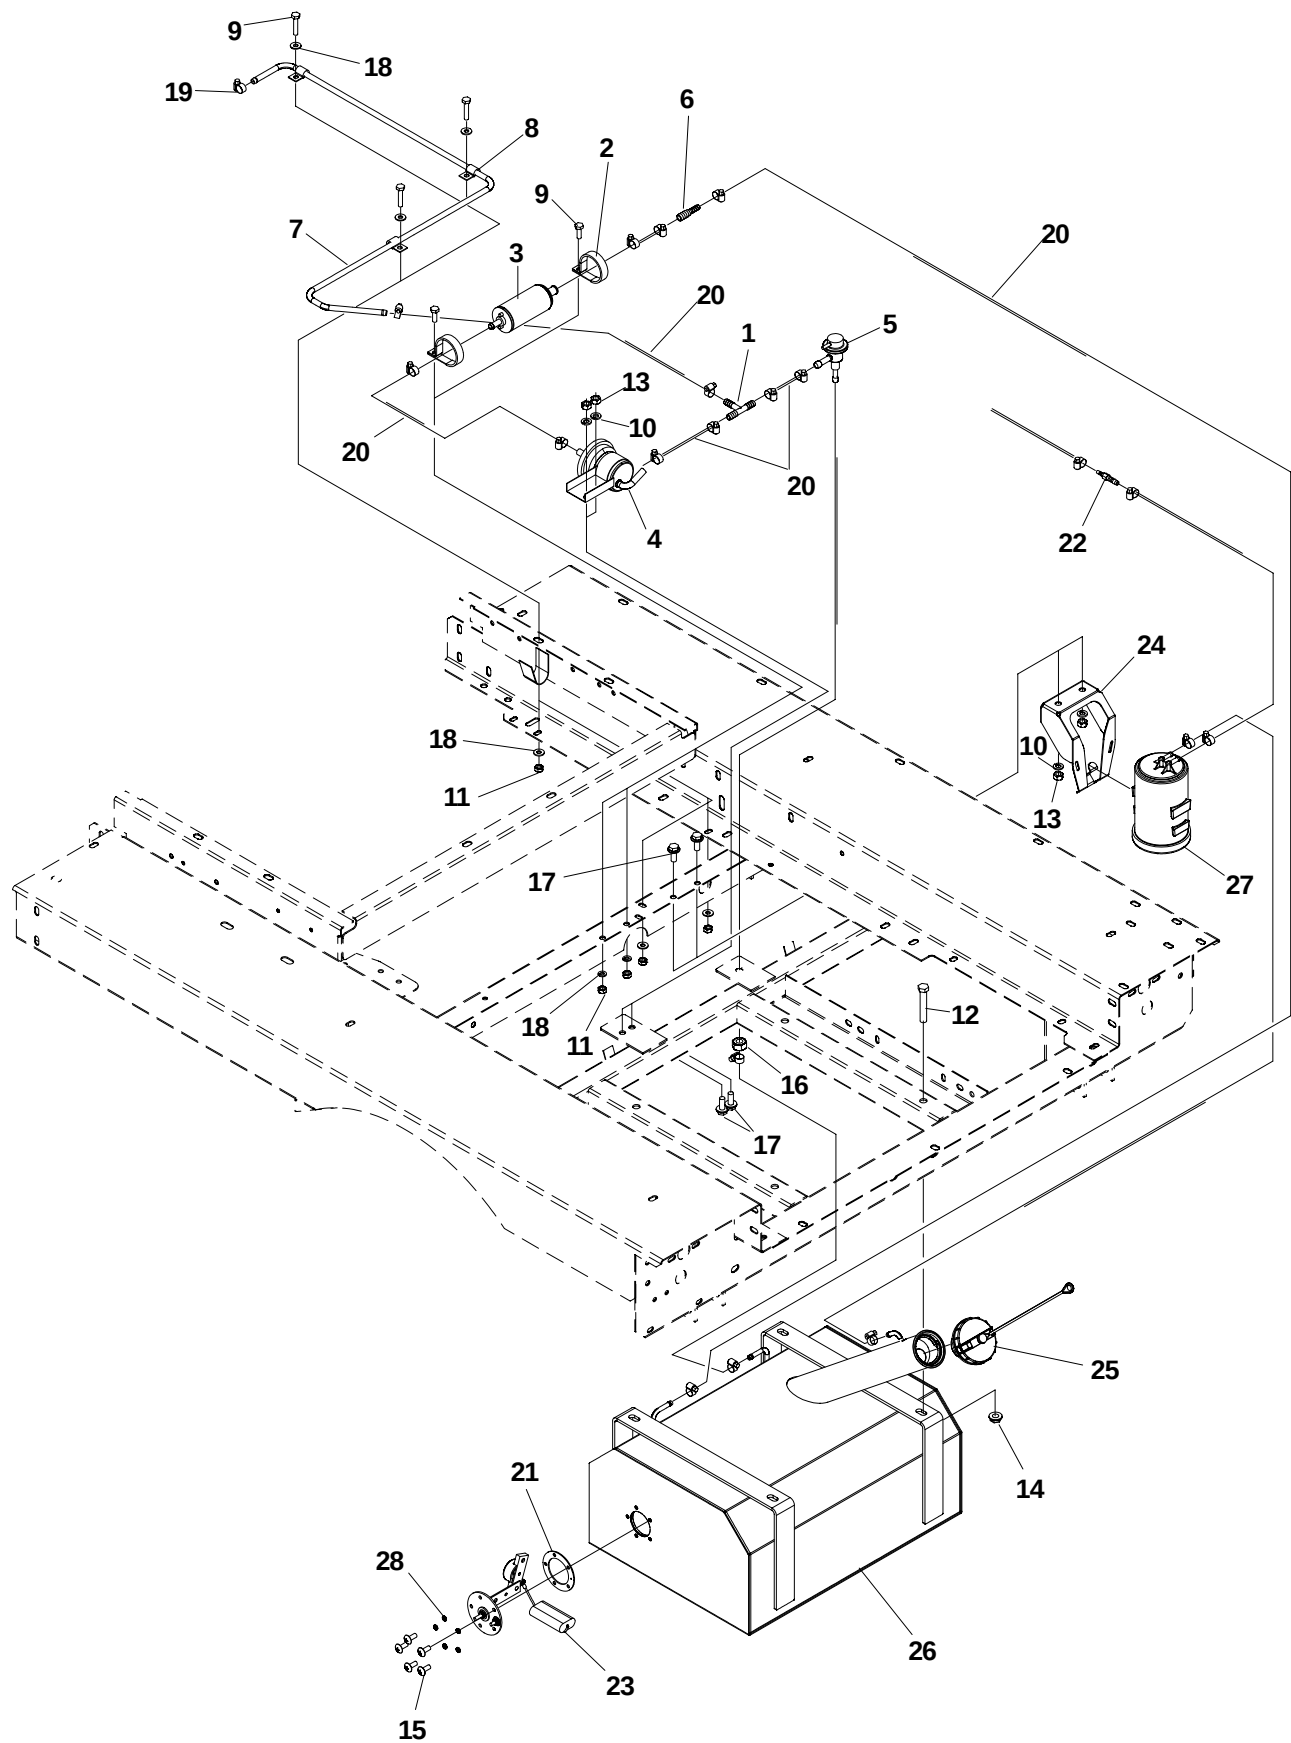

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2700161	Connector, tee 5/16"	1	Not illustrated.
2	2700166	Clamp, fuel pump	2	
3	2701897	Pump, fuel	1	
4	2701898	Filter, fuel	1	
5	2701899	Regulator	1	
6	2700178	Connector, union	1	
7	2702303	Tube, fuel	1	
8	2702388	Half clamp	3	
9	300646	Screw, 1/4–20 x 3/4	5	
10	306325	Lockwasher, 5/16	4	
11	306375	Nut, 1/4–20	5	
12	306836	Screw, 3/8–16 x 2 1/4	4	
13	306932	Nut, 5/16–18	4	
	320107	Tie, cable, 7 1/2" (191 mm)	5	
14	548804	Nut, 3/8–16	4	
15	548900	Screw, #10–24 x 1/2	5	
16	800875	Nut, 12–1.25	1	
17	800974	Screw, #10 x 1, tapping	4	
18	816307	Washer, 9/32	8	
19	825624	Clamp, hose	20	
20	826590	Hose, fuel, 25' (7.6 M)	As Req'd.	
21	829954	Gasket	1	
22	834036	Connector, hose	1	
23	834582	Sender, fuel level	1	
24	844637.7	Bracket, canister	1	
25	2702436	Cap, fuel	1	
26	844654.7	Tank, fuel	1	
27	844670	Canister, carbon	1	
28	844748	O–ring	5	


6.43 EXHAUST SYSTEM

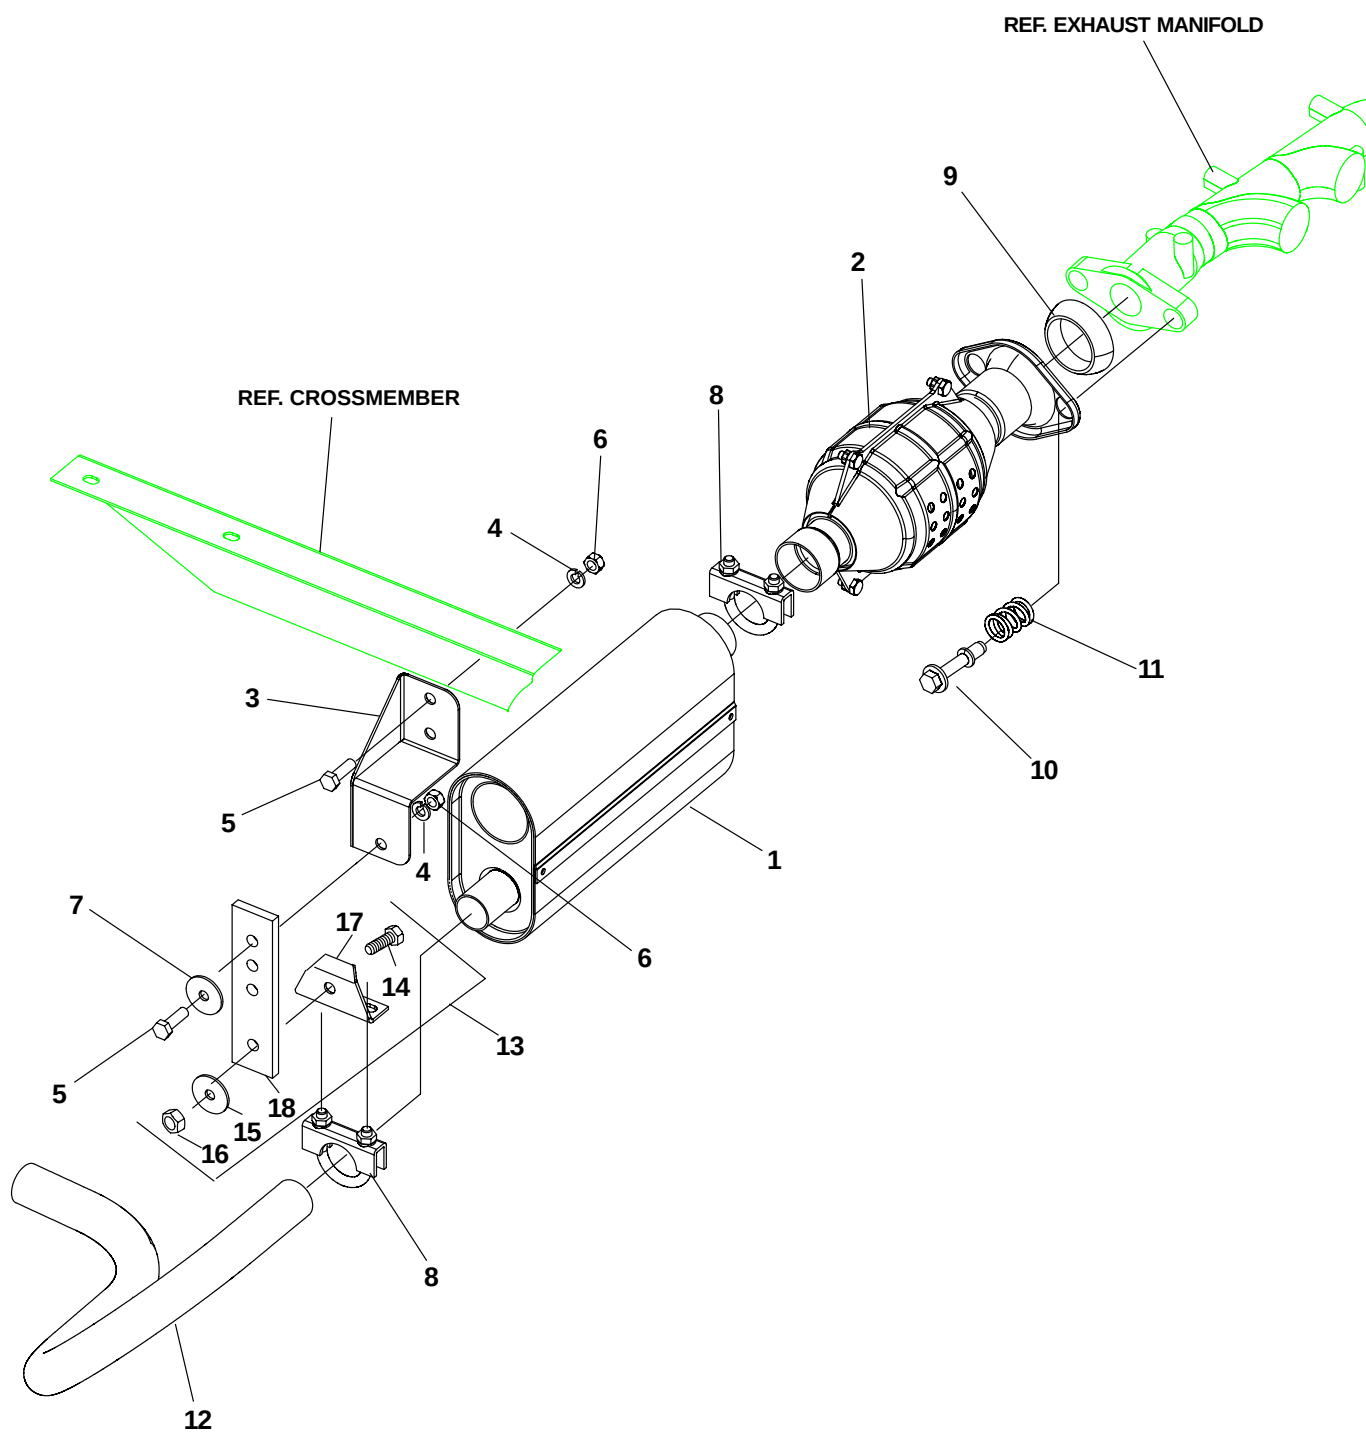

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701045.8	Muffler	1	
2	2701089	Converter, catalytic	1	
3	2702374.7	Bracket, muffler hanger	1	
4	306325	Lockwasher, 5/16	3	
5	306416	Screw, 5/16–18 x 1	3	
6	306932	Nut, 5/16–18	3	
7	548159	Washer, 5/16	1	
8	841982	Clamp, tubing	2	
9	14183–82050	Seal ring, muffler flange	1	
10	09119–10039	Bolt, muffler flange	2	
11	14492–82001	Spring, muffler flange	2	
12	842884	Tailpipe	1	
13	887175	Hanger assembly, muffler	1	
14	306322	•Screw, 5/16–18 x 7/8	1	
15	548159	•Washer, 5/16	1	
16	800290	•Nut, 5/16	1	
17	831603	•Bracket	1	
18	831604	•Strap, tailpipe hanger	1	

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.


6.44 DIFFERENTIAL

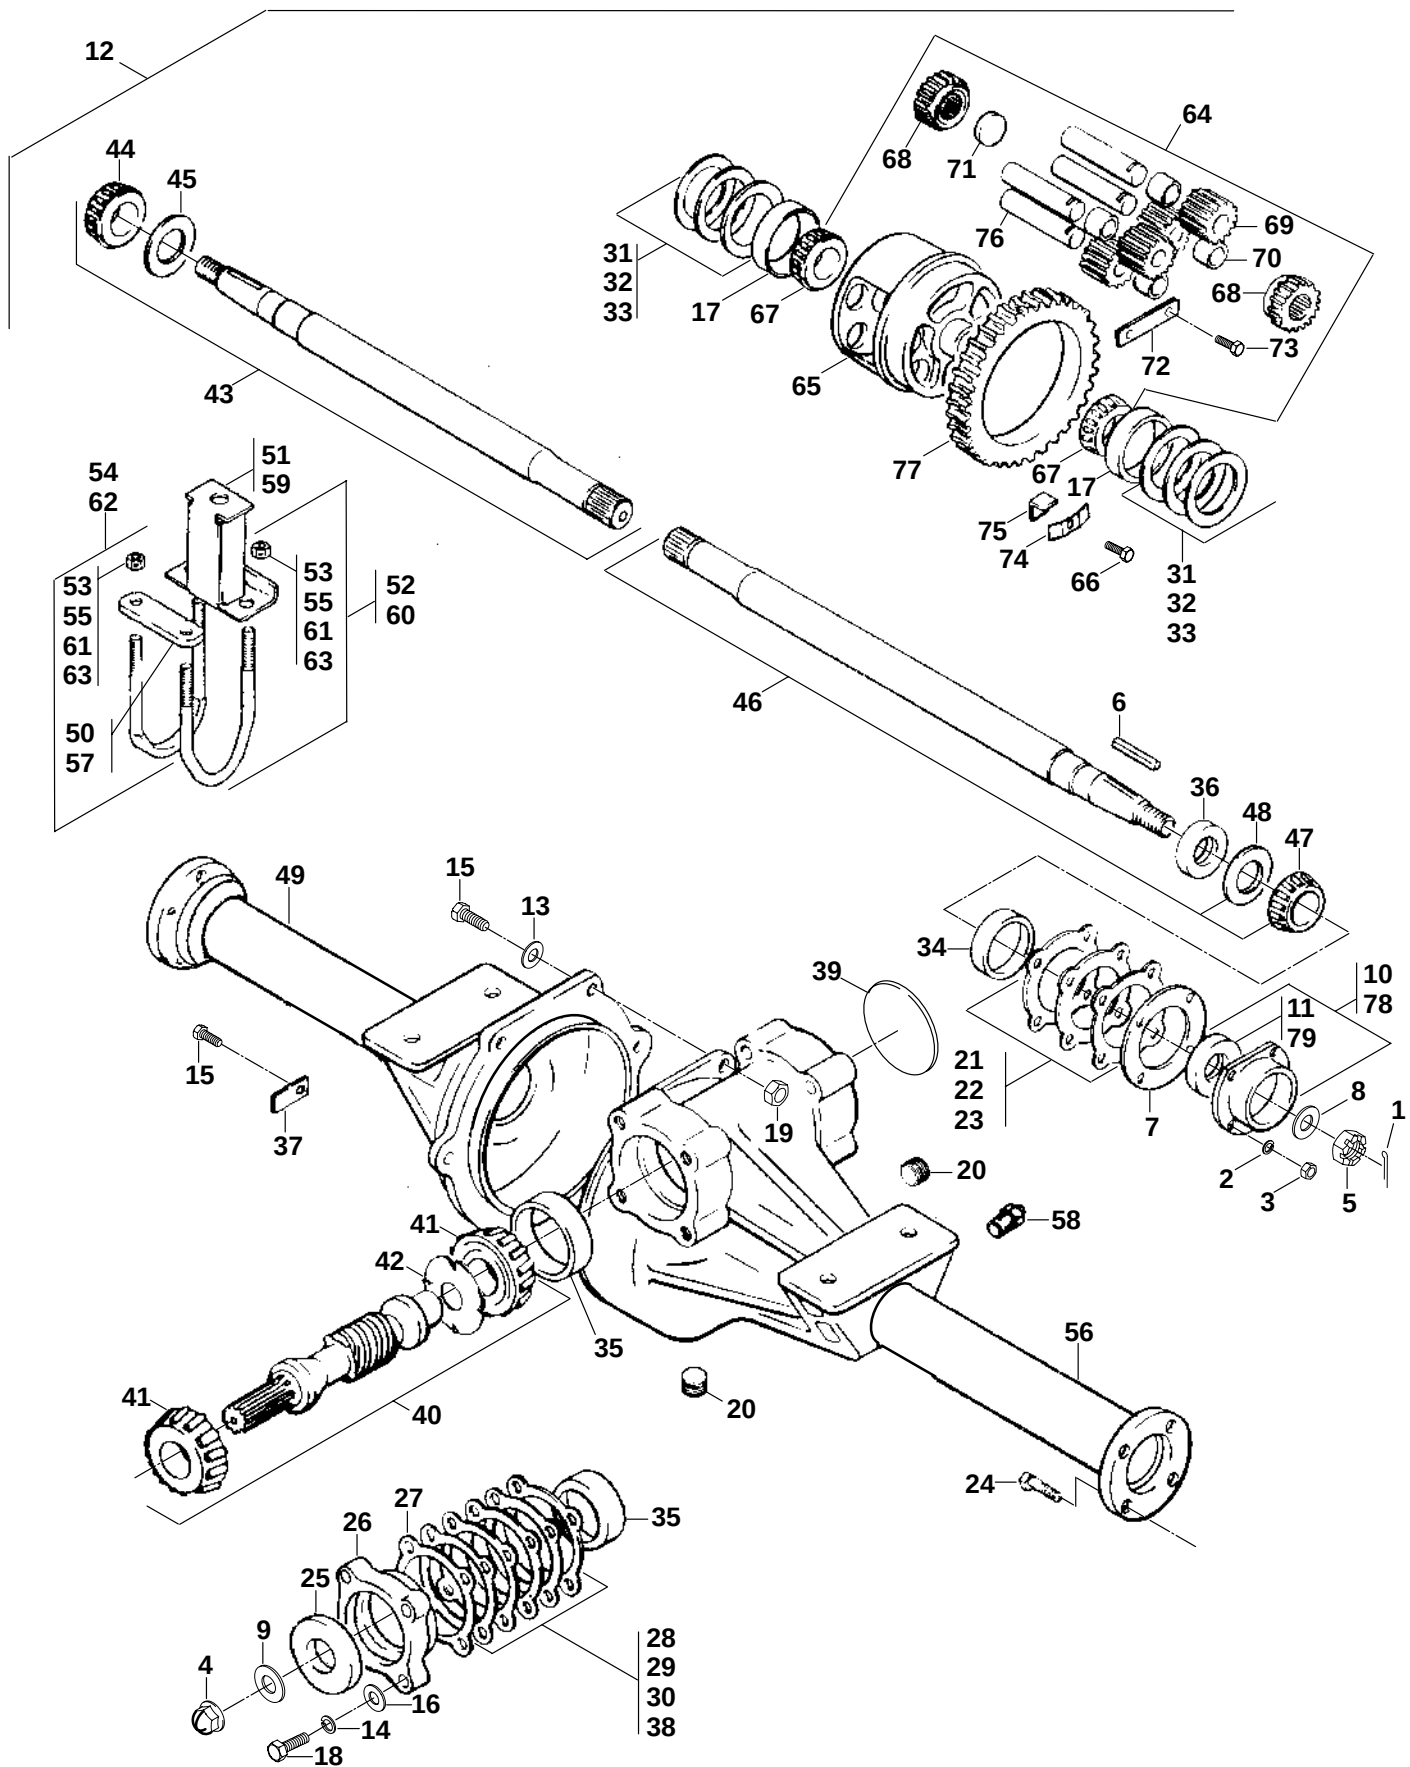

Ref. No.	Part No.	Description	No. Req'd	Notes
1	304636	Pin, cotter, 1/8" x 1 1/8"	2	
2	306325	Lockwasher, 5/16"	8	
3	306932	Nut, 5/16-18	8	
4	800198	Nut, lock, 1/2-20	1	
5	805843	Nut, castle, 5/8-18	2	
6	805875	Key, hub, 3/16" x 3/16" x 1 3/4"	2	
7	808303	Gasket, bearing	2	
8	809156	Washer, thrust, 5/8"	2	
9	809180	Washer, 7/16"	1	
10	879476	Retainer, seal	2	
11	814488	Seal, bearing	1	
12	2701466	Differential, complete	1	8.2:1 ratio
	OR			
	894906	Differential, complete	1	10.25:1 ratio
13	103867	•Washer, 5/16"	5	
14	120177	•Lockwasher, 3/8"	4	
15	304055	•Screw, 5/16-18 x 1 3/8"	6	
16	306405	•Washer, 3/8"	4	
17	320122	•Cup, tapered roller bearing	2	
18	2702248	•Screw, 3/8-16 x 1 3/4"	4	
19	800290	•Nut, lock, 5/16-18	6	
20	800356	•Plug, 1/2-14	2	
21	805320	•Shim, .005	As Req'd	
22	805321	•Shim, .010	As Req'd	
23	805322	•Shim, .030	As Req'd	
24	806251	•Screw, 5/16-18 x 15/16"	8	
25	812335	•Seal, oil	1	
26	814226	•Housing, bearing	1	
27	814465	•Gasket	2	
28	814466	•Shim, .005	As Req'd	
29	814467	•Shim, .010	As Req'd	
30	814468	•Shim, .030	As Req'd	
31	814469	•Shim, .003	As Req'd	
32	814470	•Shim, .005	As Req'd	
33	814471	•Shim, .010	As Req'd	
34	814474	•Cup, roller bearing	2	
35	814476	•Cup, roller bearing	2	
36	814477	•Seal, rear axle	2	
37	816045	•Tag, ratio	1	8.2:1 ratio
	OR			
	815490	•Tag, ratio	1	10.25:1 ratio
38	816515	•Shim, .003	As Req'd	
39	818226	•Plug, expansion, 2 1/2" (6 cm)	1	
40	879748	•Worm w/bearings & slinger	1	8.2:1 ratio
	OR			
	879961	•Worm w/bearings & slinger	1	10.25:1 ratio
41	814475	••Cone, tapered roller bearing	2	
42	886706	••Slinger set, oil	1	
43	885033	•Axle, RIGHT, w/bearings, 20 1/32" (51 cm)	1	
44	815403	••Cone, tapered roller bearing	1	
45	827018	••Ring, backing	1	
46	885034	•Axle, LEFT, w/bearings, 23 1/4" (59cm)	1	
47	815403	••Cone, tapered roller bearing	1	
48	827018	••Ring, backing	1	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.


6.44 DIFFERENTIAL

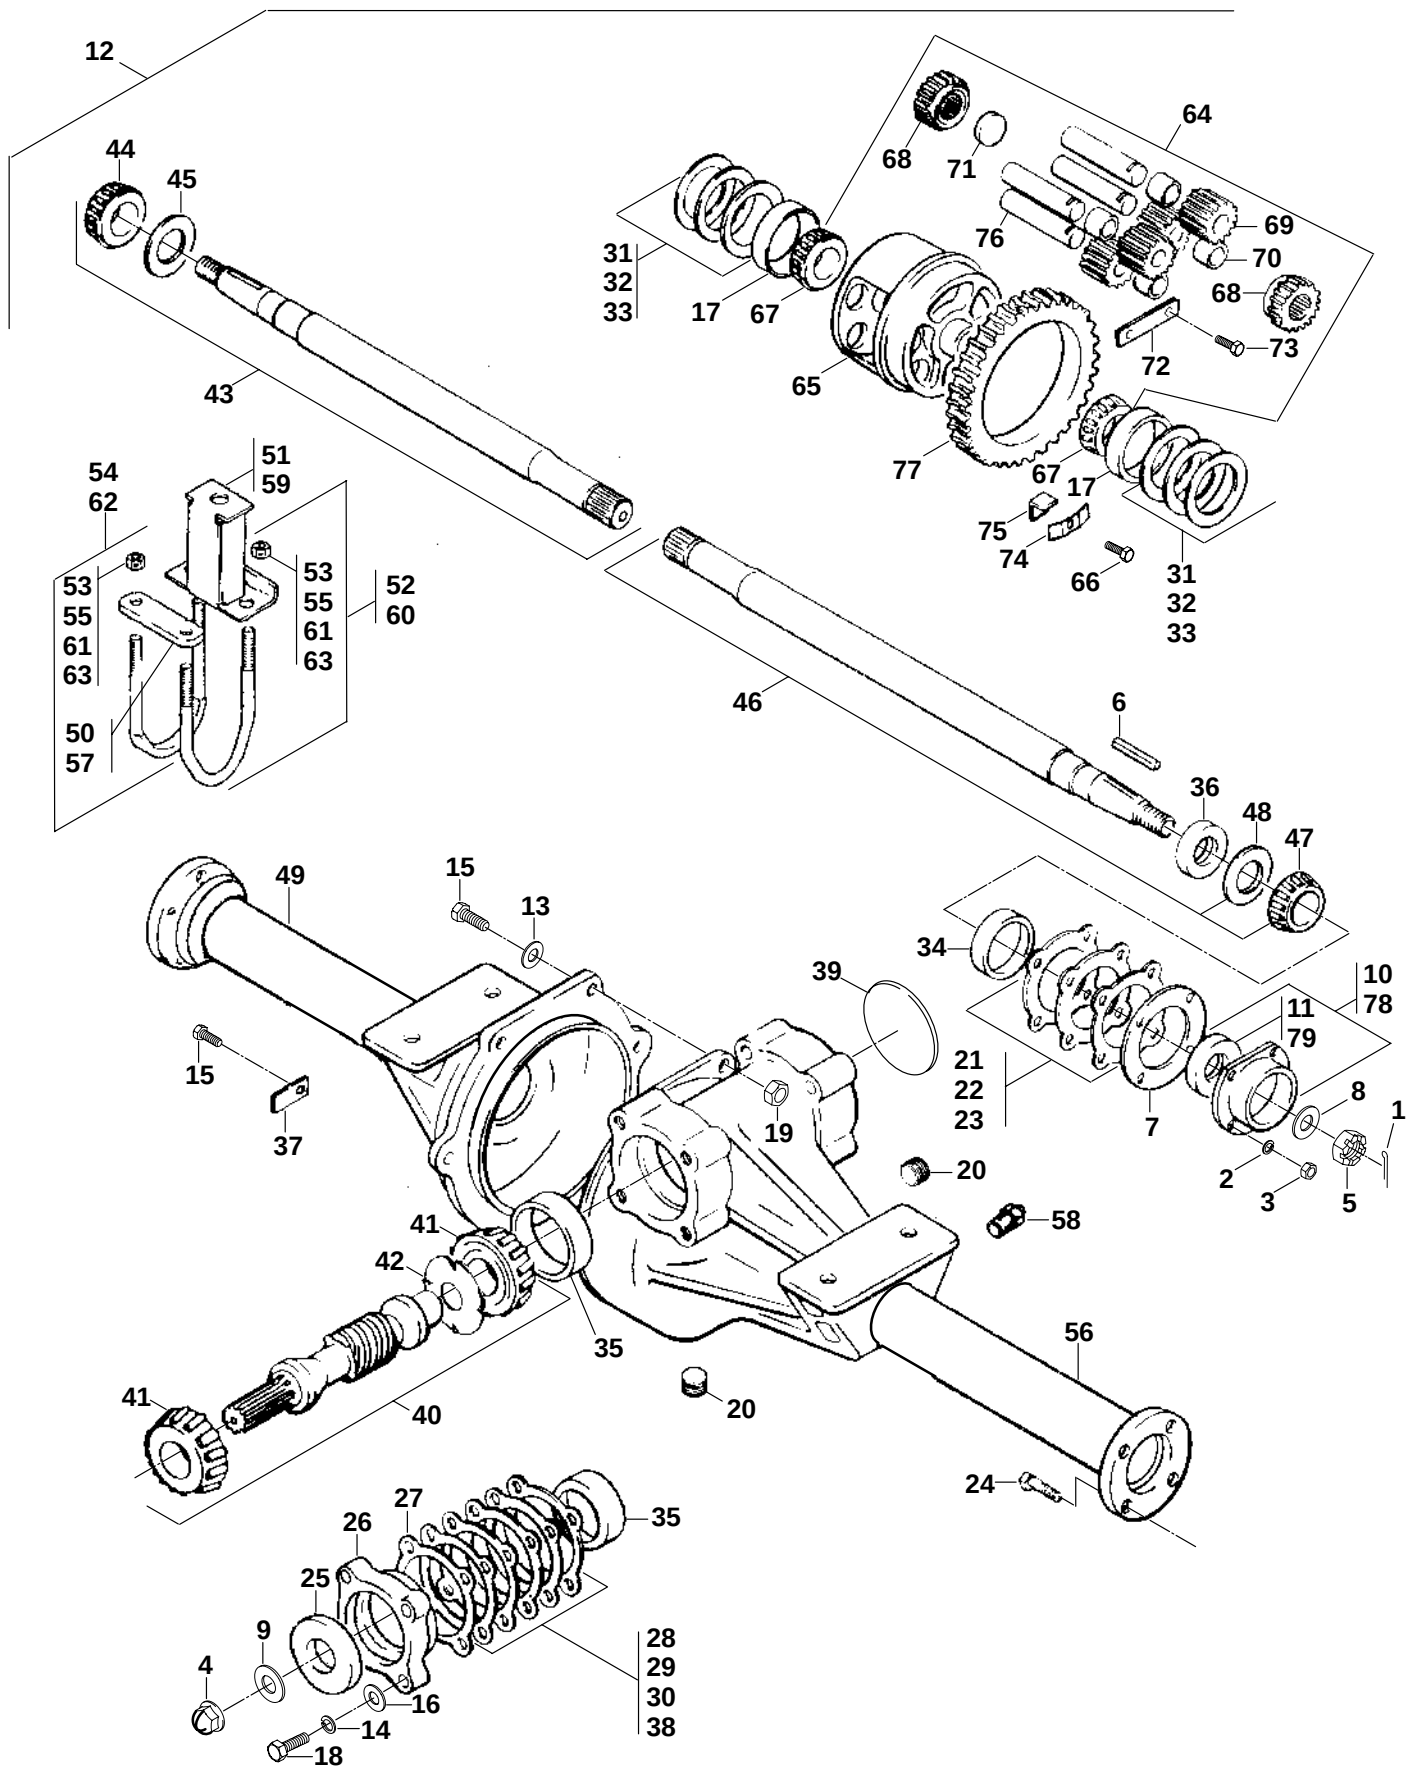

Ref. No.	Part No.	Description	No. Req'd	Notes
49	886204	•Housing, axle, RIGHT	1	
50	812218	••Plate	1	
51	834979	••Plate, upstop	1	
52	887187	••U-bolt w/nuts, 2" (5 cm)	1	
53	548061	•••Nut, lock, 7/16-20	2	
54	887188	••U-bolt w/nuts, 2 1/2" (6 cm)	1	
55	548061	•••Nut, lock, 7/16-20	2	
56	886205	•Housing, axle, LEFT	1	
57	812218	••Plate	1	
58	827486	••Valve, breather	1	
59	834979	••Plate, upstop	1	
60	887187	••U-bolt w/nuts, 2" (5 cm)	1	
61	548061	•••Nut, lock, 7/16-20	2	
62	887188	••U-bolt w/nuts, 2 1/2" (6 cm)	1	
63	548061	•••Nut, lock, 7/16-20	2	
64	886999	•Gear, carrier	1	8.2:1 ratio
	OR			
	879962	•Gear, carrier	1	10.25:1 ratio
65	◇	••Housing, carrier	1	Not Offered.
66	306555	••Screw, 5/16-18 x 5/8"	2	
67	386767	••Cone, tapered roller bearing	2	
68	814481	••Gear, axle shaft	2	
69	814482	••Gear, differential planet	4	
70	814483	••Spacer	4	
71	814484	••Spacer	1	
72	815794	••Plate, locking	3	
73	816812	••Screw, 3/8-16 x 1 1/4"	6	
74	816823	••Plate, retainer	2	
75	816824	••Plate, locking	2	
76	816825	••Shaft, differential gear	4	
77	830557	••Gear, worm	1	8.2:1 ratio
	OR			
	814204	••Gear, worm	1	10.25:1 ratio
78	889065	•Retainer, seal	2	
79	834099	••Seal, bearing	1	


• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.45 COOLING SYSTEM

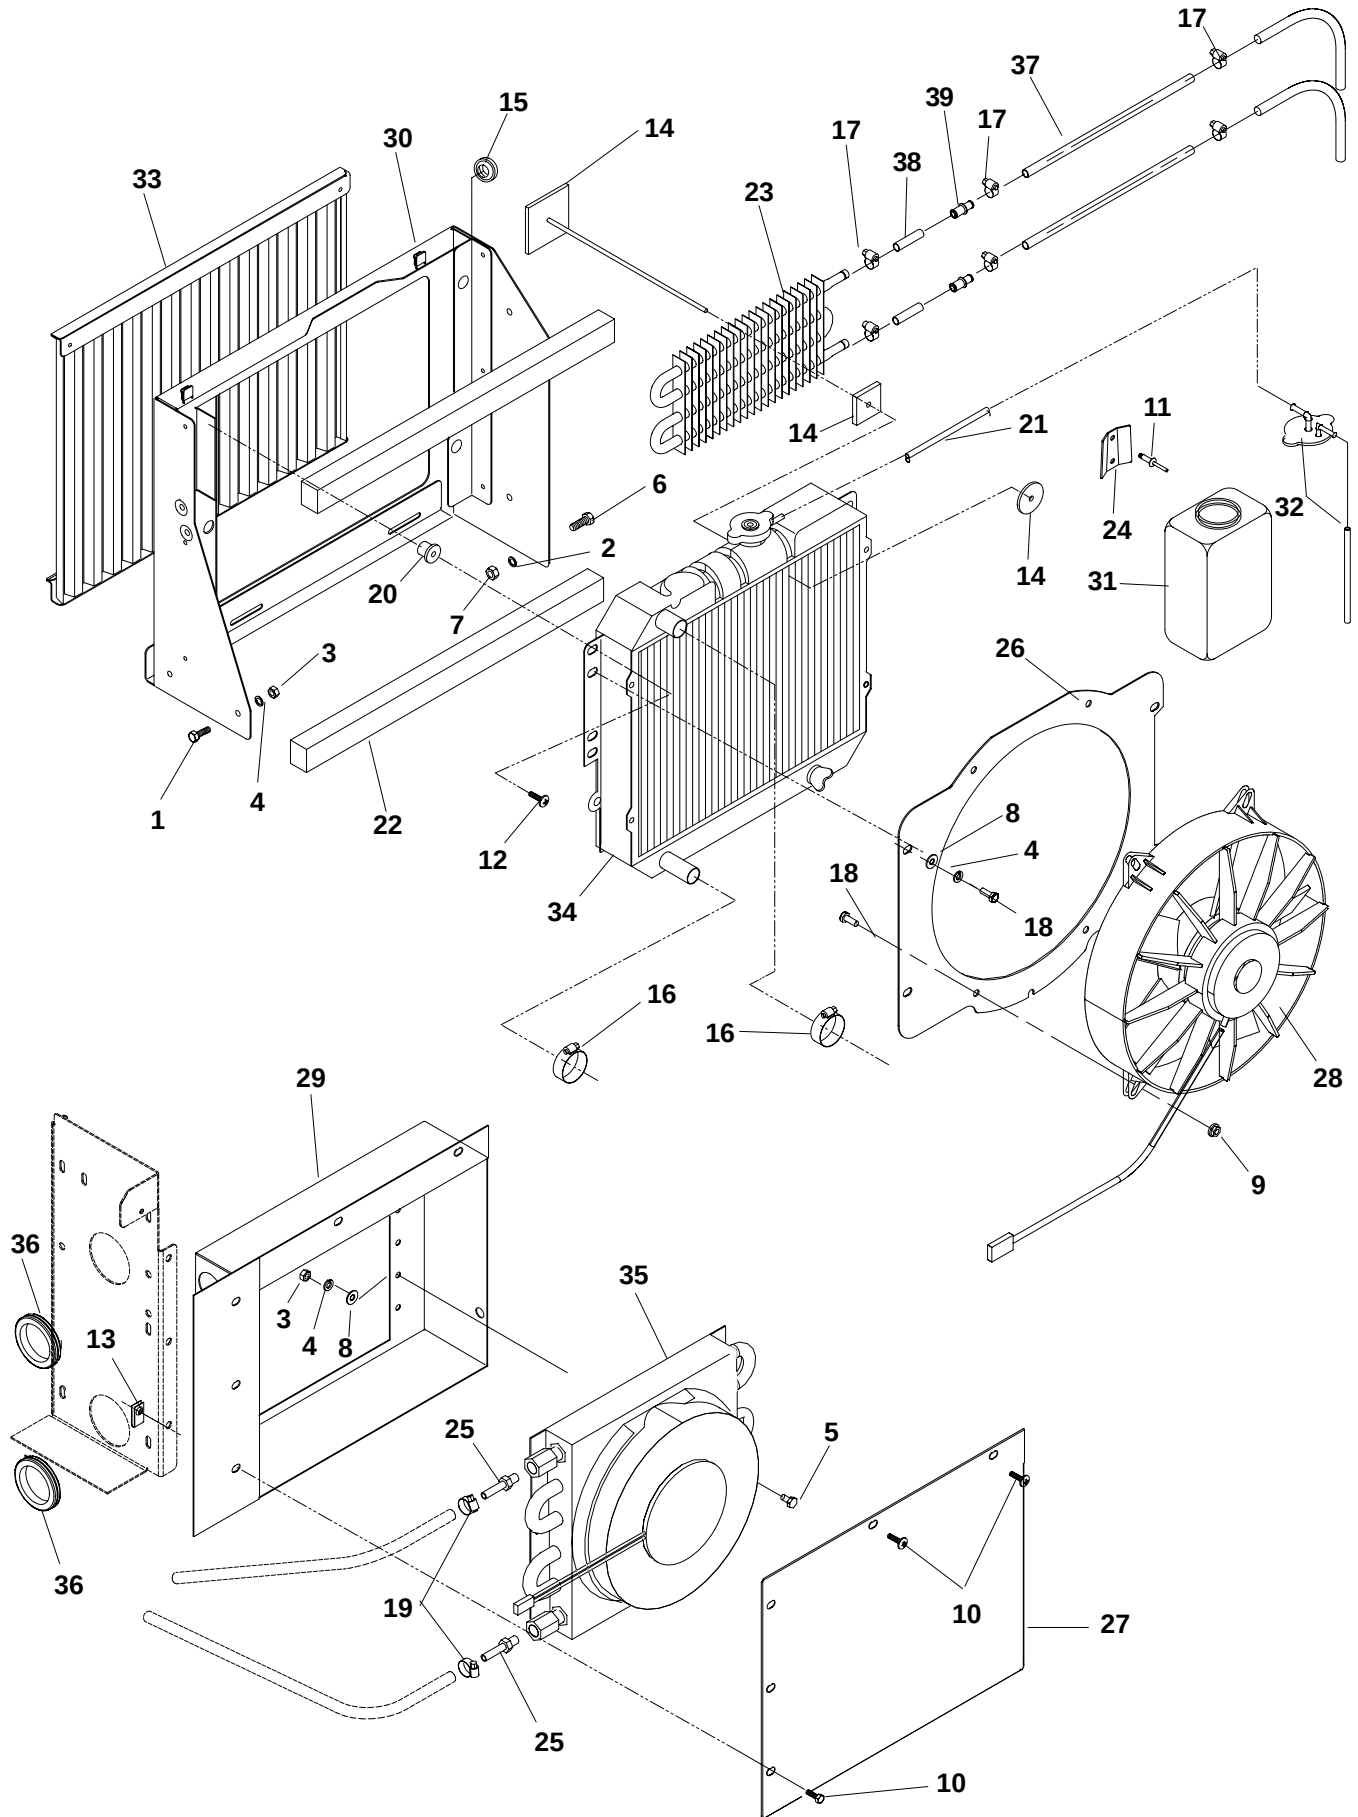

Ref. No.	Part No.	Description	No. Req'd	Notes
1	300646	Screw, 1/4-20 x 3/4	6	
2	306325	Lockwasher, 5/16	2	
3	306375	Nut, 1/4-20	5	
4	306396	Lockwasher, 1/4	9	
5	306419	Screw, 1/4-20 x 1/2	4	
6	306450	Screw, 5/16-18 x 3/4	2	
7	306932	Nut, 5/16-18	2	
8	308090	Washer, 1/4	9	
9	450452	Nut, M6-1.00	4	
10	800582	Screw, 1/4-20 x 3/4	5	
11	800390	Rivet, 1/8" x 25/64"	2	
12	800177	Screw, 5/16-18 x 3/4	4	
13	800279	Nut, 1/4-20, speed	5	
14	800789	Kit, oil cooler mounting	1	
15	809231	Grommet	2	
16	820889	Clamp	2	
17	825624	Clamp	6	
18	828162	Screw, M6-1.0 x 16	8	
19	832033	Clamp	2	
20	831846	Nut, isolation	4	
21	835805	Hose, radiator overflow, 4' (1.2 M)	As Req'd.	
22	833512	Foam	2	
23	838340	Cooler, oil	1	
24	842782	Bracket, overflow bottle	1	
25	842944	Fitting, hose, 1/2" ID	2	
26	845072.7	Bracket, fan	1	
27	845073.7	Panel, left oil cooler cover	1	
28	845074	Fan	1	
29	845075.7	Bracket, oil cooler	1	
30	888497	Mount, radiator	1	
31	889050	Reservoir, coolant	1	
32	889051	Cap, coolant reservoir	1	
33	2700819.7	Screen	1	
34	894590	Radiator	1	
35	894901	Cooler, oil electric fan	1	
36	825779	Grommet	2	
37	2701043	Hose, hydraulic, 25' (7.6 M)	As Req'd.	
38	2701167	Hose	2	
39	2701166	Union	2	


6.46 HEATER/DEFROSTER

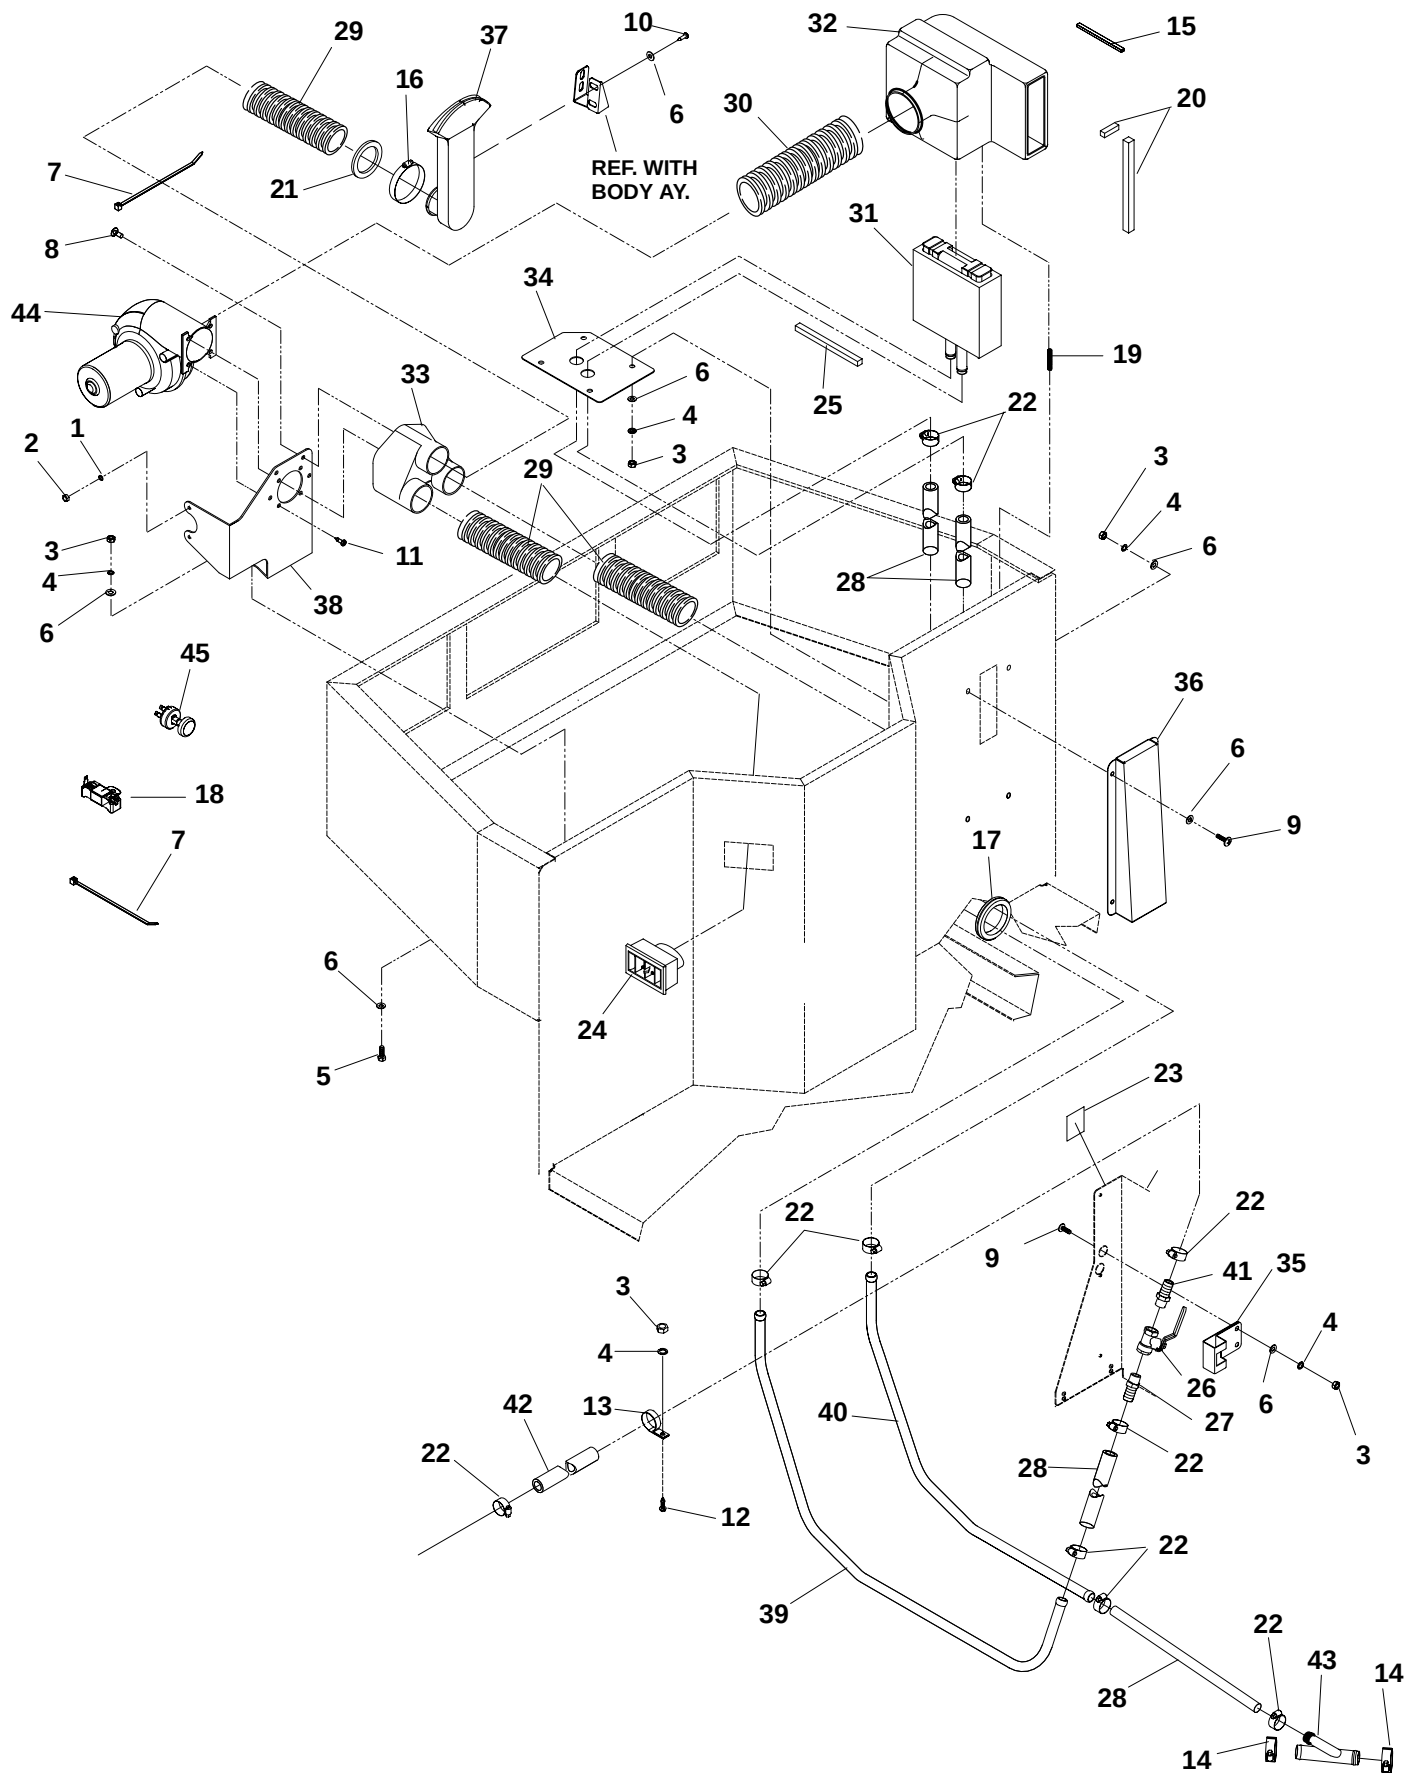

Ref. No.	Part No.	Description	No. Req'd	Notes
1	120052	Lockwasher, #10	2	
2	132520	Nut, #10-32	2	
3	306375	Nut, 1/4-20	14	
4	306396	Lockwasher, 1/4	14	
5	306487	Screw, 1/4-20 x 5/8	4	
6	308090	Washer, 1/4	24	
7	320107	Tie, cable 7 1/2 (191 mm)	7	
8	548045	Screw, 1/4-20 x 3/4	4	
9	800026	Screw, 1/4-20 x 3/4	6	
10	800384	Screw, 1/4 x 1, tapping	2	
11	800630	Screw, #12-24 x 3/4, tapping	4	
12	800869	Screw, 1/4-20 x 3/8, tapping	1	
13	800929	Clamp	1	
14	820889	Clamp	2	
15	821893	Trim, push-on, 12' (3.7 M)	As Req'd.	
16	825358	Clamp, worm-drive hose	1	
17	825779	Grommet	1	
18	825994	Resistor	1	
19	829815	Stud, threaded	4	
20	830355	Weather seal, 35' (10.7 M)	As Req'd.	
21	831006	Gasket	1	
22	832033	Clamp	10	
23	832804	Decal, information	1	
24	833846	Louver, air	2	
25	833851	Seal	3	
26	833857	Valve, ball check	1	
27	833858	Fitting, hose	1	
28	833862	Hose, heater	1	
29	833939	Hose, air	3	
30	833940	Hose, air	1	
31	833949	Core, heater	1	
32	833958	Housing	1	
33	833974	Diffuser, air	1	
34	833984	Panel, core housing	1	
35	833985	Clamp, valve	1	
36	833986	Intake, cab air	1	
37	834007	Duct, defroster	1	
38	836024	Bracket, heater blower	1	
39	842918	Tube, heater supply	1	
40	842919	Tube, heater return	1	
41	842944	Fitting, hose	1	
42	843200	Tube, heater return, 25' (7.6 M)	As Req'd.	
43	888856	Tube, "Y"	1	
44	889596	Blower	1	
45	894511	Switch, heater 2-speed	1	


6.47 ELECTRICAL COMPONENTS (FRONT)

NOTE: For Dipswitches setting for Modification 53749 (New York City Police).

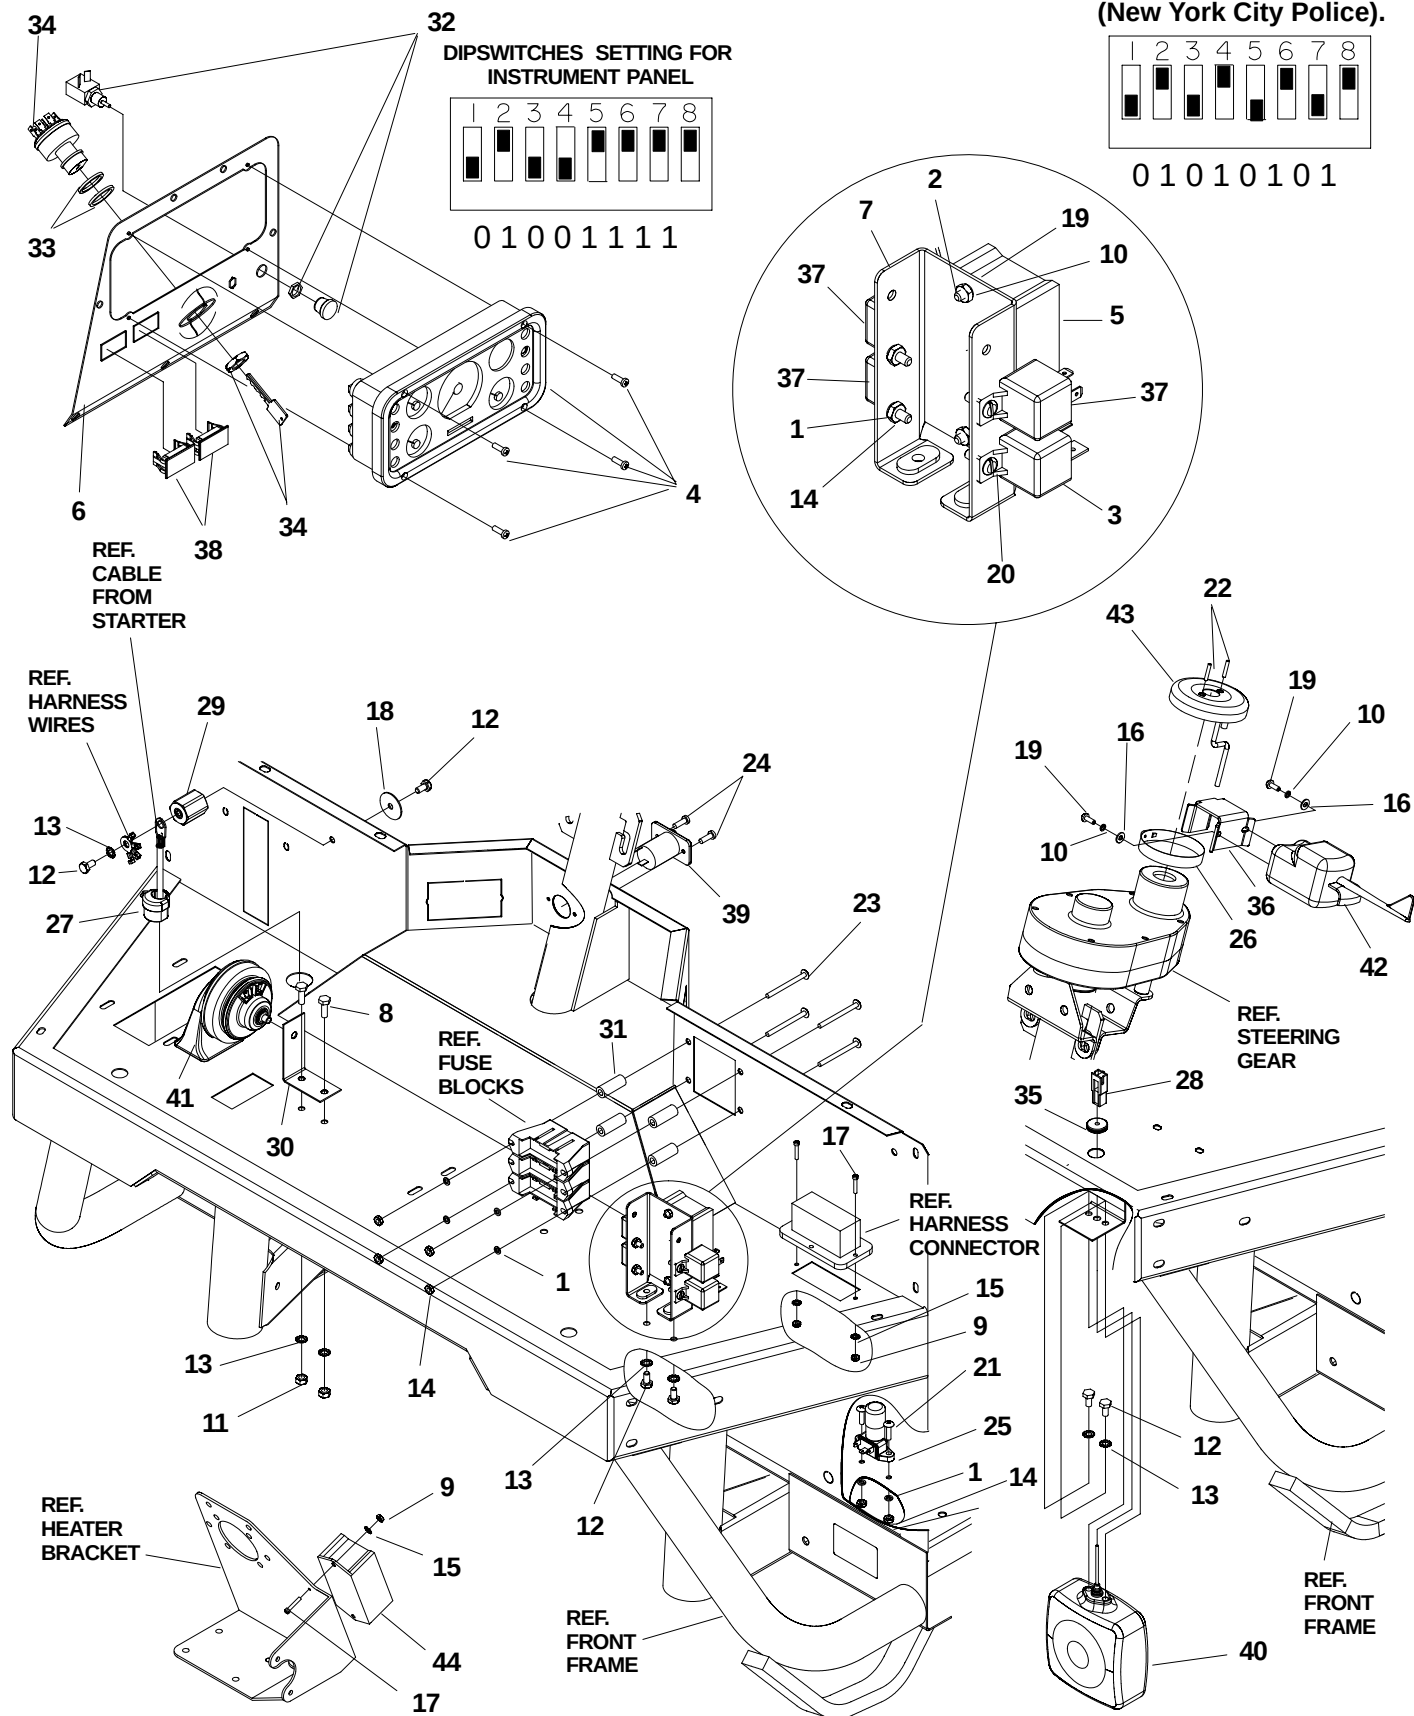

Ref. No.	Part No.	Description	No. Req'd	Notes
1	120052	Lockwasher #10	12	Not illustrated.
2	133079	Nut, #8-32	2	
3	2700867	Relay, 12V, 70A	1	
4	2700904	Panel, w/speedometer instrument	1	
5	2700918	Module, speed limit	1	
6	2701409.7	Panel, instrument	1	
7	2701849.7	Bracket, relay	1	
	2701869	Harness, front	1	
	2702138	Flasher, 12V	1	
8	300646	Screw, 1/4-20 x 3/4	2	
9	302437	Nut, #6-32	3	
10	306310	Lockwasher, #8	4	
11	306375	Nut, 1/4-20	2	
12	306419	Screw, 1/4-20 x 1/2	8	
13	306488	Lockwasher, 1/4	9	
14	306531	Nut, #10-24	10	
15	306990	Lockwasher, #6, shakeproof, external	3	
16	308089	Washer, #10	2	
17	316056	Screw, #6-32 x 3/4	3	
18	548175	Washer, 1/4	1	
19	800178	Screw, #8-32 x 1/2	4	
20	800271	Screw, #10-24 x 1/2	4	
21	800296	Screw, #10-24 x 3/4	2	
22	800882	Screw, #6-32 x 3/4	2	
23	800911	Screw, #10-24 x 2 1/4	4	
24	800943	Screw, 10-14 x 5/8, tapping	2	
25	817309	Switch, dimmer	1	
26	825358	Clamp, worm-drive hose	1	
27	825893	Bushing, strain rlf	1	
28	826726	Connector, 1 contact female	2	
29	828231	Insulator	1	Not illustrated. Not illustrated.
30	828613	Bracket	1	
31	830135	Bushing	4	
32	832094	Switch, dome light	1	
33	837298	Spacer	2	
34	838354	Switch, ignition, NYC	1	
35	839168	Grommet	2	
36	839197	Bracket, turn signal	1	
37	843167	Relay, 12V, 15A	3	
38	843306	Plug, panel	2	
39	843942	Socket, 12V accessory plug	1	
	845050	Grease, electrical connector	1	
40	885964	Lamp, turn signal	2	
41	886090	Horn	1	
	890000	Buzzer	1	
	894109	Harness, wiper	1	
42	894851	Switch, turn signal	1	
43	894853	Sensor, steering position	1	
44	894854	Module, control	1	

6.48 ELECTRICAL COMPONENTS (MAIN)

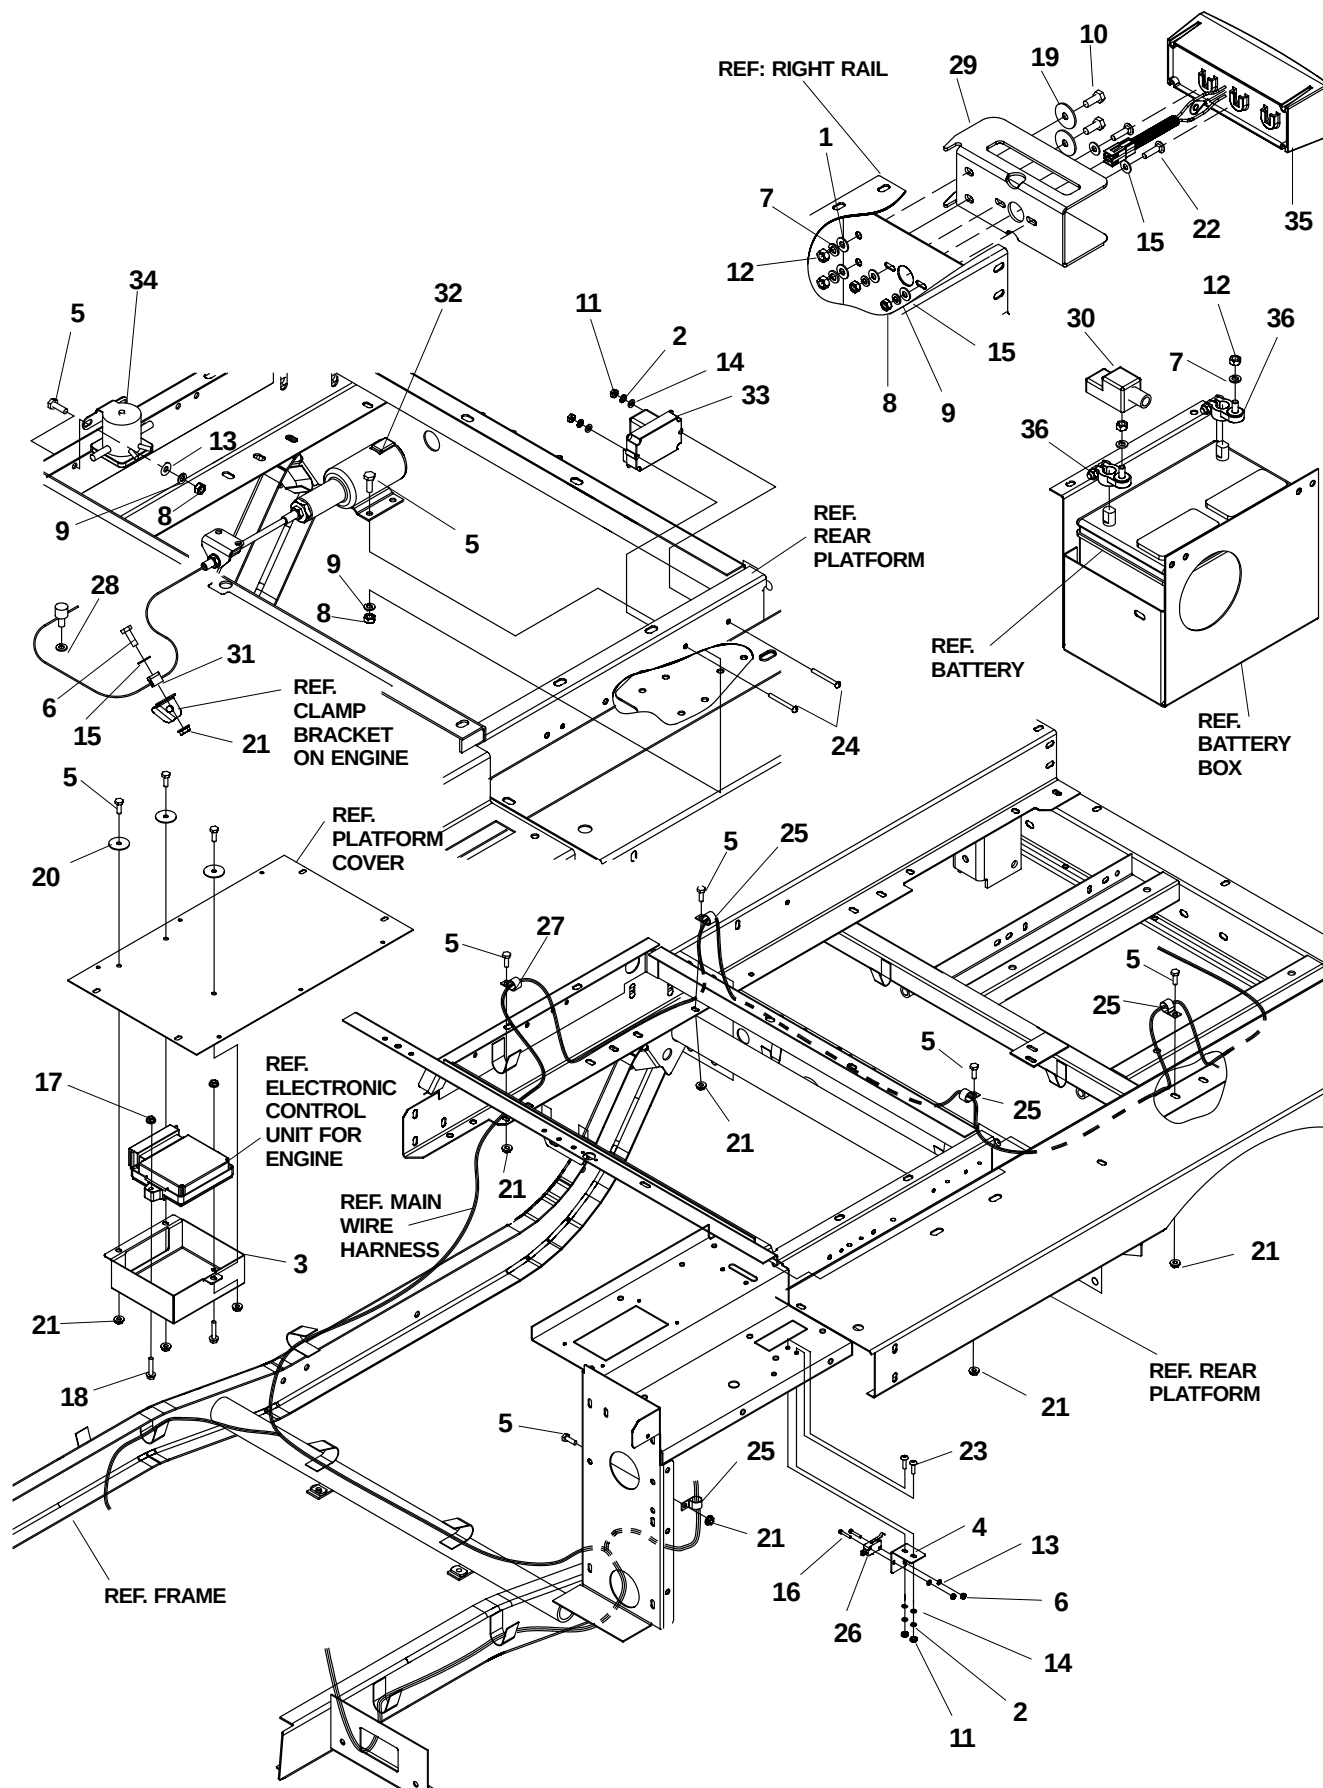

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16	4	Not illustrated.
2	120052	Lockwasher, #10	4	
	2700511	Harness, diode	1	
3	2701105.7	Cover, engine control unit	1	
4	2702136.7	Bracket, park brake switch	1	
5	300646	Screw, 1/4-20 x 3/4	15	
6	302437	Nut, #6-32	2	
7	306325	Lockwasher, 5/16	6	
8	306375	Nut, 1/4-20	10	
9	306396	Lockwasher, 1/4	10	
10	306450	Screw, 5/16-18 x 3/4	4	
11	306531	Nut, #10-24	4	
12	306932	Nut, 5/16-18	6	
13	306990	Lockwasher, #6, shakeproof, ext.	2	
14	308089	Washer, #10	4	
15	308090	Washer, 1/4	11	
16	316056	Screw, #6-32 x 3/4	2	
17	450452	Nut, M6-1.00	2	
18	452380	Bolt, M6-1.00	2	
19	548159	Washer, 5/16	4	
20	548175	Washer, 1/4	3	
21	548910	Nut, 1/4-20	9	
22	800074	Bolt, 1/4-20 x 1 1/4	4	
23	800296	Screw, #10-24 x 3/4	2	
24	800299	Screw, #10-24 x 1	2	
25	809092	Clamp	4	
26	829754	Switch, snap action	1	
27	831225	Clamp	1	
28	831889	Washer, swivel	1	
29	832649	Guard, tail light	2	
30	837462	Boot, battery terminal	1	
31	842767	Clamp, fuel tube	1	
32	845218	Solenoid with cable	1	
33	845219	Module, control	1	
34	879945	Solenoid, 12V	1	
35	888089	Taillight, RIGHT	1	Not illustrated.
	888090	Taillight, LEFT	1	
36	893395	Terminal, battery	2	

6.49 DECALS

NOTICE

1. THIS IS A NEGATIVE GROUND SYSTEM. REVERSING BATTERY CONNECTION WILL DAMAGE ALTERNATOR RECTIFIER.
2. BOOSTER BATTERIES USED FOR STARTING MUST BE CONNECTED WITH PROPER POLARITY
3. BATTERY CABLES SHOULD BE DISCONNECTED BEFORE USING A "FAST CHARGER". 816991

⚠ WARNING

PARKING BRAKES ARE NOT AUTO-
MATICALLY APPLIED. VEHICLE MAY
MOVE CAUSING PERSONAL INJURY
AND/OR PROPERTY DAMAGE. ALWAYS
APPLY HAND OR FOOT BRAKES. 822819

NOTICE

THIS VEHICLE IS A MOTORCYCLE
AND MUST BE OPERATED IN
ACCORDANCE WITH MOTORCYCLE
LAWS AND REGULATIONS.

⚠ WARNING

FAILURE TO HEED THESE WARNINGS MAY RESULT IN PERSONAL OR FATAL INJURY TO YOU OR OTHERS AND MAY ALSO RESULT IN EQUIPMENT AND/OR PROPERTY DAMAGES. NEVER ALLOW UNSKILLED OR IMPROPERLY TRAINED PERSONNEL TO OPERATE THIS EQUIPMENT.

BEFORE OPERATING-READ, STUDY AND UNDERSTAND ALL WARNING LABELS AND OPERATING INSTRUCTIONS FURNISHED WITH THIS EQUIPMENT PRIOR TO USE. IF ANY PART OF THIS MATERIAL IS UNCLEAR, CONTACT YOUR FACTORY REPRESENTATIVE FOR CLARIFICATION. DO NOT EXCEED PAYLOAD CAPACITY GIVEN ON VEHICLE NAME PLATE OR PERMIT PASSENGERS ANY PLACE ON VEHICLE. CORNERING ABILITY OF A 3-WHEEL VEHICLE IS NOT AS GREAT AS A 4-WHEEL VEHICLE. PLACE HEAVY LOADS FORWARD OF REAR AXLE. UNBALANCED OR TOP HEAVY LOADS CAN CAUSE UPSET. HELMET IS RECOMMENDED.

WHILE OPERATING-REMAIN SEATED: USE BOTH HANDS FOR STEERING. KEEP ARMS AND LEGS WITHIN VEHICLE BODY. AVOID SUDDEN STARTS AND STOPS. SUDDEN SHARP TURNS CAN CAUSE UPSET. REGULATE SPEED TO MEET ROAD AND WEATHER CONDITIONS. DO NOT OPERATE IN OR NEAR AN EXPLOSIVE ENVIRONMENT. IF A MALFUNCTION OCCURS, CEASE OPERATION-DO NOT OPERATE VEHICLE UNTIL CONDITION IS CORRECTED. LOUD NOISE OCCURS IF FRONT SKID BAR STRIKES ROAD SURFACE. THIS INDICATES VEHICLE IS BEING OPERATED RECKLESSLY AND IS NEAR UPSET.

BEFORE LEAVING VEHICLE-TURN IGNITION TO "OFF" POSITION AND REMOVE KEY. APPLY PARKING BRAKE-PARKING BRAKE IS NOT AUTOMATICALLY APPLIED. FOLLOW PROCEDURE IN OPERATOR'S MANUAL FOR PARKING ON AN INCLINE.

IT IS YOUR RESPONSIBILITY TO KEEP ALL LABELS (DECALS) AND INSTRUCTIONAL LITERATURE LEGIBLE AND INTACT. REPLACEMENT LABELS (DECALS) AND LITERATURE ARE AVAILABLE FROM THE FACTORY.

⚠ WARNING

TO PREVENT POSSIBLE SEVERE
BURNS TO YOU OR OTHERS, DO
NOT REMOVE PRESSURE CAP
WHEN HOT. CONTENTS UNDER
PRESSURE. CHECK AND ADD
FLUID AT RESERVOIR.

KEEP VALVE
CLOSED WHEN
HEATER IS
NOT IN USE.

 WARNING

KEEP HANDS CLEAR. ELECTRIC FAN
MAY ENGAGE WITHOUT WARNING,
EVEN WITH IGNITION OFF

ENGINE COOLANT

NOTICE

THIS VEHICLE HAS A SPEED LIMITER THAT SLOWS THE ENGINE WHEN EXCEEDING TOP SPEED.

WHEN THIS HAPPENS, LET UP ON THE
GAS PEDAL AND LET THE VEHICLE SLOW.
REAPPLY THE GAS PEDAL TO RESUME SPEED.

NOTICE

DO NOT TOW OR PUSH THIS
VEHICLE AT SPEEDS IN EXCESS
OF 10 MPH OR TRANSMISSION
DAMAGE WILL OCCUR.

TRANSMISSION FLUID LEVEL
CHECK UNDER THIS COVER
-REFER TO SERVICE MANUAL
FOR PROPER PROCEDURE.

ENGINE COOLANT RESERVOIR
CHECK UNDER THIS COVER
-REFER TO SERVICE MANUAL
FOR PROPER PROCEDURE.

⚠ WARNING

CLEAN MASTER CYLINDER FILLER CAP BEFORE REMOVING. CONTAMINATES MAY CAUSE BRAKE FAILURE. USE ONLY D.O.T. 3 FLUID FROM A SEALED CONTAINER.

**ENGINE
OIL DIPSTICK**

STICK


[illegible]

FUSE PANEL

1.5 HORN BRK LTS	2.0 HEAD LTS TAIL LTS	2.0 HEATER FAN	3.0 ENGINE FANS
1.5 OPTIONAL CAB LTS	1.5 TURN SIGNALS	2.0 DOME LT WIPER	3.0 SPD LIMIT SOLENOID
1.0 TRANS- MISSION	1.5 POWER POINT	1.5 MAIN RELAY	1.5 INSTRUMENT PANEL

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701329	Decal, speed limiter	1	
2	2702594	Decal, carb EFI	1	
3	2702861	Decal, fuses	1	
4	816991	Decal, Notice Alt-Batt	1	
5	822819	Decal, Warning – Parking Brake	1	
6	825502	Decal, Notice Motorcycle	1	
7	825622	Decal, Warning–Brake Fluid	1	
8	825629	Decal, Warning–Vehicle Operation	1	
9	832130	Decal, Warning Liquid/Pressure	1	
10	832804	Decal, Information	1	
11	833607	Decal, Warning Electrical Fan	1	
12	840394	Decal, Notice	1	
13	840395	Decal, Transmission Fluid	1	
14	842990	Decal, EMS Control Information	1	
15	843439	Decal, Coolant	1	
16	843441	Decal, Coolant Reservoir	1	
17	843443	Decal, Engine Dipstick	1	

6.50 HEADLIGHTS, TAILLIGHTS & TURN SIGNALS

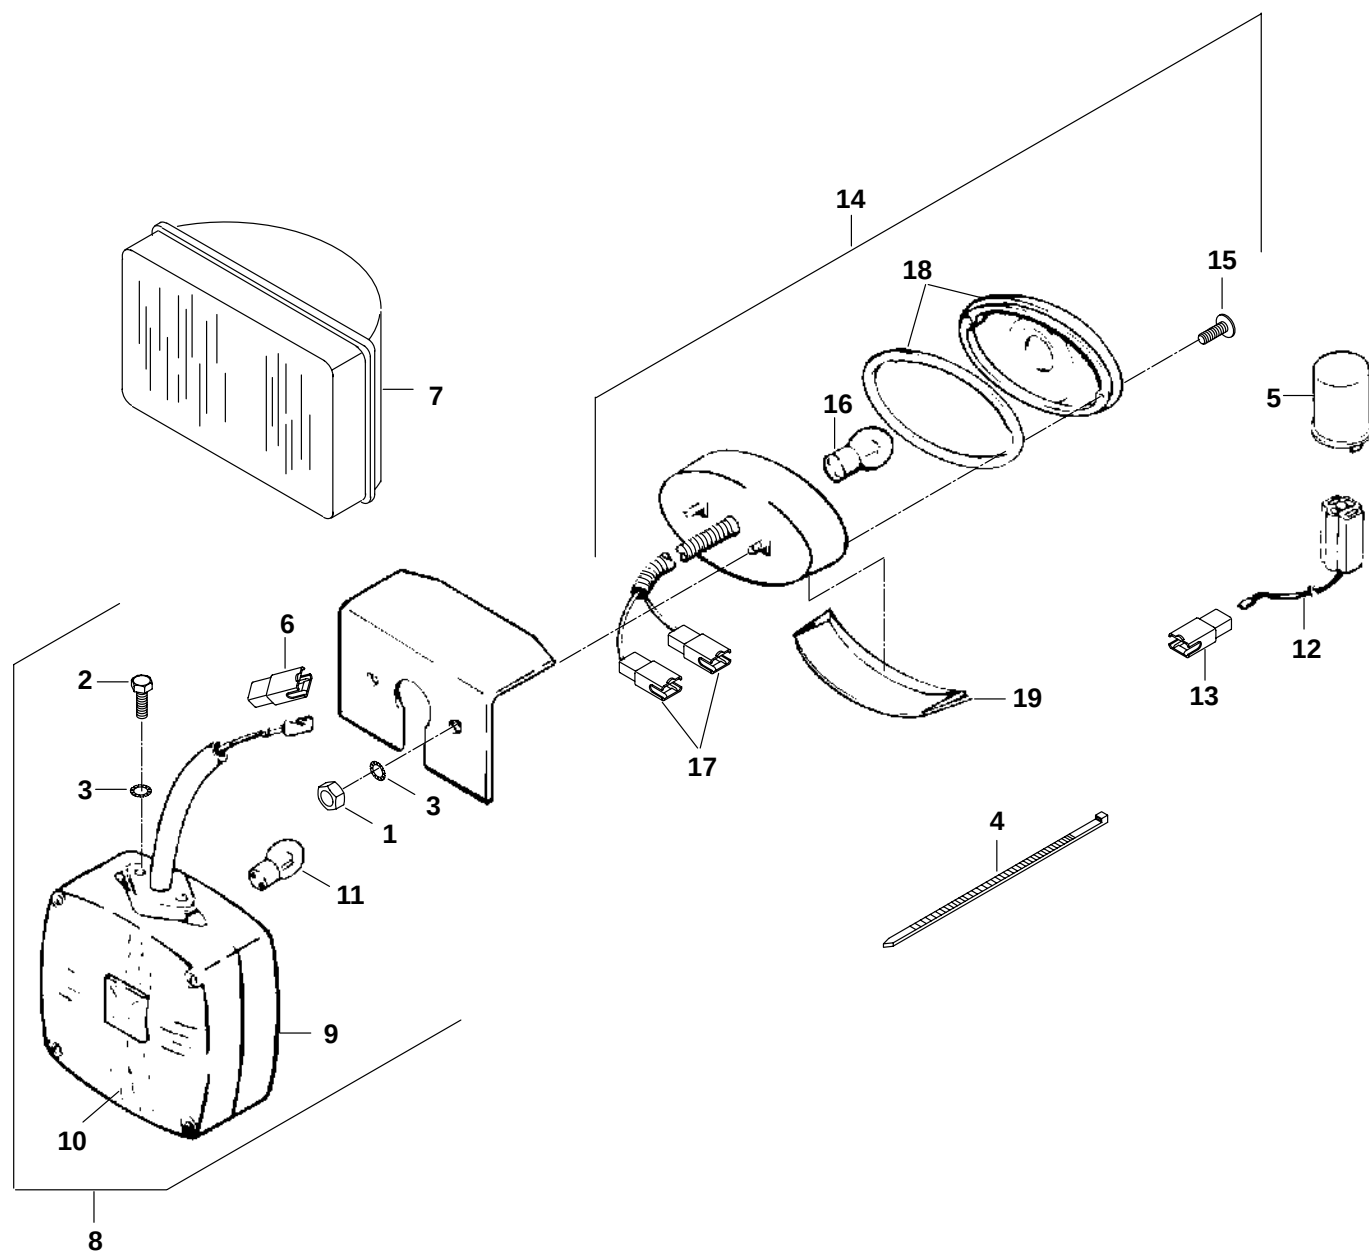


Ref. No.	Part No.	Description	No. Req'd	Notes
1	306375	Nut, 1/4-20	2	
2	306419	Screw, 1/4-20 x 1/2"	2	
3	306488	Lockwasher, 1/4"	4	
4	320107	Tie, cable, 7 1/2" (191 mm)	2	
5	2700875	Flasher, turn signal	1	
6	826726	Connector, male, 1-contact	2	
7	837303	Headlight, rectangle	2	
8	885964	Lamp, turn signal	1	
9	825850	•Lens, black	1	
10	825851	•Lens, amber	1	
11	837670	•Bulb, #1156	1	
12	885965	Wire, flasher, turn signal	1	
13	826726	•Connector, male, 1-contact	2	
14	886148	Light, stop and tail	1	
15	312288	•Screw, #6-32 x 5/8"	2	
16	822049	•Bulb, #1157	1	
17	826726	•Connector, male, 1-contact	1	
18	829099	•Kit, lens and gasket	1	
19	829100	•Lens	1	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.51 ROTATING LIGHT


(Standard on New York City Police – Modification 53749)

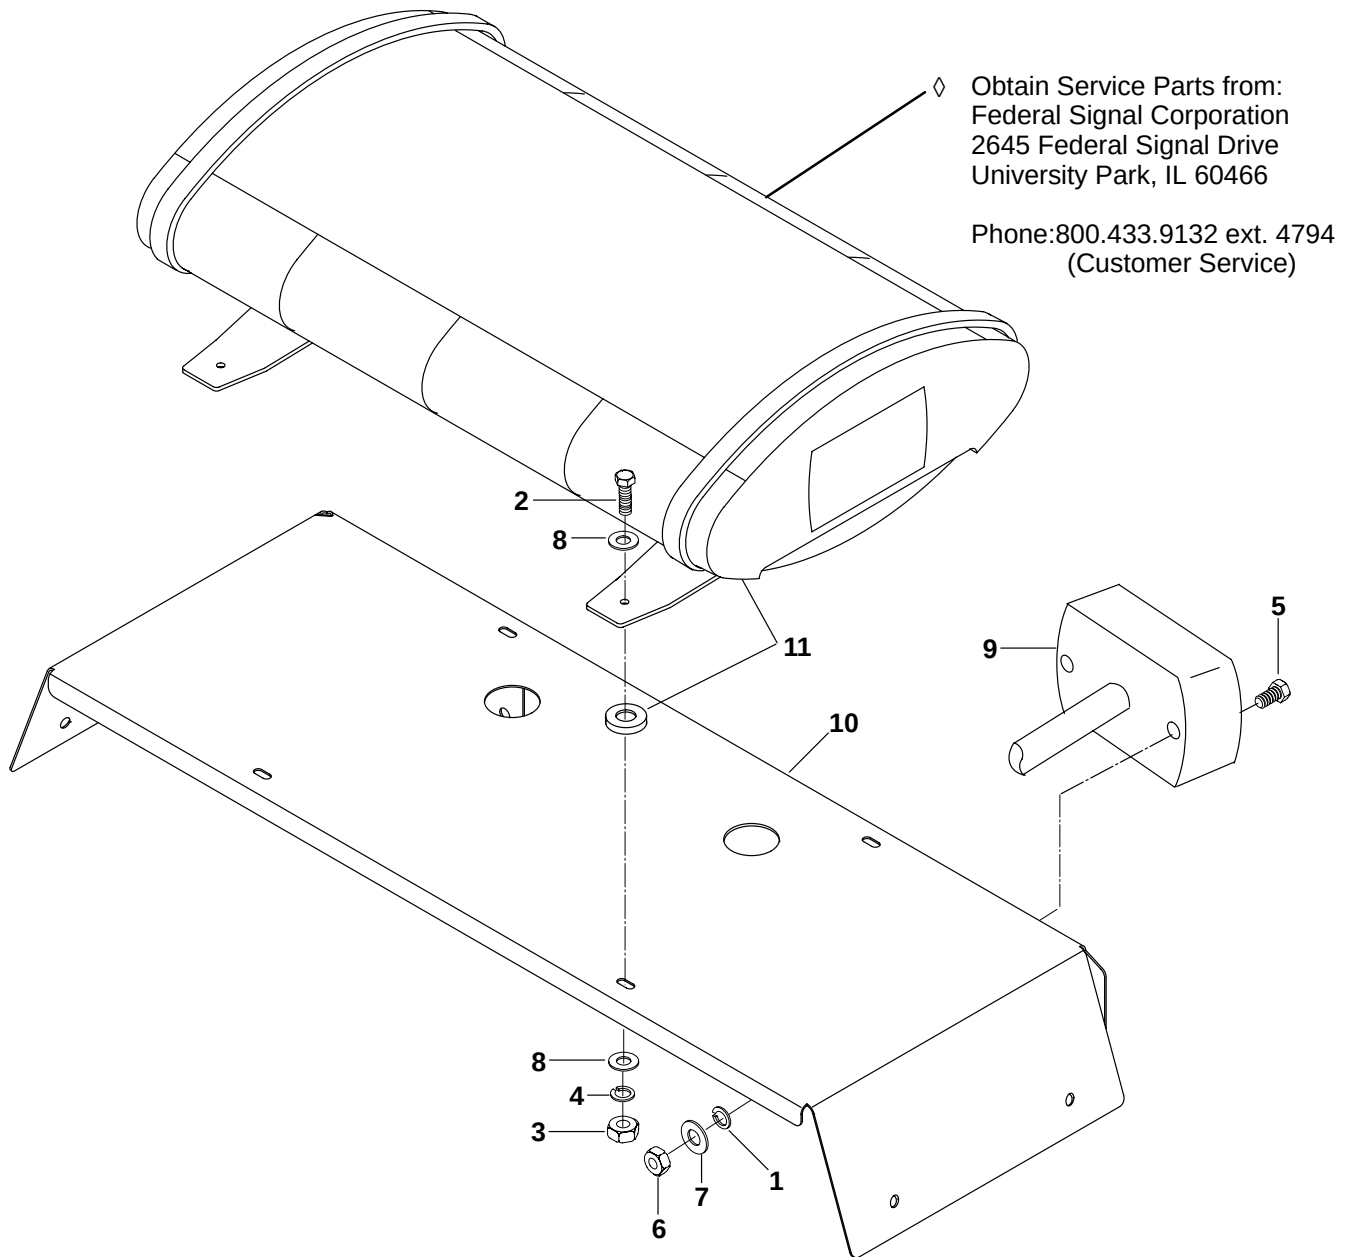

Ref. No.	Part No.	Description	No. Req'd	Notes
1	891649	Light, rotating	1	
2	120052	•Lockwasher, #10	4	
3	302288	•Screw, 1/4–20 x 1"	4	
4	306375	•Nut, 1/4–20	4	
5	306396	•Lockwasher, 1/4"	4	
6	306527	•Screw, slotted head, #10–24 x 3/4"	4	
7	306531	•Nut, machine, #10–24	4	
8	308089	•Washer, #10	4	
*	308090	•Washer, 1/4"	8	
*	825973	•Connector, 6–contact male	1	Not illustrated.
*	826005	•Connector, 2–contact male	2	Not illustrated.
*	826006	•Connector, 2–contact female	2	Not illustrated.
9	828379	•Tubing	As Req'd.	
10	838158	•Taillight, red	2	
11	838361	•Plate, light mounting	1	
*	891246	•Bar, rotating light	1	
	891563	Wire harness, rotating light	1	Not illustrated.

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.


6.52 TURN SIGNAL SWITCH

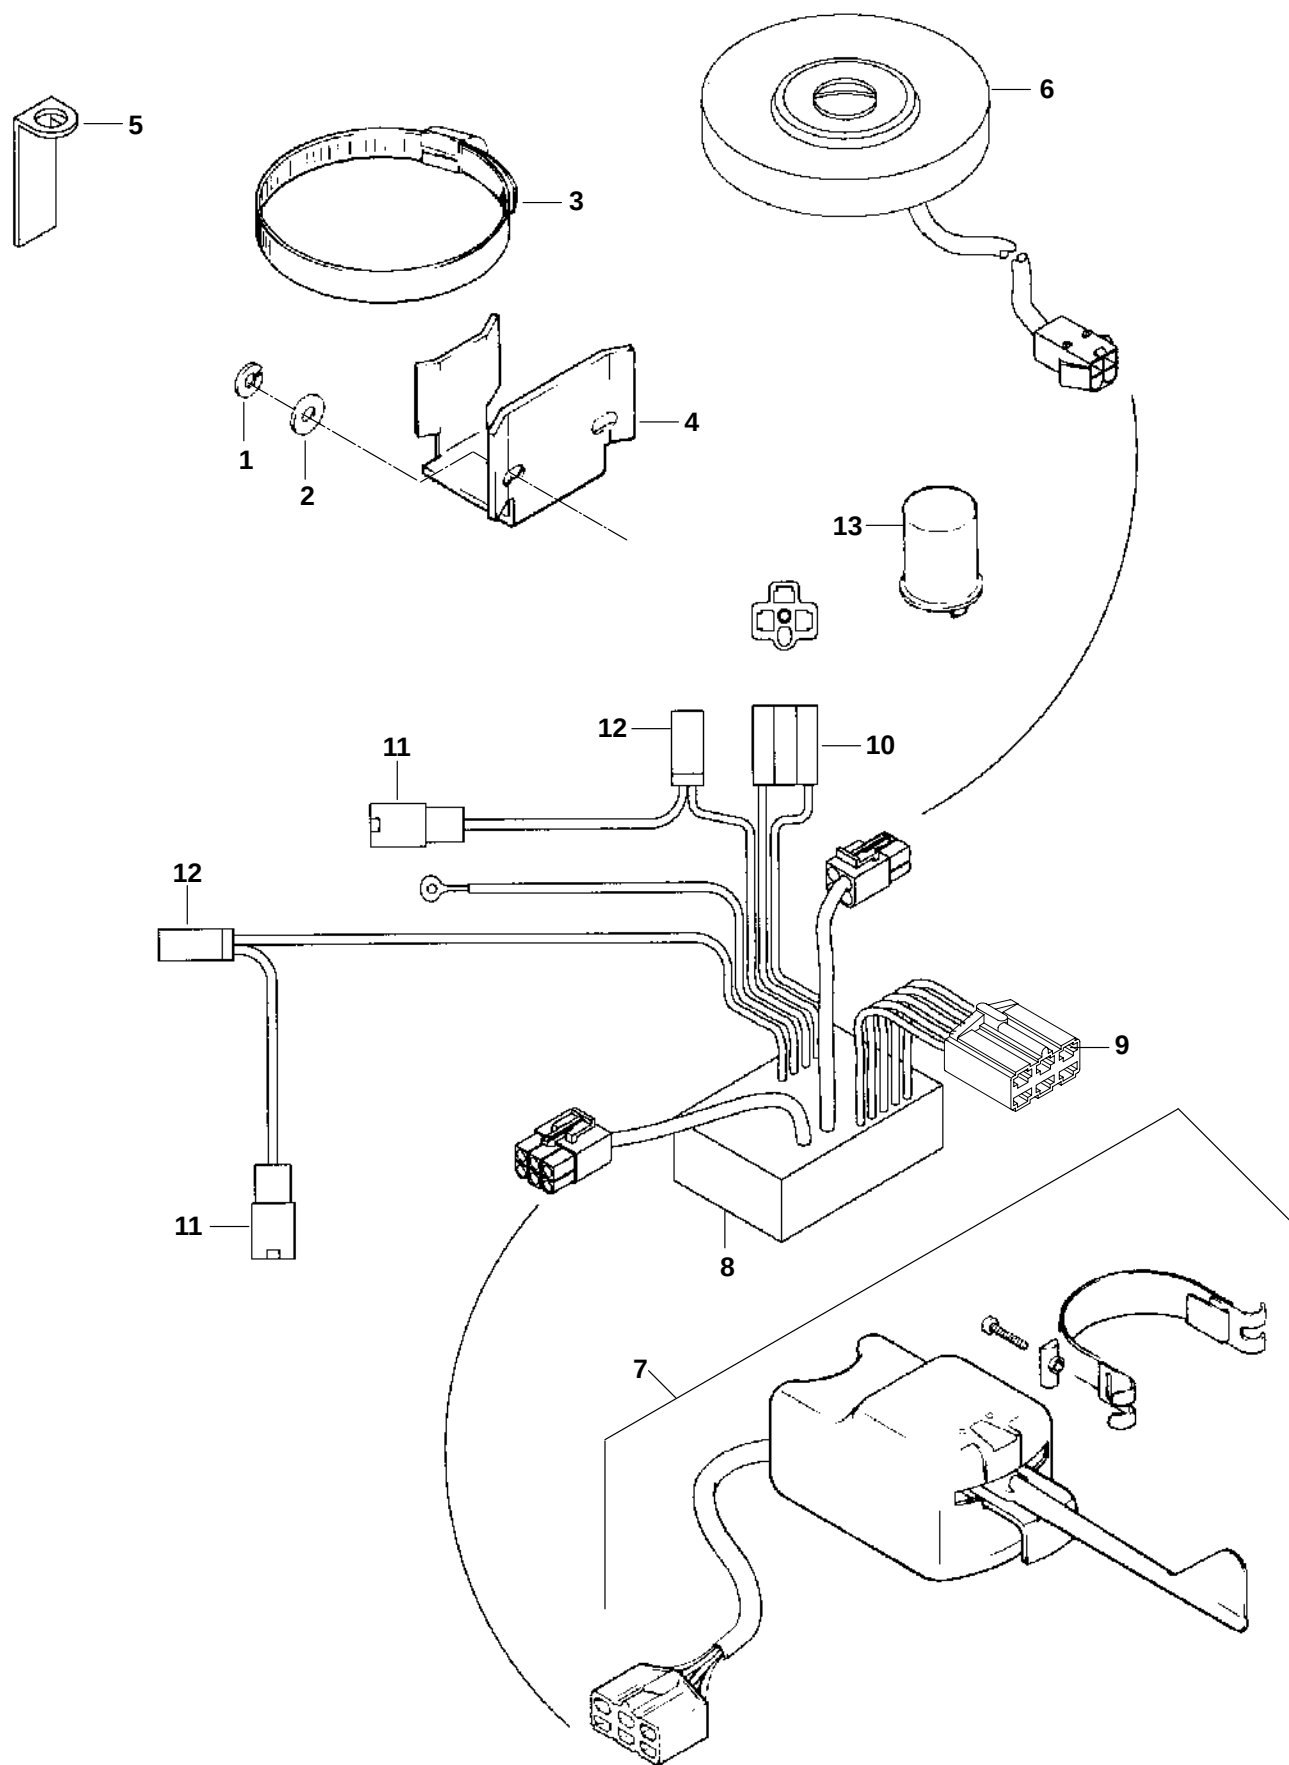

Ref. No.	Part No.	Description	No. Req'd	Notes
1	306310	Lockwasher, #8	2	Not illustrated.
2	308089	Washer, #10	2	
	819923	Collar, foam	3	
3	825358	Clamp, worm drive	2	
4	839197	Bracket, turn signal	1	
5	840187	Bracket, sensor indexing	1	
6	2700220	Sensor, steering position	1	
7	894851	Switch, turn signal	1	
8	894854	Module, control	1	
9	825877	•Connector, female, 6–contact	1	
10	825894	•Connector, female, 3–contact	1	
11	826726	•Connector, male, 1–contact	1	
12	825880	•Connector, female, 1–contact	2	
13	2700875	Flasher, turn signal	1	

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.53 FRONT SHOCK ABSORBER

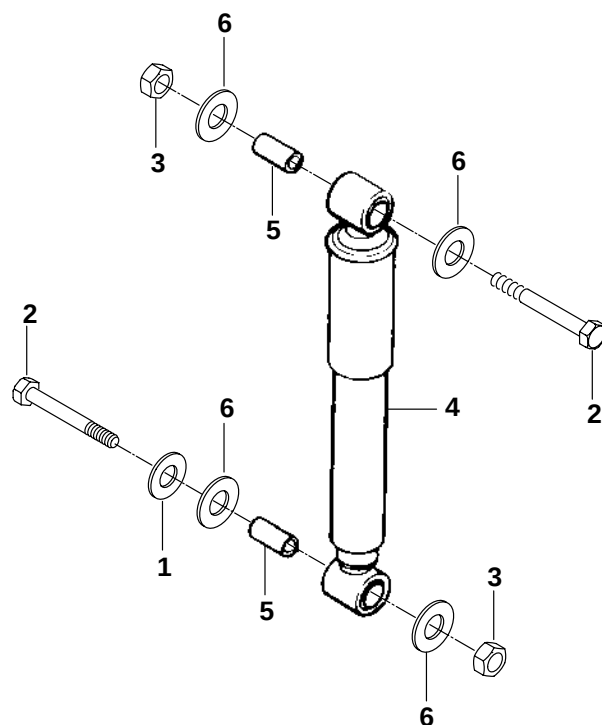

Ref. No.	Part No.	Description	No. Req'd	Notes
1	308091	Washer, 1/2"	1	
2	311396	Screw, 7/16-14 x 2 1/4"	3	
3	800294	Nut, lock, 7/16-14	4	
4	807332	Absorber, shock	1	
5	823621	Bushing	4	
6	825500	Washer, cupped	8	

WHEEL SIZE MEASUREMENT

Previously, tire and wheel size were specified the same.

Example: (a 9.50 x 8.00 tire was mounted on a 9.50 x 8.00 wheel)


Wheel size is now determined by measuring the wheel at the bead seat.

The first number is wheel diameter measured at bead seat.


The second number is wheel width measured at bead seat.

Example: (a 9.50 x 8.00 tire is mounted on a 8.00 x 7.00 wheel)

The wheel size did not change, just the method of measurement. See illustration below.

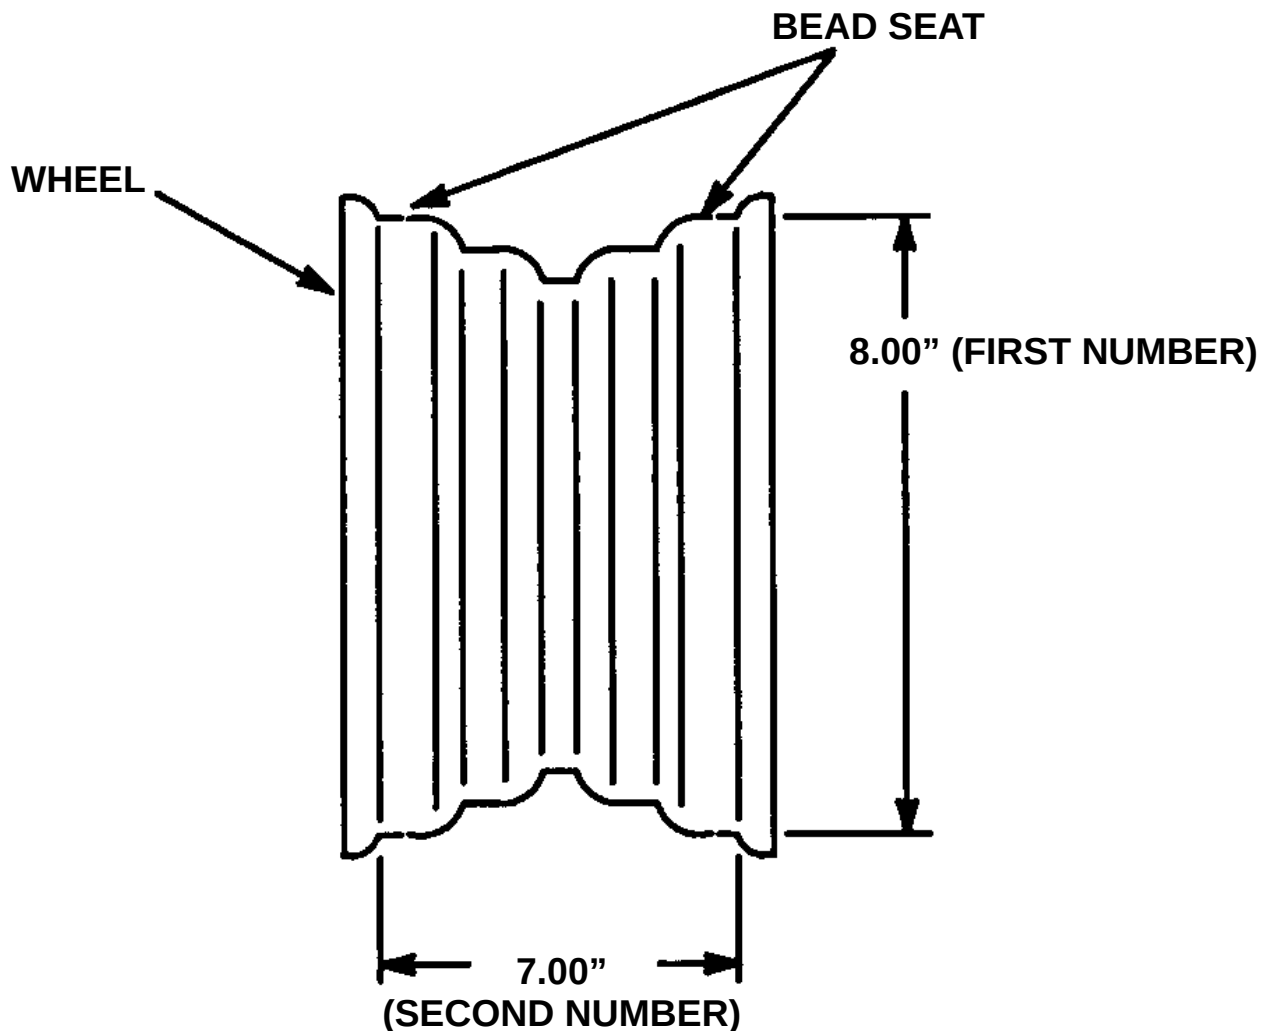


6.55 TIRES

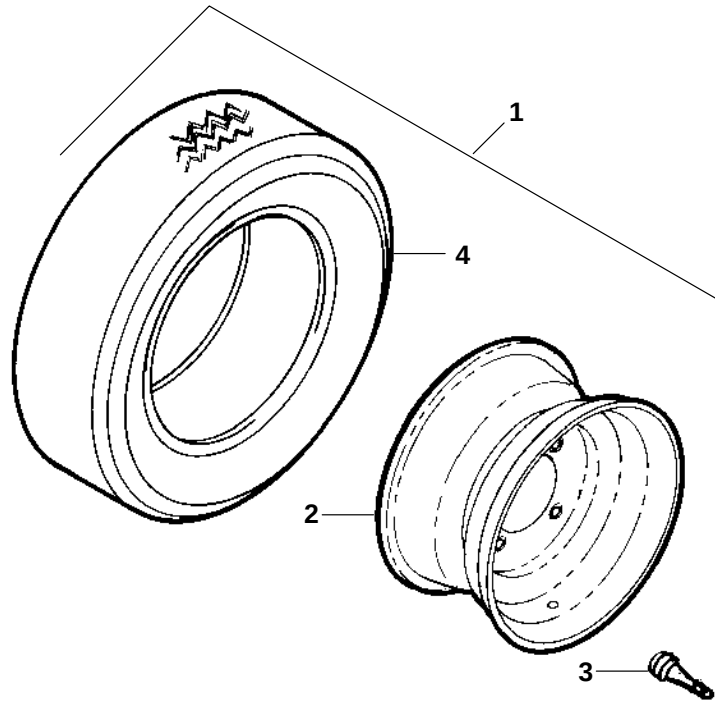

Ref. No.	Part No.	Description	No. Req'd	Notes
1	893172	Tire and wheel set, radial	1	(five on 4 1/2" bolt circle) Obtain locally.
2	835905	•Wheel, 4.00 x 12,	1	
3	886735	•Stem, valve	1	
4		•Tire, 4.80 x 12, load range C	1	

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

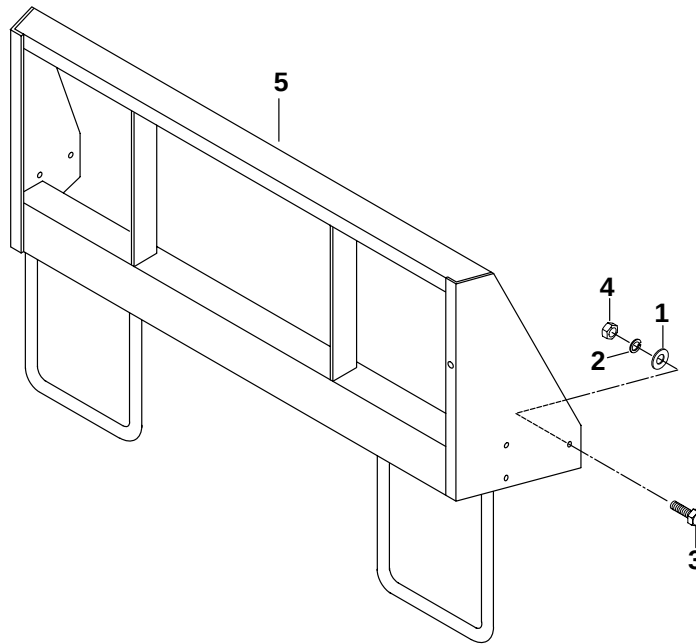

Ref. No.	Part No.	Description	No. Req'd	Notes
1	889445	Bumper set, complete	1	Not offered separately.
2	103867	•Washer, 5/16"	6	
3	306325	•Lockwasher, 5/16"	6	
4	306416	•Screw, 5/16–18 x 1"	6	
5	306932	•Nut, 5/16–18	6	
		•Bumper	1	

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.57 CAB


Touch-Up Paint

12 oz. Spray Can

..... Part No. 843311

1 Qt. Can

..... Part No. 843312

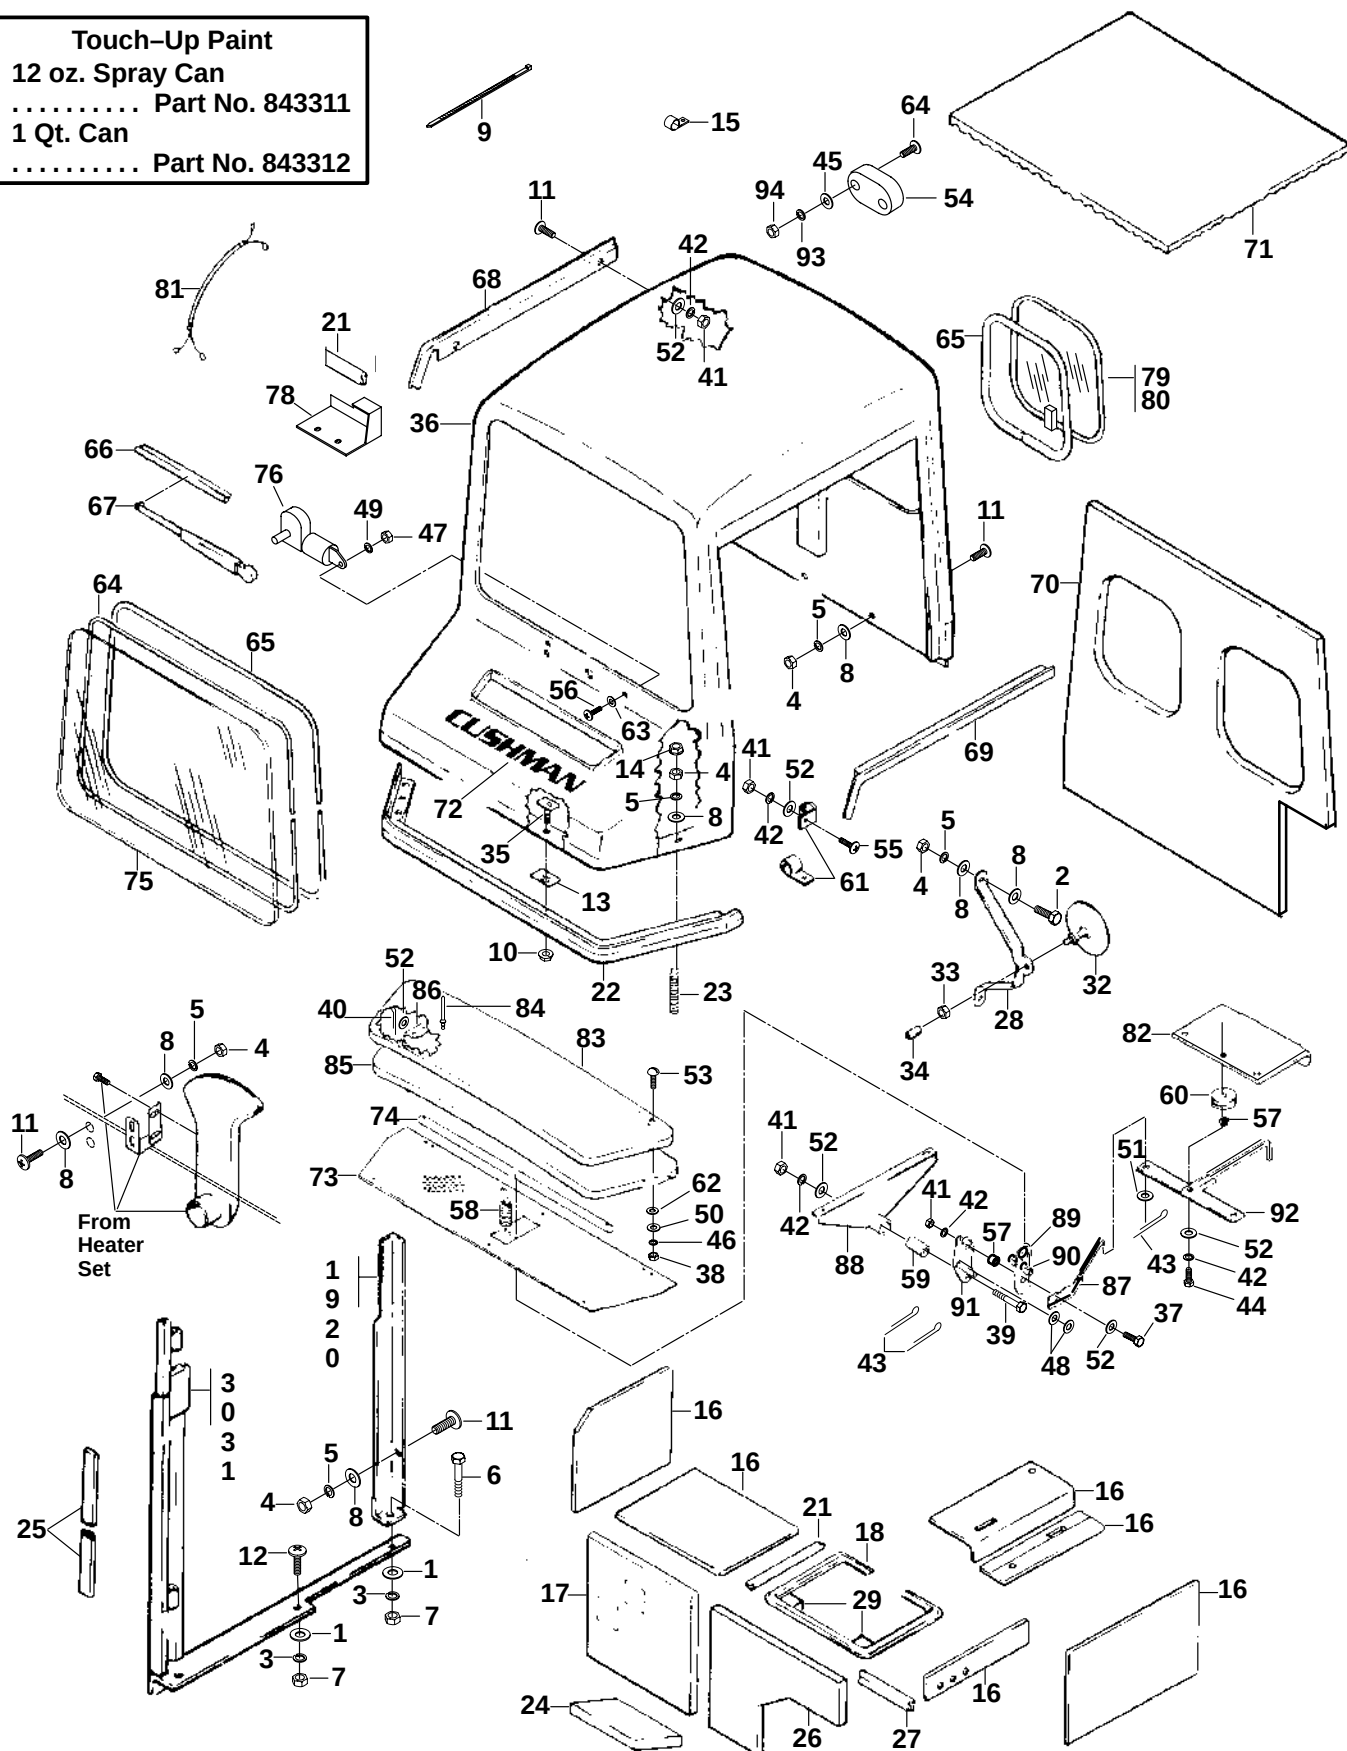

Ref. No.	Part No.	Description	No. Req'd	Notes
1	825844	Adhesive, foam	As Req'd	Not illustrated.
2	103867	Washer, 5/16"	6	
3	302288	Screw, 1/4-20 x 1"	4	
4	306325	Lockwasher, 5/16"	6	
5	306375	Nut, 1/4-20	21	
6	306396	Lockwasher, 1/4"	21	
7	306450	Screw, 5/16-18 x 3/4"	2	
8	306932	Nut, 5/16-18	6	
9	308090	Washer, 1/4"	26	
10	320107	Tie, cable, 7 1/2" (191 mm)	2	
11	548910	Nut, flangelock, 1/4-20	8	
12	800026	Screw, P.T.H., 1/4-20 x 3/4"	9	
13	800030	Screw, P.T.H., 5/16-18 x 1"	4	
14	800167	Nut, speed, 1/4-20	6	
15	800456	Nut, acorn, 1/4-20	8	
16	814924	Clamp	1	
17	825859	Foam, sound	As Req'd	
18	827769	Insulation, engine	1	
19	828388	Seal, seat	As Req'd	
20	828934	Angle, RIGHT	1	
21	828935	Angle, LEFT	1	
22	828976	Weatherstrip, 25' (7.6M)	As Req'd	Not illustrated.
23	829071	Sealer, 3oz. tube	As Req'd	
24	829536	Strip, filler	1	
25	829815	Stud, threaded	8	Not illustrated.
26	829966	Pad, foam	1	
27	830355	Seal, door	As Req'd	
28	830902	Decal, instruction	1	
29	830904	Insulation	1	
30	830908	Seal, 25' (7.6M)	As Req'd	
31	831582	Bracket, mirror	2	
32	833851	Seal	2	
33	885911	Support, pivot, LEFT	1	
34	885912	Support, pivot, RIGHT	1	
35	887246	Mirror set	2	Not illustrated.
36	306375	Nut, 1/4-20	1	
37	823201	Cap, vinyl	1	
38	888641	Stud	6	
39	2703127	Cab and vent, complete	1	
40	300646	Screw, 1/4-20 x 3/4"	1	
41	302437	Nut, #6-32	8	
42	303459	Screw, 1/4-20 x 1 1/2"	1	
43	303916	Lockwasher, #10	1	
44	306328	Pin, cotter, 3/32" x 3/4"	2	
45	306375	Nut, 1/4-20	10	Not illustrated.
46	306396	Lockwasher, 1/4"	13	
47	306463	Pin, cotter, 1/16" x 1/2"	3	
48	306487	Screw, 1/4-20 x 5/8"	1	
	894109	Harness, 2-speed wiper switch	1	
	308089	Washer, #10	2	
	306506	Lockwasher, spring, #6	8	
	306531	Nut, machine, #10-24	1	
	306982	Washer, 7/16"	2	

6.57 CAB


Touch-Up Paint

12 oz. Spray Can

..... Part No. 843311


1 Qt. Can

..... Part No. 843312

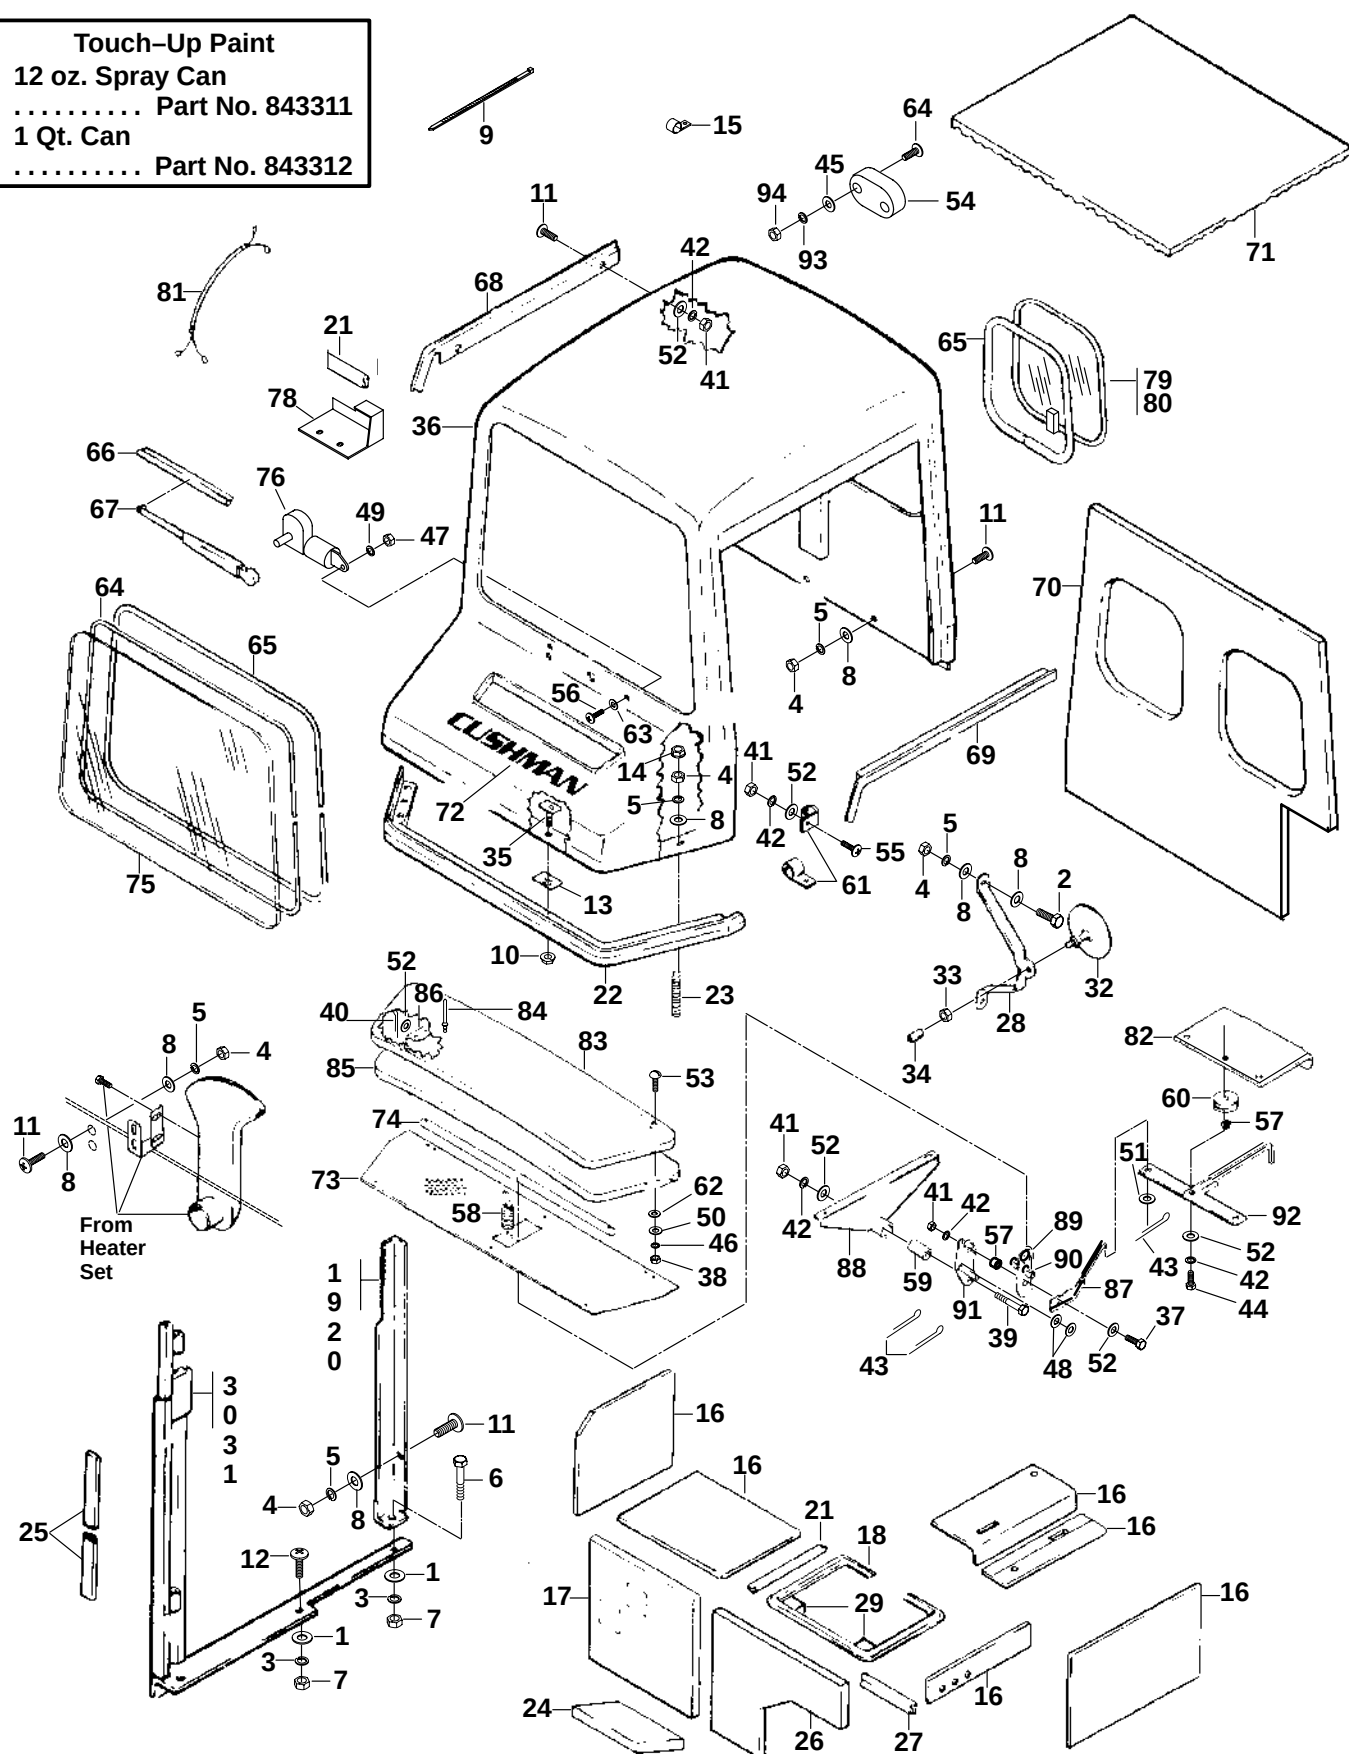

Ref. No.	Part No.	Description	No. Req'd	Notes
49	306998	Lockwasher, #10	1	Not illustrated. Not illustrated. NYC police mod.
50	308087	Washer, #6	8	
51	308088	Washer, #8	1	
52	308090	Washer, 1/4"	13	
53	316056	Screw, #6-32 x 3/4"	8	
54	894211	Taillight	2	
55	800026	Screw, P.T.H., 1/4-20 x 3/4"	10	
56	800296	Screw, P.T.H., #10-24 x 3/4"	1	
57	805245	Bushing, steel	2	
58	805451	Spring, extension	1	
59	810379	Bushing	1	
60	810446	Grommet	1	
61	814924	Clamp	2	
62	821068	O-ring	4	
63	821427	Washer, sealing	5	
	826726	Connector, single contact	1	
	891649	Light, rotating	1	
64	306527	Screw, #10-24 x 3/4"	2	
65	828384	Seal, window, 50' (15.2M)	As Req'd	
66	826037	Blade, wiper	1	
67	828682	Arm, wiper	1	
68	828736	Trough, drip, RIGHT	1	
69	828972	Trough, drip, LEFT	1	
70	842647	Pad, cab back	1	
71	829735	Foam, sound, roof	1	
72	832115	Decal, CUSHMAN	1	
73	833971	Screen, vent opening	1	
74	834077	Member	1	
75	825642	Windshield	1	
76	894108	Motor, 2-speed wiper	1	
77	828668	Window, rear	2	
78	843120	Bracket, wiper switch	1	
79	894835	Window, pop-out, RIGHT	1	
80	894836	Window, pop-out, LEFT	1	
81	886448	Wire, wiper	1	
82	888684	Pivot	1	
83	888815	Cover, vent	1	
84	800736	Rivet, pop, 1/8"	8	
85	829717	Gasket	1	
86	833972	Bracket	2	
87	888831	Rod	1	
88	888832	Bracket	1	
89	888835	Arm	1	
90	316946	Pin, spirol, 5/16" x 7/8"	1	
91	888836	Lever	1	
92	888842	Lever	1	
	843182	Belt, seat/shoulder	1	
	894132	Switch, 2-speed wiper	1	
	894212	Harness, taillight	1	
93	120052	Lockwasher, #10	2	Not illustrated. Not illustrated. Not illustrated.
94	306531	Nut, #10-24	2	


6.58 STEEL DOORS

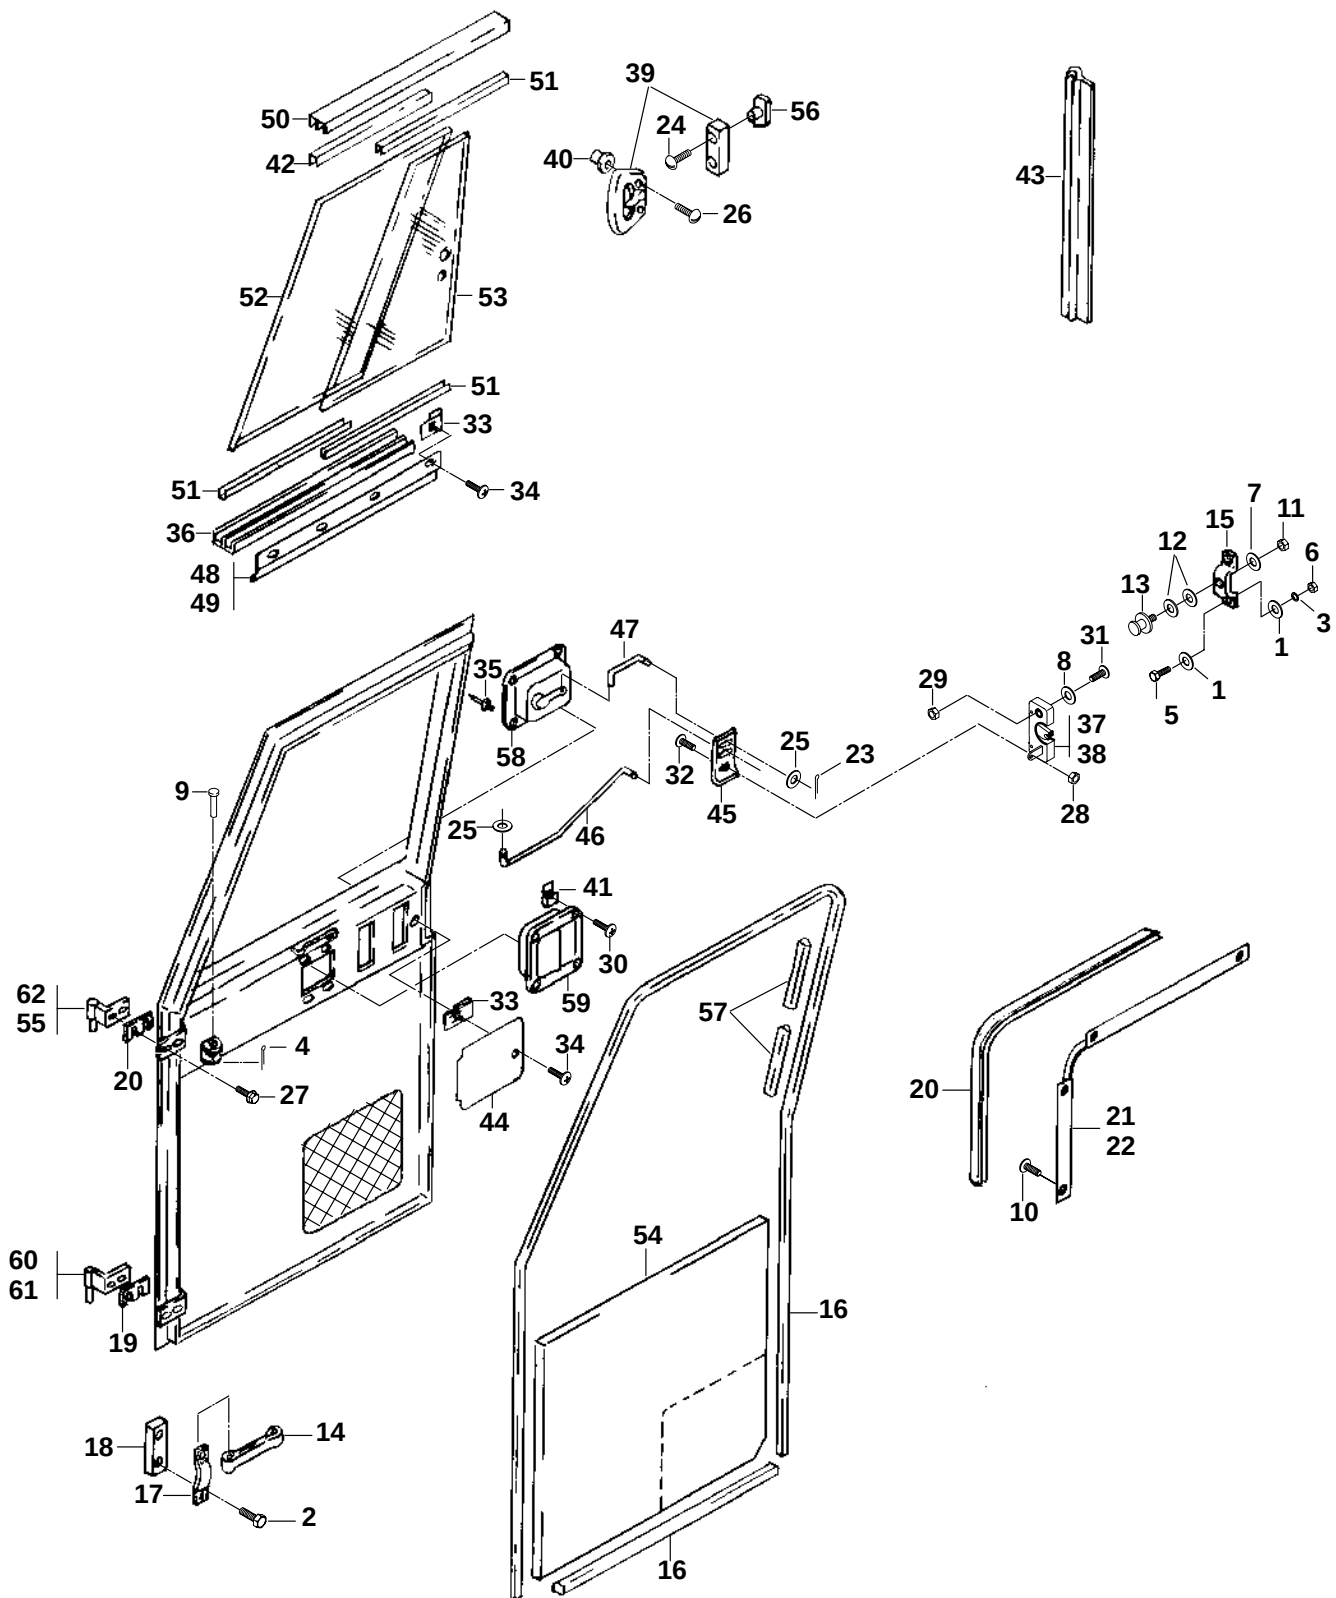

Ref. No.	Part No.	Description	No. Req'd	Notes
	888663	Steel door set, complete, RH	1	
		OR		
	2702970	Steel door set, complete, LH	1	
1	103867	•Washer, 5/16"	2	
2	112050	•Screw, tapping, 1/4–20 x 5/8"	4	
3	306325	•Lockwasher, 5/16"	2	
4	306328	•Pin, cotter, 3/32" x 3/4"	2	
5	306416	•Screw, 5/16–18 x 1"	2	
6	306932	•Nut, 5/16–18	2	
7	306982	•Washer, 7/16"	2	
8	308090	•Washer, 1/4"	2	
9	516634	•Pin, clevis, 3/8" x 1 3/4"	1	
10	800270	•Screw, tapping, #10–16 x 1/2"	4	
11	800294	•Nut, lock, 7/16–14	1	
12	825500	•Washer, cupped, 7/16"	2	
13	842462	•Striker, door	1	
14	825823	•Strap, door	1	
15	828700	•Bracket, striker mounting	1	
16	828976	•Seal, push-on, 25' (7.6M)	As Req'd	
17	829038	•Bracket, retainer, door strap	1	
18	829040	•Bracket, retainer, latch mounting	1	
19	829137	•Spacer, door pivot	As Req'd	
20	830908	•Seal, push-on, 25' (7.6M)	As Req'd	
21	833999	•Angle, seal mounting, door, RIGHT	1	
22	2702589.7	•Angle, seal mounting door, LEFT	1	
23	306463	••Pin, cotter, 1/16" x 1/2"	4	
24	306532	••Screw, #10–24 x 5/8"	2	
25	308089	••Washer, #10	4	
26	312288	••Screw, pan head, #6–32	2	
27	548971	••Screw, flangelock, 5/16–18 x 5/8"	4	
28	800053	••Nut, lock, #10–24	1	
29	800059	••Nut, lock, 1/4–20	4	
30	800135	••Screw, tapping, #8 x 1/2"	4	
31	800263	••Screw, P.T.H., 1/4–20 x 1 1/4"	4	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.58 STEEL DOORS

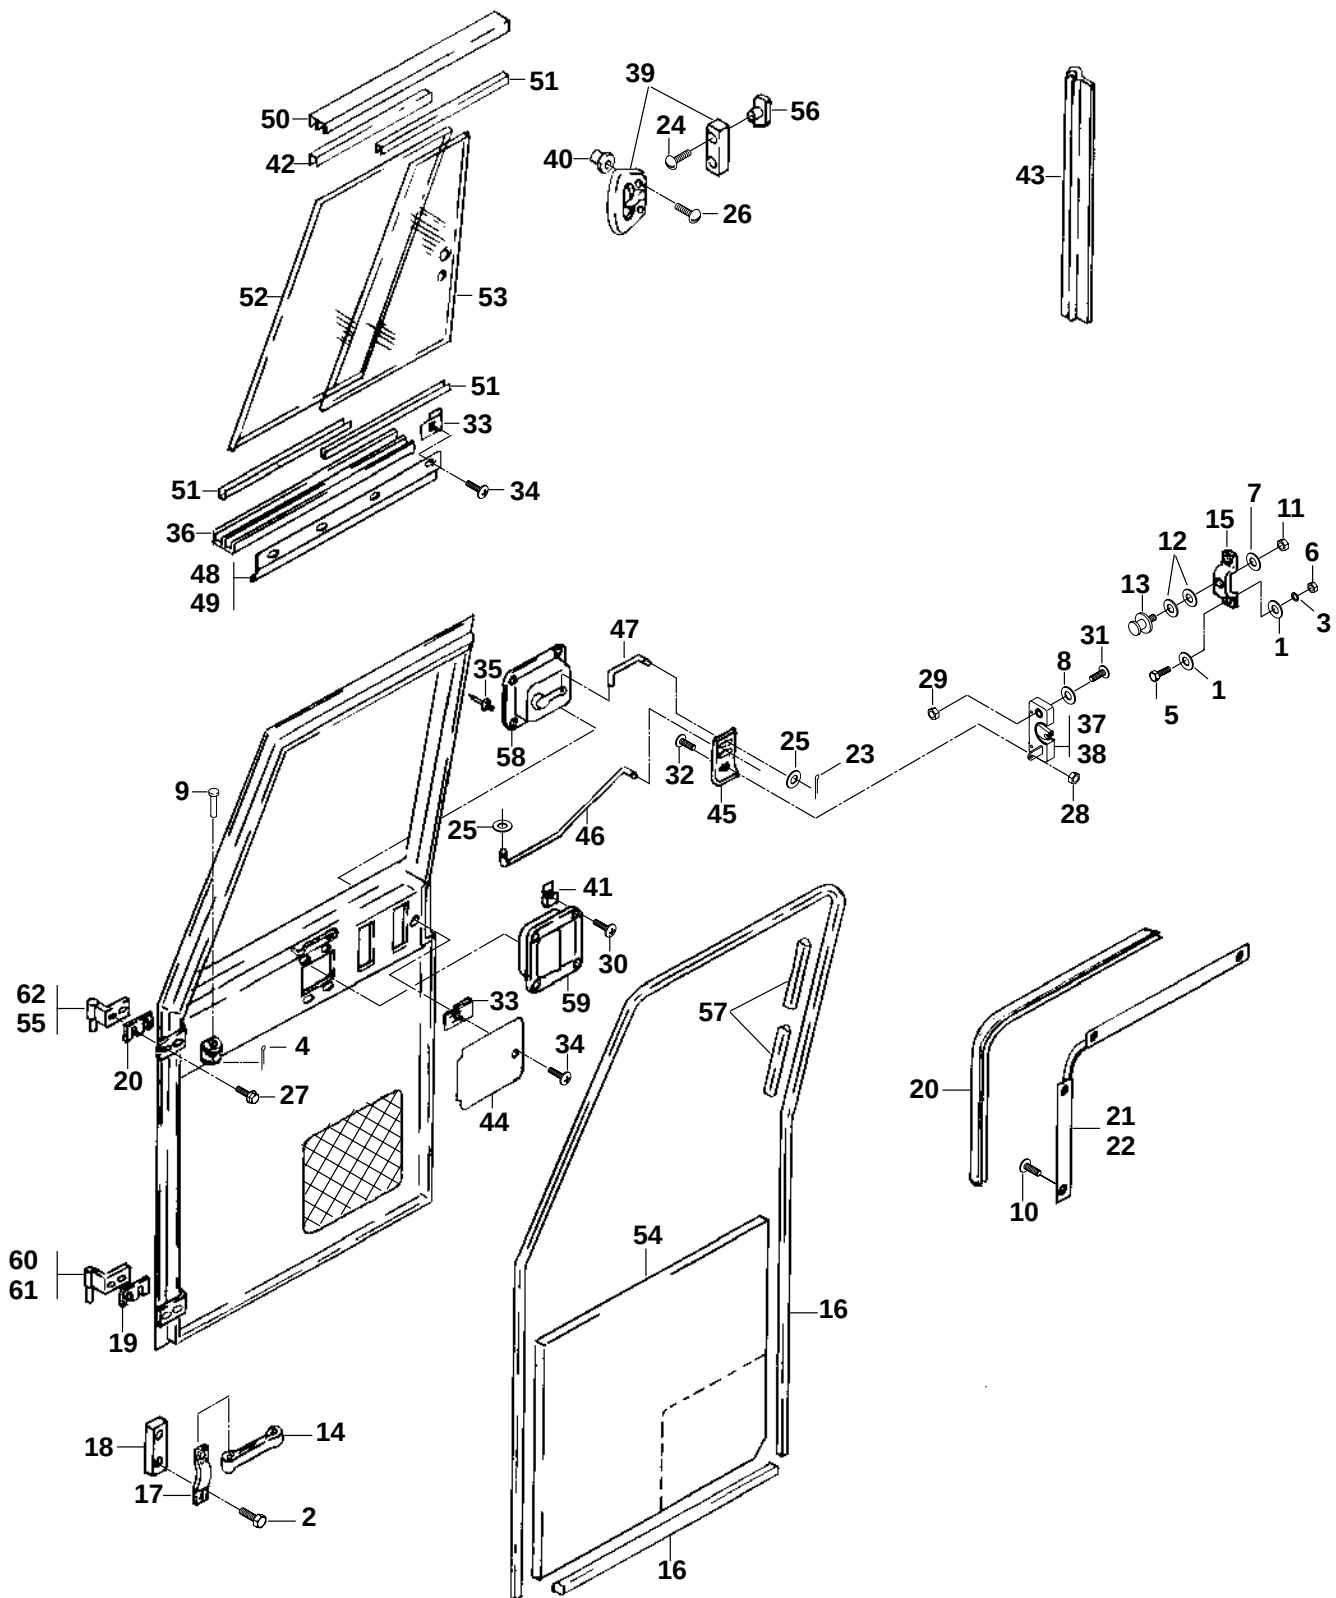

Ref. No.	Part No.	Description	No. Req'd	Notes
32	800306	••Screw, #10–24 x 1/2"	1	Not illustrated.
33	800339	••Nut, speed, #10	5	
34	800344	••Screw, P.T.H., #10–24 x 1/2"	5	
35	800631	••Rivet, 5/32"	4	
36	823418	••Guide, lower	1	
37	842463	••Latch, door, left	1	
38	842464	••Latch, door, right	1	
39	825819	••Latch, window	1	
40	825826	••Nut, latch mounting	2	
41	825839	••Nut, speed, #8	4	
42	825840	••Molding, window	1	
43	825924	••Seal, push-on, 22 1/2" (57cm)	1	
44	828694	••Cover, latch	1	
45	828697	••Arm, latch control	1	
46	828698	••Rod, latch control (inside)	1	
47	828699	••Rod, latch control (outside)	1	
48	828718	••Retainer, window, left	1	
49	828719	••Retainer, window, right	1	
50	828731	••Guide, window, upper	1	
51	828733	••Molding, window	3	
52	828734	••Window, stationary, front	1	
53	828735	••Window, movable, rear	1	
54	828834	••Foam, door	1	
55	886165	••Bracket, upper door pivot, right	1	
56	830209	••Nut, tee, #10–24	2	
	831004	••Weatherstrip, 25' (7.6M)	As Req'd	
57	884654	••Weatherstrip	As Req'd	
58	885927	••Handle, paddle, locking	1	
59	885928	••Handle, paddle, plain	1	
60	886162	••Bracket, lower door pivot, left	1	
61	886163	••Bracket, lower door pivot, right	1	
62	886164	••Bracket, upper door pivot, left	1	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

INDEX

	Page		Page
G		Bumper (Front)	125
General Information	Inside Front Cover	Cab	126
I		Cooling System	106
Identification		Decals	114
Engine Serial Number	3	Differential	102
Model Number	3	Doors (Steel)	130
Serial Number	3	Electrical Components	
Vehicle	3	Front	110
M		Main	112
Maintenance	6	Engine	
Air Cleaner	12	Air Filter	78
Checking Element	12	Camshaft	26
Installing Element	12	Crankshaft	24
Servicing Element	12	Cylinder Block	22
Automatic Transmission	13	Cylinder Head	20
Battery	10	Driveshaft	40
Jump Starting with Booster Battery	10	Exhaust Manifold	33
Bulbs, Fuses & Flasher	8	Gaskets	18
Changing the Front Wheel	14	Hoses	78
Changing the Rear Wheel	14	Intake Manifold	30
Differential	13	Oil Fill	80
Engine	8	Oil Filter	80
Access	9	Oil Pump	34
Cooling System	10	Pistons	24
Draining the Cooling System	11	PVC Valve	32
Filling the Cooling System	11	Starter	38
Oil Level	9	Thermostat	36
Extended Storage	15	Throttle Body	30
Fuses	8	Timing Belt & Cover	28
Guide	6	Torque Converter	40
Jacks, Jacking Locations	14	Water Pump & Outlet	36
Lubricating Brake Pedal Bushings	12	Engine Cover	62
Lubrication Chart	7	Exhaust System	100
Master Cylinder	14	Floormat, Insulation, Weatherstrip & Moldings ...	64
Tire Replacement	15	Frame	
P		Main	56
Parts		Platform	58
Alternator	76	Front Fork	70
Axle & Hub, Front	84	Fuel System	98
Body, Front	60	Governor	76
Brake, Parking	92	Headlights	116
Brake Rod	90	Heater/Defroster	108
Brakes		Horn	72
Front	84	Hub & Wheel Cylinder, Rear	86
Hydraulic	88	Master Cylinder	90
Rear	86	Rear Box & Sides (Side Opening)	66
		Rear Spring	68
		Rotating Light	118
		Seat & Backrest	96
		Seat Belt	94
		Shock Absorber (Front)	122
		Steering Gear	72
		Steering Wheel	72

INDEX

	Page
Taillights	116
Throttle Pedal	74
Tires	124
Transmission	42
Brake Band	52
Clutch	48
Dipstick	44
Gaskets	44
Input Shaft	48
Oil Pump	46
Output Shaft	50
Pan	44
Planetary Gears	50
Shift Shaft	52
Shift Switch	46
Shifter & Shifter Cable	82
Solenoids	46
Tubes	46
Valve	54
Turn Signal Switch	120
Turn Signals	116
Wheel Measurement	123

Page

S

Specifications

Battery	4
Brake Fluid	4
Capacities	4
Dimensions	4
Engine	5
Engine Oil	4
Fuel	4
Gear Ratios	5
Lubrication	4
Vehicle	4

T

Torque Chart	16
--------------------	----

PART NUMBER INDEX

Part No.	Page No.		
09119-10039	101	27017775	19
111836	81	2701795	19, 21
11610-60C01	81	2701796	19, 31
11640-53F20	81	2701797	19, 33
13701-53F20	79	2701798	19, 21
13780-79201	79	2701799	19, 21
14183-82050	101	2701800	19, 35
14492-82001	101	2701801	19, 37
2700031	37, 79	2701802	19, 37
2700161	99	2701803	19, 31
2700166	99	2701804	19, 31
2700178	99	2701813	21
2700220	121	2701814	21
2700335	77	2701815	21
2700503	77	2701816	21
2700511	113	2701819	21, 23
2700615.7	59	2701820	21, 23
2700616.7	59	2701821	21
2700819.7	107	2701824	21
2700867	111	2701825	21
2700875	117, 121	2701826	21
2700904	111	2701828	21
2700910.7	75	2701830	21
2700911.7	75	2701831	21
2700918	111	2701832	21
2700938	75	2701833	21
2701002	75	2701835	21
2701043	107	2701837	23
2701045.8	101	2701838	23
2701089	101	2701849.7	111
2701105.7	113	2701869	111
2701129	77	2701870	81
2701236	77	2701897	99
2701326	75	2701898	99
2701329	115	2701899	99
2701409.7	111	2701900	23
2701419.7	57	2701902	23
2701434.7	77	2701904	23
2701442	79	2701905	23
2701461.7	41	2701906	23
2701463	41	2701911	23
2701466	103	2701913	23
2701510	77	2701915	23
2701511	77	2701916	23
2701513	37, 79	2701918	23
2701514.7	81	2701919	23
2701516	79	2701920	23
2701517	77	2701922	25
27015212.7	79	2701923	25
2701636	81	2701924	25
2701637	37	2701925	25
2701638	37	2701926	25
2701640	81	2701927	25
2701652	79	2701928	25
2701750	83	2701929	25
2701757	37	2701930	25
2701776	19, 21	2701932	25
		2701933	25
		2701934	25
		2701935	25
		2701936	25
		2701937	25
		2701938	25
		2701939	25
		2701940	25
		2701942	25
		2701943	25
		2701945	25
		2701946	25
		2701947	27
		2701949	25, 35
		2701952	25
		2701954	25
		2701955	27
		2701956	27
		2701957	27
		2701958	27
		2701959	27
		2701960	27
		2701966	27
		2701967	27
		2701969	27
		2701970	27
		2701971	27
		2701972	27
		2701973	29
		2701974	29
		2701975	29
		2701976	29
		2701979	29
		2701980	29
		2701981	29
		2701982	29
		2701983	29
		2701984	29
		2701985	29
		2701986	29
		2701988	29
		2701990	29
		2701995	31
		2702000	31
		2702037	79
		2702089	75
		2702136.7	113
		2702138	111
		2702168	69
		2702232.7	57
		2702236	57
		2702266	81
		2702267	81
		2702268	81
		2702277.12	59
		2702300.7	81
		2702301	79
		2702303	99
		2702374.7	101
		2702388	99
		2702429	31

Part No.	Page No.		
2702431	31	2702772	49
2702432	31	2702773	49
2702433	31	2702774	49
2702436	99	2702775	49
2702467	31	2702777	51
2702468	31	2702778	51
2702473	31	2702779	51
2702474	31	2702780	51
2702476	31	2702781	51
2702477	31	2702782	51
2702478	31	2702784	51
2702479	31	2702785	51
2702480	31	2702786	51
2702481	31	2702787	51
2702484	32	2702788	51
2702485	32	2702789	51
2702488	32	2702790	51
2702489	32	2702792	51
2702490	32	2702793	51
2702491	32	2702795	51
2702492	33	2702796	53
2702496	33	2702797	53
2702497	33	2702798	53
2702501	33	2702800	53
2702503	33	2702801	53
2702515	35	2702804	53
2702516	35	2702805	53
2702518	35	2702806	45
2702522	37	2702808	45
2702525	37	2702809	45
2702539	37	2702810	45
2702542	37	2702811	45
2702543	37	2702813	45
2702594	115	2702814	45
2702662	43	2702816	45
2702683	43	2702817	45
2702690	43	2702821	55
2702697	41	2702822	47
2702698	41	2702823	47
2702699	41	2702824	47
2702700	41	2702825	55
2702701	41	2702828	55
2702748	45	2702829	55
2702749	45	2702830	55
2702750	43	2702831	55
2702751	43	2702832	55
2702752	43	2702833	55
2702754	43	2702841	55
2702759	43	2702842	55
2702760	43	2702843	47
2702761	43	2702845	47
2702763	43	2702861	115
2702765	47	2702881	47
2702766	47	2702882	47
2702768	47	2702885	47
2702769	49	2702896	39
2702770	49	2702897	39
2702771	49	2702898	39
		2702899	39
		2702900	39
		2702903	39
		2702904	39
		2702906	39
		2702907	39
		2702909	39
		2702970	131
		2703090	81
		2703091	81
		2703127	127
		320122	103
		385174	85
		386767	105
		4109361	89
		4109420	89
		4109580	81
		521679	75
		548482	41
		800128	71
		800130	71
		800227	89, 91
		800356	103
		800789	107
		805189	71
		805196	69
		805245	129
		805320	103
		805321	103
		805322	103
		805451	129
		805875	103
		807332	122
		807442	71
		807630	85
		808076	71
		808088	85
		808303	103
		808969	71
		809018	87
		809092	113
		809229	85
		809231	107
		809255	71, 73
		809257	87
		809268	85
		809423	89, 91
		810149	67, 71
		810152	57
		810379	129
		810437	93
		810441	59, 67
		810446	129
		811650	85, 87
		811928	91
		812098	71
		812167	71
		812208	59, 67, 97
		812218	69, 105
		812313	59
		812335	103
		812445	89

Part No.	Page No.				
813850	69	823201	127	828379	119
814204	105	823549	79	828384	129
814226	103	823621	122	828388	127
814465	103	823752	91	828577	57
814466	103	824060	85	828613	111
814467	103	824219	89	828668	129
814468	103	824484	67	828682	129
814469	103	824576	67	828694	133
814470	103	824731	89	828697	133
814471	103	824833	85, 87	828698	133
814474	103	824925	87	828699	133
814475	103	825126	93	828700	131
814476	103	825358	79, 109, 111, 121	828718	133
814477	103	825403	71	828719	133
814481	105	825404	85	828731	133
814482	105	825405	85	828733	65, 133
814483	105	825477	89	828734	133
814484	105	825502	115	828735	133
814488	103	825602	97	828736	129
814585	67	825603	97	828834	65, 133
814924	127, 129	825622	115	828934	127
815403	103	825624, 37, 47, 79, 81, 99, 107		828935	127
815421	89	825629	115	828946	69
815490	103	825642	129	828972	129
815794	105	825679	71	828976	65, 67, 127, 131
815847	59	825681	71	828998	57
816045	103	825682	71	829038	131
816447	73	825779	107, 109	829040	131
816455	73	825819	133	829049	89
816456	73	825823	131	829071	127
816515	103	825840	65, 133	829099	117
816653	73	825842	65	829100	117
816654	73	825844	127	829101	61
816659	71, 73	825850	117	829137	131
816660	73	825851	117	829155	91
816674	73	825859	127	829158	91
816675	73	825877	121	829285	71
816697	71	825880	121	829536	127
816823	105	825893	111	829558	91
816824	105	825894	121	829717	129
816825	105	825924	65, 133	829735	65, 129
816991	115	825933	57	829754	113
817019	83	825967	97	829787	37
817119	75	825973	119	829880	63
817307	89	825994	109	829954	99
817309	111	826005	119	829966	127
818226	103	826006	119	830135	111
819923	121	826037	129	830140	77
820008	89	826284	41	830165	75
820889	79, 107	826285	41	830167	73
821068	129	826294	59	830168	73
821153	87	826491	73	830175	81
821606	57	826590	47, 79, 99	830176	81
821734	69	826726	111, 117, 121, 129	830355	61, 65, 109, 127
821893	65, 109	827018	103	830369	73
822049	117	827486	105	830370	73
822819	115	827769	65, 127	830557	105
823089	91	828072	89	830658	63
		828231	111	830762	57
		828378	59, 63, 65, 67	830780	63

Part No.	Page No.		
830781	63	835072	85
830902	127	835213	59, 67
830904	127	835805	107
830908	61, 63, 65, 127, 131	835905	124
830920	81	836024	109
830929	81	836206	81
831004	63, 65, 67, 133	836389	57
831006	109	837298	111
831225	113	837303	61, 117
831582	127	837462	113
831603	101	837581	97
831604	101	837670	117
832033	107, 109	837690	57
832094	111	837960	67
832115	129	837961	67
832130	115	837962	67
832555	73	838053	67
832584	89	838072	67
832585	89	838095	93
832587	89	838096	93
832649	113	838109	93
832804	109, 115	838158	119
833512	107	838223	67
833607	115	838340	107
833745	65	838354	111
833846	109	838355	85, 87
833850	85, 87	838361	119
833851	65, 109, 127	838402	87
833857	109	838403	87
833858	109	838404	87
833862	109	838409	69
833879	87	838477	57
833891	87	838688	57
833912	85, 87	838706	57, 65
833916	85, 87	839168	111
833918	85, 87	839197	111, 121
833939	109	839229	83
833940	109	839905	57, 63
833943	61	840230	57
833949	109	840233	57
833958	109	840394	115
833971	129	840395	115
833972	129	840403	59
833974	109	840404	59
833984	109	840436	67
833985	109	840438	67
833986	109	841982	101
833993	85, 87	842462	131
833999	131	842463	133
834007	109	842464	133
834036	99	842647	129
834077	129	842740	47, 77
834099	105	842767	113
834161	87, 89	842782	107
834582	99	842863	61
834888	89	842868	57
834979	69, 105	842884	101
835062	77	842918	109
		842919	109
		842944	81, 107, 109
		842990	115
		843013	77
		843014	75
		843025	87
		843026	85, 87
		843081	95
		843120	129
		843167	111
		843169	67
		843173	95
		843182	95, 129
		843200	109
		843206	59
		843207	63
		843208	61
		843209	61
		843210	61
		843211	61
		843212	61
		843213	67
		843217	67
		843218	57
		843219	57
		843276	67
		843306	111
		843399	81
		843420	81
		843439	115
		843441	115
		843443	115
		843474	67
		843857	37, 79
		843942	111
		844417	67
		844637.7	99
		844654.7	99
		844670	99
		844748	99
		844880	67
		845050	111
		845072.7	107
		845073.7	57, 107
		845074	107
		845075.7	107
		845082.7	95
		845218	113
		845219	113
		845224	37, 79, 81
		845345.7	77
		845365	37
		845409	37, 79
		879476	103
		879748	103
		879945	113
		879961	103
		879962	105
		883883	59
		884022	85
		884177	97
		884183	59

Part No.	Page No.		
884189	93	886999	105
884302	97	887175	101
884654	133	887187	69, 105
884750	73	887188	69, 105
884823	87	887246	127
885033	103	887443	63
885034	103	888089	113
885833	61	888090	113
885911	127	888386	63
885912	127	888451	85
885927	67, 133	888497	107
885928	133	888524	85
885947	97	888610	85
885964	111, 117	888663	131
885965	117	888684	129
886014	69	888777	87
886016	69	888793	87
886090	111	888815	129
886148	117	888831	129
886162	133	888832	129
886163	133	888835	129
886164	133	888836	129
886165	133	888842	129
886204	105	888856	109
886205	105	888861	87
886257	67	889050	107
886448	129	889051	107
886519	91	889065	105
886600	71	889159	61
886706	103	889350	85, 87
886735	124	889445	125
886874	91	889596	109
886875	89, 91	889906	85
886883	73	889924	85
		889930	85, 87
		890000	111
		890817	91
		891246	119
		891250	67
		891563	119
		891649	119, 129
		891764	71
		891765	71
		891767	71
		891795	57
		891811	87
		891812	87
		892471	85, 87
		892807	73
		893172	124
		893395	113
		893876	77
		894057	57
		894108	129
		894109	111, 127
		894132	129
		894136	97
		894211	129
		894212	129
		894511	109
		894590	107
		894631	67
		894706	77
		894708	77
		894835	129
		894836	129
		894851	111, 121
		894853	111, 121
		894854	111, 121
		894901	107
		894906	103
		895125	41